
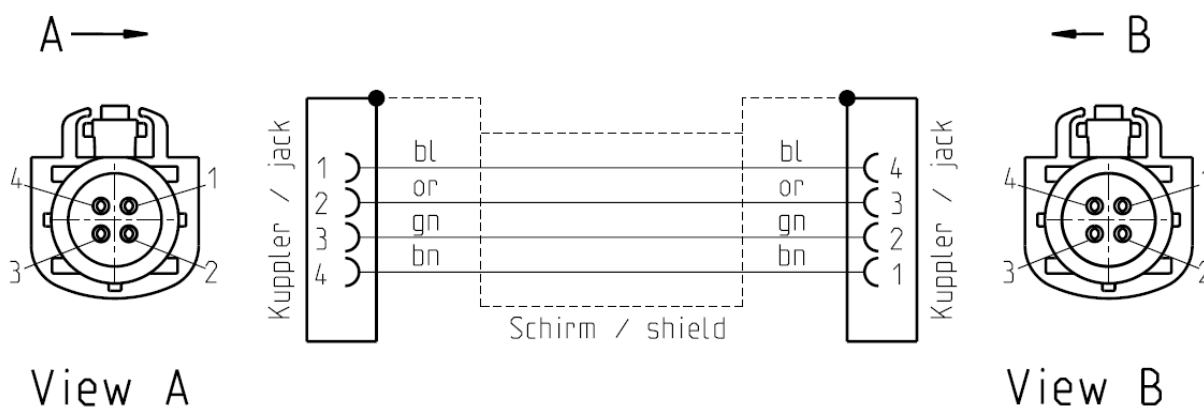


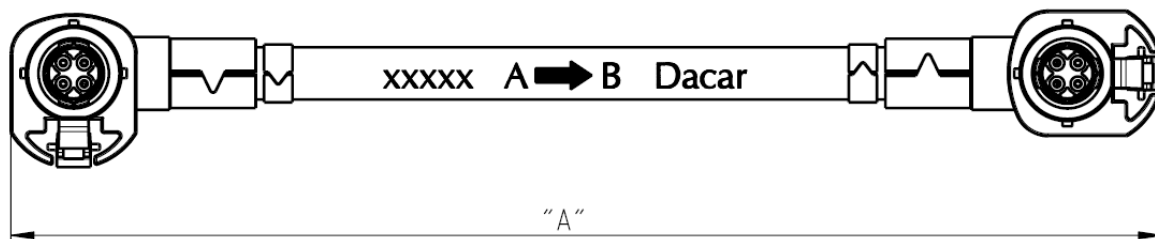


| Dimensions (mm)      |             |              |               |
|----------------------|-------------|--------------|---------------|
| Range (length A & C) | 200 to 1000 | 1001 to 5000 | 5001 to 20000 |
| Tolerance (mm)       | ± 10        | ± 15         | ± 20          |

c

## Interface

According to

RN 059-01

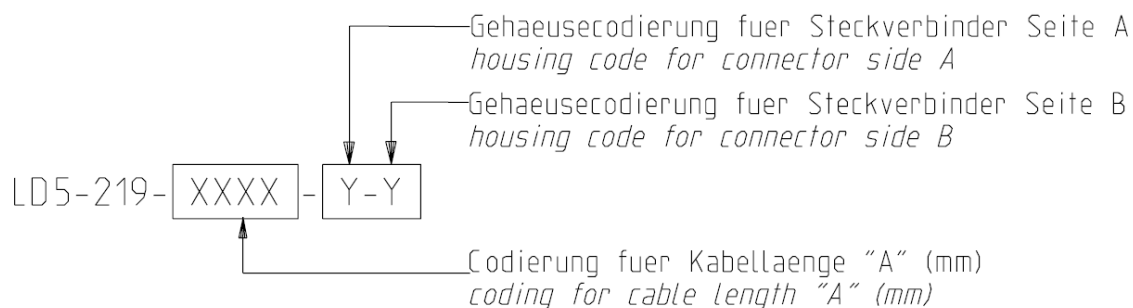

# Technical Data Sheet

# Rosenberger

HSD

CABLE ASSEMBLY

LD5-219-XXXX-Y-Y

## Change History

| Rev. | Date     | Change                                                       |
|------|----------|--------------------------------------------------------------|
| c00  | 10.10.13 | Changed the table for the range (length) A and the tolerance |
|      |          |                                                              |

While the information has been carefully compiled to the best of our knowledge, nothing is intended as representation or warranty on our part and no statement herein shall be construed as recommendation to infringe existing patents. In the effort to improve our products, we reserve the right to make changes judged to be necessary.

| Draft       | Date     | Approved       | Date     | Rev. | Engineering change number | Name        | Date     |
|-------------|----------|----------------|----------|------|---------------------------|-------------|----------|
| Manfred Ruf | 03.03.10 | Johannes Maier | 10.10.13 | c00  | 13-1144                   | R. Hochheim | 10.10.13 |

Rosenberger Hochfrequenztechnik GmbH & Co. KG  
P.O.Box 1260 D-84526 Tittmoning Germany  
[www.rosenberger.de](http://www.rosenberger.de)

Tel. : +49 8684 18-0  
Fax : +49 8684 18-499  
Email : [info@rosenberger.de](mailto:info@rosenberger.de)

Page

2 / 2