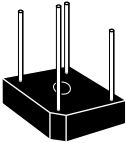



## Bridge Rectifiers, Fast Recovery (Continued)

$I_O$ (AMPS)	10		25	35
@ $T_A$ (°C)				
@ $T_C$ (°C)	100	60	60	60
$I_{FSM}$ (AMPS)	150	300	350	400
CASE	 CASE CM	 CASE FP		
$V_{RRM}$ (VOLTS)				
100	CBR10F-J010	CBR10F-010P	CBR25F-010P	CBR35F-010P
200	CBR10F-J020	CBR10F-020P	CBR25F-020P	CBR35F-020P
400	CBR10F-J040	CBR10F-040P	CBR25F-040P	CBR35F-040P
600	CBR10F-J060	CBR10F-060P	CBR25F-060P	CBR35F-060P
800	CBR10F-J080			
1000	CBR10F-J100			

$V_F$ MAX @ $I_F$	1.3V @ 5.0A	1.3V @ 5.0A	1.3V @ 12.5A	1.3V @ 17.5A
$I_R$ MAX @ $V_{RRM}$	10 $\mu$ A	10 $\mu$ A	10 $\mu$ A	10 $\mu$ A
$t_{rr}$ (100V thru 400V)	200ns	200ns	200ns	200ns
$t_{rr}$ (600V thru 800V)	300ns	300ns	300ns	300ns
$t_{rr}$ (1000V)	500ns			