
TYPE RP17 PUSH-PULL LOCK CONNECTORS

Scope

RP17 series connectors are designed for interfacing 8 mm video equipment and office automation equipment with miniature, lightweight, high durability 12 pin circular connectors.

RP17 series connectors are ideal for quick connection and disconnection by push-pull lock connection. The slim body will fit a varienty of electrical equipment.

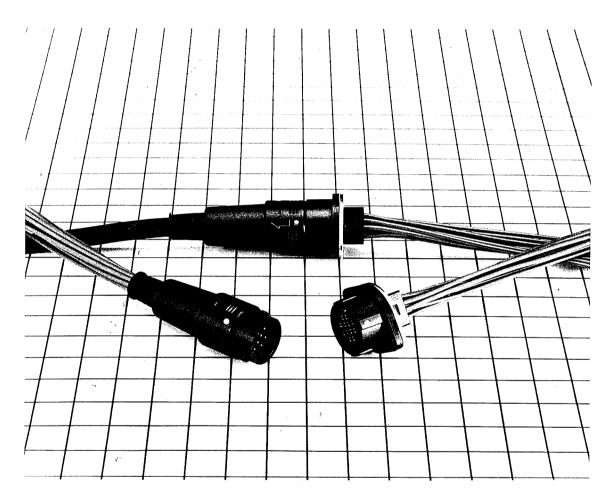

Features

- (1) One touch "push-pull lock" coupling mechanism assures easy and quick connecting and disconnecting, also assure high density mounting.
- (2) Use applicable cable AWG#18~#22 (shielded outer dia. 1.7 under) to 3 pins among 12 pins and other applicable cable AWG#24~#30 (shielded outer dia. 1.2 under) to be usable due to crimp terminal.
- (3) Mating guide keys is multiple polarizing to be ensured specified position.
- (4) Simple and slender appearance with internal installed cable clamp. External appearance is matte finish black color.
- (5) Mating position mark is located with white color, assures easy and quick connection and disconnection.


Application

8 mm video equipment, Portable radio communications equipment, Remote Control equipment, Sound facilities and small electric devices.

Material and Finish

Description Material		Finish	
Shell and Insulator	Shell and Insulator Glass-filled Polycarbonate (UL94V-0) or PBT resin		
Male Pin	Phosphor bronze	Silver plating	
Female Pin	Phosphor bronze	Silver plating	

Ordering Information

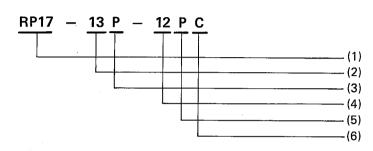

- (1) RP17: Name of series
- (2) 13: Size of shell, or outer dia. of mating section.

Size 13 is only available for this connector.

- (3) P: Type of connector
 - P: Plug
 - R: Receptacle
 - J: Jack

(4) 12: Number of pins

12 pole only is available for this connector.

(5) P: Type of pin

P: Male pin


S: Female pin

(6) C: Type of connection method or type of


terminal are classified in alphabet.


Plug

Plug

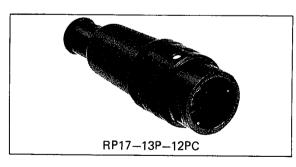


(Electrostatic Protection Type)

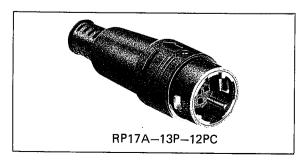

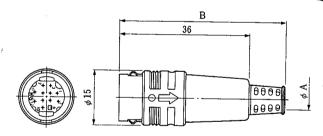

(An example in shape)

HRS No.	Part No.	φΑ	В	Remarks
113-0501-0	RP17-13P-12PC	5.3	46	
113-0512-7	RP17-13PA-12PC	6.1	51	

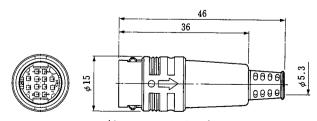



(An example in shape)

HRS No.	Part No.	Remarks
113-0551-9	RP17A-13P-12PC	

Receptacle

(Crimp Type)

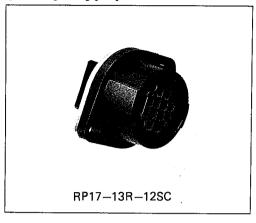


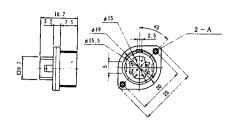


(An example in shape)

HRS No.	Part No.	Α	Remarks
113-0502-3	RP17-13R-12SC	M2.6x0.45	

(Dip Type)

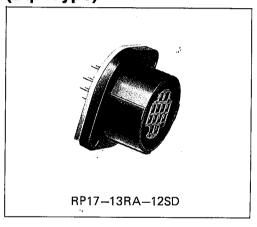

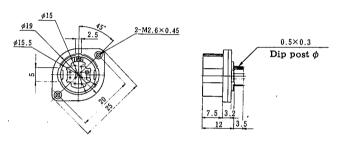

(An example in shape)


HRS No.	Part No.	Remarks
113-0511-4	RP17-13RA-12SD	

Remark: PCB layout is shown page 138.

Receptacle(Electrostatic Protection Type)

(Dip Type)



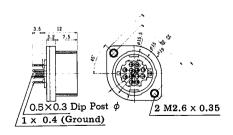


(An example in shape)

HRS No.	Part No.	Remarks
113-0553-4	RP17A-13RA-12SD	

Remark: PCB layout is shown page 138.

Jack



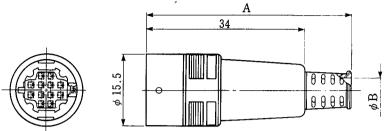


(An example in shape)


HRS No.	Part No.	Α	φВ	Note
113-0515-5	RP17-13J-12SC	44	5.3	
11305168	RP17-13JA-12SC	49	6.1	

PCB Layout

• General Part

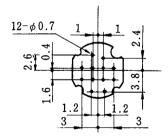


• Electrostatic Protected Part

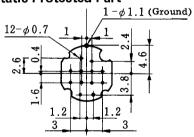

Note: The contact arrangement shows from the mating side of receptacle.


Contact

Male Pin

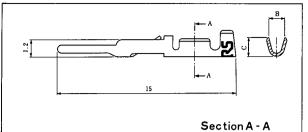

Туре	HRS No.	Part No.	В	С	Applicable Wire
Lance	113-0503-6	RP17-PC-112	1.6	2.1	AWG#18~#22
Loose	113-0504-9	RP17-PC-122	1.2	1.35	AWG#24~#30
Chain	113-0507-7	ŔP17PC212	1.6	2.1	AWG#18~#22
Chain	113-0508-0	RP17-PC-222	1.2	1.35	AWG#24~#30

Female Pin

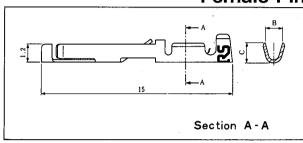

Type	HRS No.	Part No.	В	С	Applicable Wire
	113-0505-1	RP17-SC-112	1.6	2.1	AWG#18~#22
Loose	113-0506-4	RP17-SC-122	1.2	1.35	AWG#24~#30
Chair	113-0509-2	RP17-SC-212	1.6	2.1	AWG#18~#22
Chain	113-0510-1	RP17-SC-222	1.2	1.35	AWG#24~#30

Note: Loose piece terminals are offered in a package containing 100 pieces and terminal by reel containing 10,000 pieces.

Applicable tools


Туре	ltem	HRS No.	Part No.	Applicable terminal	Applicable wire
Manual	Manual	1,50-0043-8	RP17-TC-11	RP17-PC-112	AWG#18~#22
Manuai	crimping tool	150-0044-0	RP17-TC-12	RP17-PC-122	AWG#24~#30
Automatic	Automatic crimping body	901-0005-4	CM-105	_	_
	A U t	901-2036-9	AP105-RP17-1	RP17-PC-212	AWG#18~#22
	Applicator	901-2026-5	AP105-RP17-2	RP17-PC-222	AWG#24~#30
Cable crimping tool		150-0042-5	RP17-TC-01		_
Ex	tractor	150-0039-0	RP6-SC-TP	_ /	



Hand Clamping Tool




Hand Crimp Tool

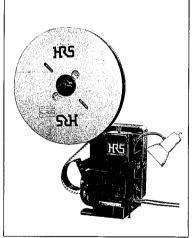

Auto Crimp Tool CM-105


Assembling Procedure

Plug

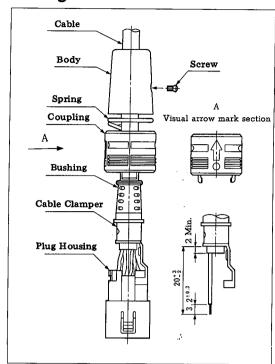

- 1. Fit the body, spring, coupling and bushing respectively in advance on wires having ends suitably treated, and then connect wires to terminals by crimp.
- 2. Then mount crimped contacts into the plug housing. After mounting, pull the wire slightly and make sure if the contact is mounted.
- 3. Fix a cable clamper to the bushing, insert it into the plug housing, and then crimp cable clamper with tool RP17-TC-01.
- Assemble coupling, spring and body respectively to plug housing, and mount it with the attached screw by means of torque wrench (2 kg-cm), and the work is completed.
- 5. Put the cable bushing over the clamp body to complete the job.

Contact Arrangement

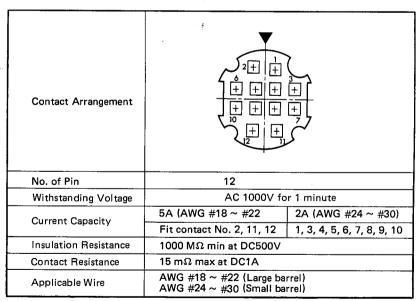

Remarks:

- The figure indicates a view from the fitting face side (Plug's wire connecting) of the receptacle and jack.
- 2. The withstading voltage is indicated by the test voltage value.