
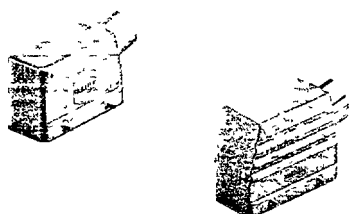


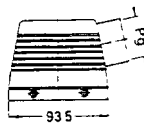

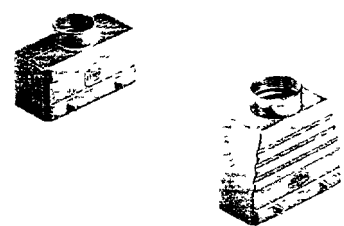



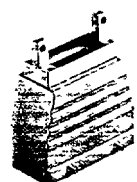
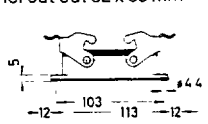

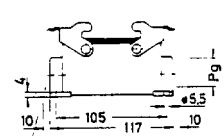

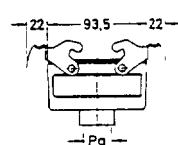

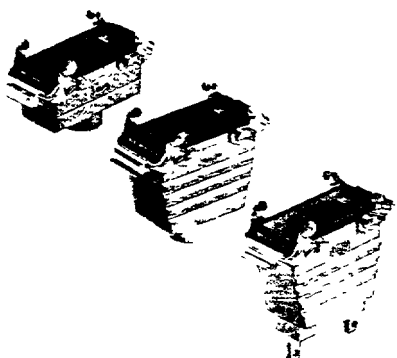
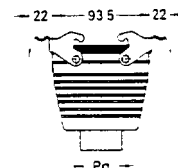


Standard Hoods/Housings with 2 levers on the housing

152-003 / 160-301 / 161-520 / 462-780 / 659-575




Identification		Part No		Pg	Drawing	Dimensions in mm	
		Low construction	High construction				
Hoods side-entry		09 30 016 1520		21			
			09 30 016 0520 09 30 016 0521	21 29			
Hoods top-entry		09 30 016 1420		21			
			09 30 016 0420 09 30 016 0421	21 29			
Hoods for flat cable			09 30 016 4411				
Housings bulkhead mounting		09 30 016 0301			Panel cut out 82 x 35 mm		
Housings surface mounting		1 side-entry	09 30 016 1230	09 30 016 0230* 09 30 016 0231*	21 29		
		2 side-entry	09 30 016 1270	09 30 016 0270 09 30 016 0271	21 29		
Hoods cable to cable		09 30 016 1730		21			
				09 30 016 0730* 09 30 016 0731*	21 29		
				09 30 016 4731			

	n
Low construction	58
High construction	77


Covers for use with 2 levers on the housing



Pressed metal cover

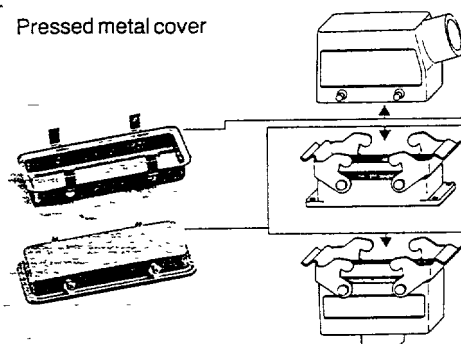


Die cast metal cover

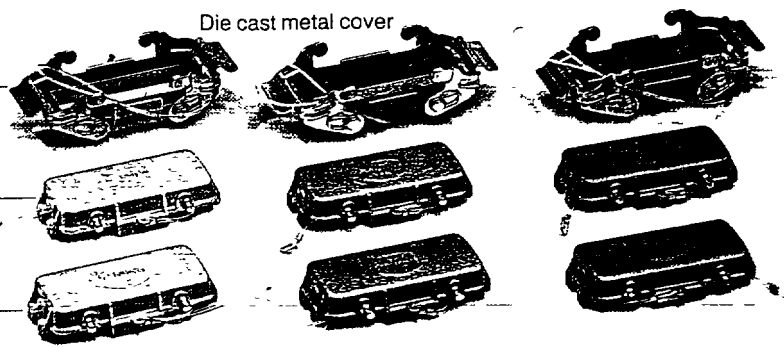


Identification	Standard	Part No		for Pg	for series								
		Han M	Han U		Han DD	Han D	Han E	Han X	Han A	Stat	Han HsB	Han HvE	Han HvES
Pressed metal cover for hoods	09 20 032 5401					50			32	40			
	09 30 010 5401				42		10					3	3
	09 30 016 5401				72	40	16				6	6	6
	09 30 024 5401				108	64	24					10, 16	10
Pressed metal cover for housings and hoods (cable to cable) (for safe transportation only)	09 20 032 5405					50			32	40			
	09 30 010 5407				42		10					3	3
	09 30 016 5405				72	40	16				6	6	6
	09 30 024 5405				108	64	24					10, 16	10
Die cast metal cover for hoods	09 30 010 5423	09 37 010 5403		16	42		10					3	3
	09 30 016 5423	09 37 016 5403		21	72	40	16				6	6	6
	09 30 016 5422	09 37 016 5402		29									
	09 30 024 5423	09 37 024 5403		21								10, 16	10
	09 30 024 5422	09 37 024 5402	09 36 064 5402	29	108	64	24						
	09 30 032 5422			29									
Die cast metal cover for housings	09 30 032 5421			36	144	80	32				12	12	12
	09 30 032 5420			42									
	09 30 010 5425	09 37 010 5405			42		10					3	3
	09 30 016 5425	09 37 016 5405	09 36 040 5405		72	40	16				6	6	6
Die cast metal cover for hoods (cable to cable)	09 30 024 5425	09 37 024 5405	09 36 064 5405		108	64	24					10, 16	10
	09 30 032 5425				144	80	32				12	12	12
	09 30 010 5427	09 37 010 5407		16	42		10					3	3
	09 30 016 5427	09 37 016 5407		21	72	40	16				6	6	6
Die cast metal cover for housings (cable to cable)	09 30 016 5426			29									
	09 30 024 5427			21								10, 16	10
	09 30 024 5426	09 37 024 5406	09 36 064 5406	29	108	64	24						
	09 30 032 5428			29									
	09 30 032 5427			36	144	80	32				12	12	12
	09 30 032 5426			42									

Special cable clamp with anti-twist device

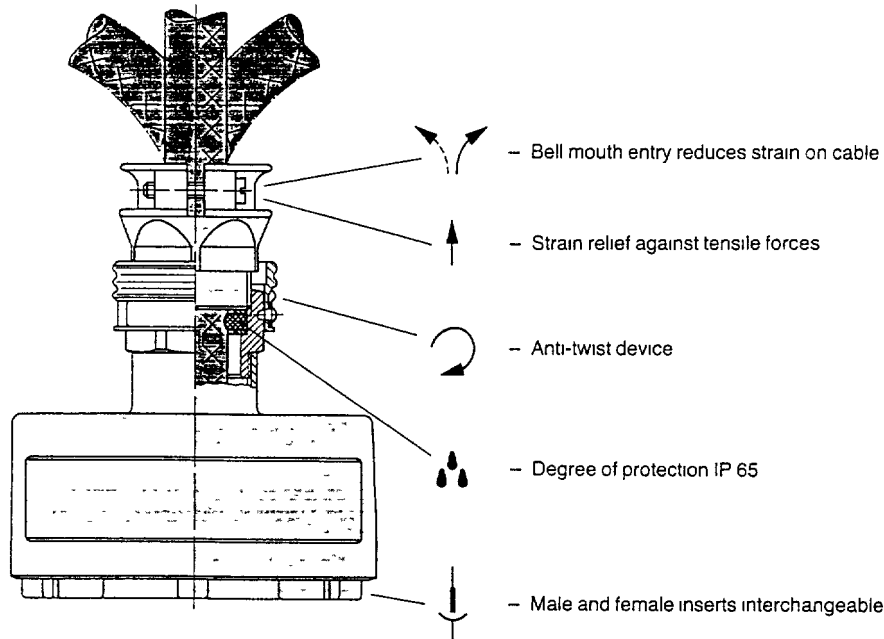

Assembly details for hoods with special cable clamp and anti-twist device

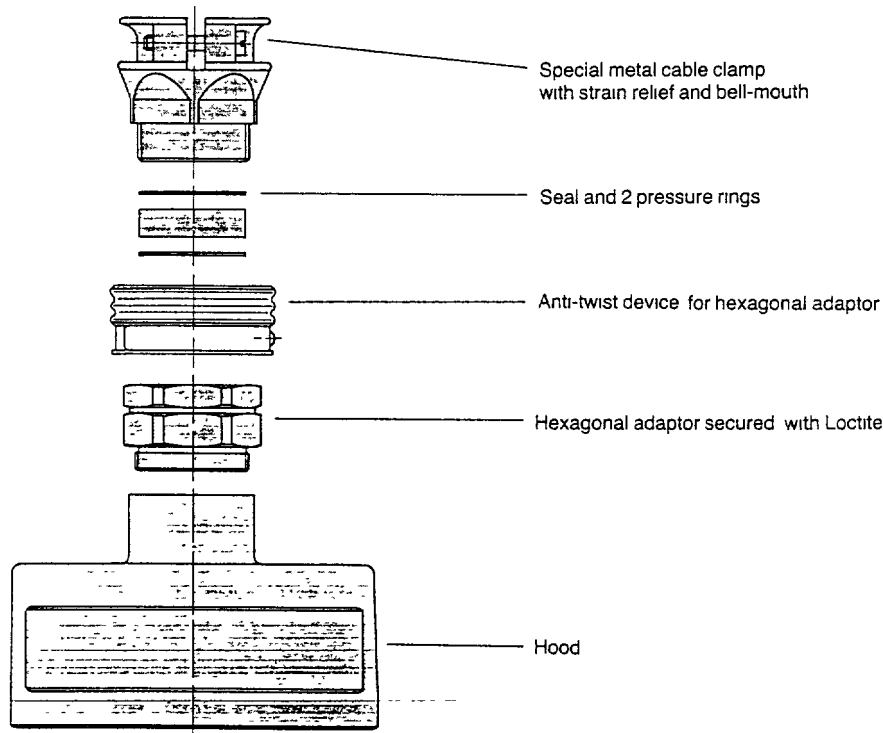

Assembly instructions

- The special cable clamp, pressure rings and seal must first be slid onto the prepared cable
- The anti-twist device can be fitted to the hood or the hexagonal adaptor as shown, ensuring that it is in its inoperative position
- The insert may now be wired and fixed in the hood.
- Slide the seal and pressure rings into position
- Screw in the special cable clamp until cable entry is sealed ensuring that the upper and lower hexagonal sections are in alignment.
- Move the anti-twist device towards the special cable clamp until the sprung securing pin is in the locked position (see assembled connector drawing above)
- Tighten the strain relief clamp