


TRIAx PLUGS ☉

FOR CABLES WITH ONE INNER CONDUCTOR AND TWO ISOLATED SHIELDS.




PART NO.	DIM. A	DIM. B	CABLE MAX JACKET	SPECIAL FEATURES	ASSEMBLY INSTRUCTIONS' BULLETIN NO.	ASSEMBLY TOOL
052-0130-0001	1.37	.44 Dia	.124		RF-ASMB-20	—
052-0138-0001	1.37	.44 Dia	.183		RF-ASMB-21	—
052-0593-0001	1.37	.438 Hex	.214	Hex Nut w/Safety Wire Holes, .027 Wire Max	RF-ASMB-73	—

TRIAx RECEPTACLE ☉


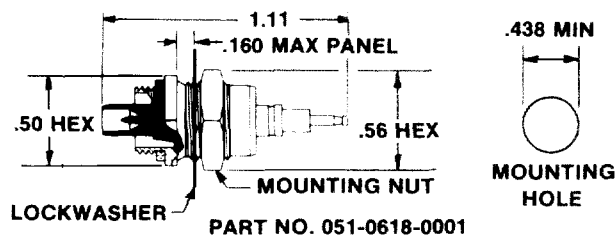


* Assembly instructions begin on page 44.

TRIAx ADAPTER ☉

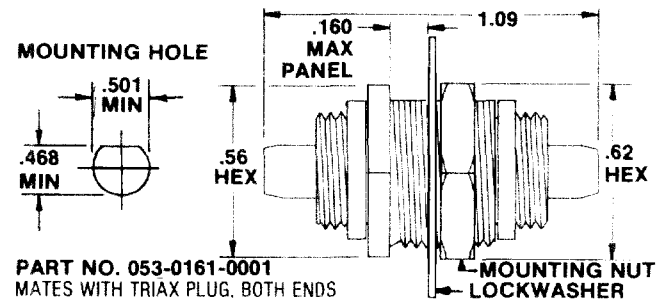

TERMINALS

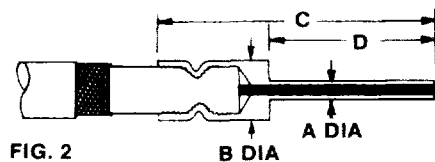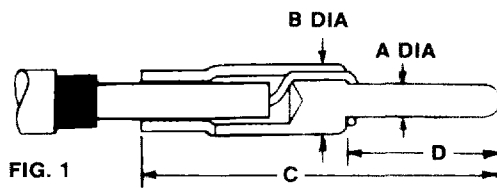

Terminals are gold plated.
See applicable Microdot
drawing for solder and
crimp instructions.

PART NO.	FIG.	DIM. A	DIM. B	DIM. C	DIM. D	CABLE MAX DIELECTRIC	CABLE MAX INNER CONDUCTOR
053-0354-0003	1	.030	.080	.630	.375	.050	.015
053-0249-0001	1	.030	.105	.630	.375	.071	.021
053-0495-0001	1	.030	.125	.880	.610	.083	.022
053-0656-0001	1	.030	.145	.880	.375	.108	.023
053-0294-0002	1	.030	.145	.880	.625	.108	.023
033-0115-0002	2	.040	.063	.255	.100	.042	.023
033-0116-0001	2	.040	.094	.300	.100	.068	.023
033-0117-0001	2	.040	.140	.350	.200	.108	.023
053-0154-0001	1	.041	.080	.430	.175	.050	.019
053-0250-0001	1	.041	.080	.505	.250	.050	.019
053-0020-0003	1	.041	.080	.630	.375	.050	.015
053-0021-0003	1	.041	.105	.630	.375	.071	.023
053-0267-0003	1	.041	.105	.875	.625	.071	.023
053-0265-0001	2	.041	.128	.505	.250	.102	.021
053-0230-0001	2	.041	.128	.630	.375	.102	.018
053-0155-0001	1	.041	.145	.430	.175	.108	.023
053-0022-0003	1	.041	.145	.630	.375	.108	.023
053-0388-0001	2	.042	.098	.500	.250	.065	.021
053-0251-0001	2	.042	.098	.630	.375	.065	.021