Features

CAS Latency and Frequency

CAS	Maximum Operating Frequency (MHz)					
Latency	DDR333 6K	DDR266B 75B				
2	133	100				
2.5	166	133				

- Double data rate architecture: two data transfers per clock cycle
- Bidirectional data strobe (DQS) is transmitted and received with data, to be used in capturing data at the receiver
- DQS is edge-aligned with data for reads and is centeraligned with data for writes
- Differential clock inputs (CK and CK)

- Four internal banks for concurrent operation
- Data mask (DM) for write data
- · DLL aligns DQ and DQS transitions with CK transitions
- Commands entered on each positive CK edge; data and data mask referenced to both edges of DQS
- Burst lengths: 2, 4, or 8
- CAS Latency: 2, 2.5
- Auto Precharge option for each burst access
- Auto Refresh and Self Refresh Modes
- 7.8µs Maximum Average Periodic Refresh Interval
- 2.5V (SSTL_2 compatible) I/O
- V_{DDQ} = 2.5V ± 0.2V
- $V_{DD} = 2.5V \pm 0.2V$
- 6K Speed sort: Supports PC2700/PC2100 modules
- 75B Speed sort: Supports PC2100 modules

Description

The 512Mb DDR SDRAM is a high-speed CMOS, dynamic random-access memory containing 536,870,912 bits. It is internally configured as a quad-bank DRAM.

The 512Mb DDR SDRAM uses a double-data-rate architecture to achieve high-speed operation. The double data rate architecture is essentially a *2n* prefetch architecture with an interface designed to transfer two data words per clock cycle at the I/O pins. A single read or write access for the 512Mb DDR SDRAM effectively consists of a single *2n*-bit wide, one clock cycle data transfer at the internal DRAM core and two corresponding n-bit wide, one-half-clock-cycle data transfers at the I/O pins.

A bidirectional data strobe (DQS) is transmitted externally, along with data, for use in data capture at the receiver. DQS is a strobe transmitted by the DDR SDRAM during Reads and by the memory controller during Writes. DQS is edgealigned with data for Reads and center-aligned with data for Writes.

The 512<u>Mb</u> DDR SDRAM operates from a differ<u>ential</u> clock (CK and CK; the crossing of CK going high and CK going LOW is referred to as the positive edge of CK). Commands (address and control signals) are registered at every positive edge of CK. Input data is registered on both edges of DQS, and output data is referenced to both edges of DQS, as well as to both edges of CK.

Read and write accesses to the DDR SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an Active command, which is then followed by a Read or Write command. The address bits registered coincident with the Active command are used to select the bank and row to be accessed. The address bits registered coincident with the Read or Write command are used to select the bank and the starting column location for the burst access. The DDR SDRAM provides for programmable Read or Write burst lengths of 2, 4, or 8 locations. An Auto Precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst access.

As with standard SDRAMs, the pipelined, multibank architecture of DDR SDRAMs allows for concurrent operation, thereby providing high effective bandwidth by hiding row precharge and activation time.

An auto refresh mode is provided along with a power-saving Power Down mode. All inputs are compatible with the JEDEC Standard for SSTL_2. All outputs are SSTL_2, Class II compatible.

The functionality described and the timing specifications included in this data sheet are for the DLL Enabled mode of operation.





Ordering Information

•				0						
Org.	Part Number	Package	Clock (MHz)	CL-t _{RCD} -t _{RP}	Clock (MHz)	CL-t _{RCD} -t _{RP}	Comments			
100M × 4	NT5DS128M4AF-6K	60ball BGA	166	2.5-3-3	133	2-3-3	DDR333/DDR266A			
128M x 4	NT5DS128M4AF-75B	0.8mmx1.0mm Pitch	133	2.5-3-3	100	2-2-2	DDR266B			
64M x 8	NT5DS64M8AF-6K	60ball BGA 0.8mmx1.0mm	166	2.5-3-3	133	2-3-3	DDR333/DDR266A			
04101 X 0	NT5DS64M8AF-75B	Pitch	133	2.5-3-3	100	2-2-2	DDR266B			
32M x 16	NT5DS32M16AF-6K	60ball BGA 0.8mmx1.0mm	166	2.5-3-3	133	2-3-3	DDR333/DDR266A			
32IVI X 10	NT5DS32M16AF-75B	Pitch	133	2.5-3-3	100	2-2-2	DDR266B			
Note: 1. At the	Note: 1. At the present time, there are no plans to support DDR SDRAMs with the QFC function. All reference to QFC are for information only									



Pin Configuration - 60 balls 0.8mmx1.0mm Pitch CSP Package


	See	the balls	through	n the pack	kage.			
			128 X 4					
1	2	3		7	8	9		
VSSQ	NC	VSS	А	VDD	NC	VDDQ		
NC	VDDQ	DQ3	в	DQ0	VSSQ	NC		
NC	VSSQ	NC	С	NC	VDDQ	NC		
NC	VDDQ	DQ2	D	DQ1	VSSQ	NC		
NC	VSSQ	DQS	Е	QFC	VDDQ	NC		
VREF	VSS	DQM	F	NC	VDD	NC		
	СЦК		G	WE	CAS			
	A12	CKE	н	RAS	CS			
	A11	A9	J	BA1	BA0			
	A8	A7	к	A0	A10/AP			
	A6	A5	L	A2	A1			
	A4	VSS	м	VDD	A3			
1	2	3	64X8	7	8	9		
	DQ7	VSS	A					
NC	VDDQ	DQ6	в	DQ1	VSSQ	NC		
NC	VSSQ	DQ5	с	DQ2	VDDQ	NC		
NC	VDDQ	DQ4	D	DQ3	VSSQ	NC		
NC	VSSQ	DQS	Е	QFC	VDDQ	NC		
VREF	VSS		F	NC	VDD	NC		
	CLK		G	WE	CAS			
	A12	CKE	н	RAS				
	A11		J	BA1	BAO			
	A8	A7	к	A0	A10/AP			
	A6	A5	L	A2	A1			
	A4	VSS	м	VDD	A3			

<Top View > See the balls through the package.



Pin Configuration - 60 balls 0.8mmx1.0mm Pitch CSP Package


<Top View > See the balls through the package.

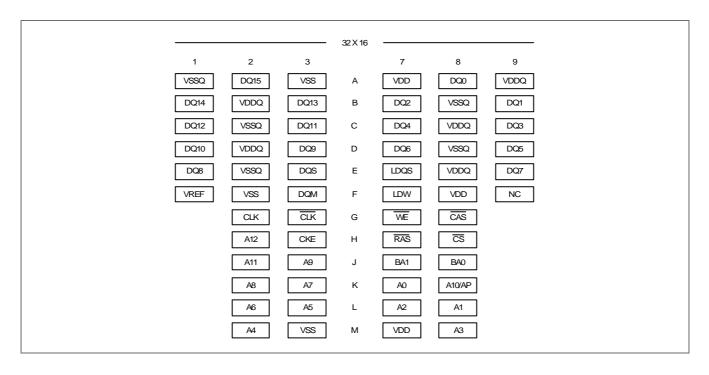

512Mb DDR SDRAM




Block Diagram (128Mb x 4)

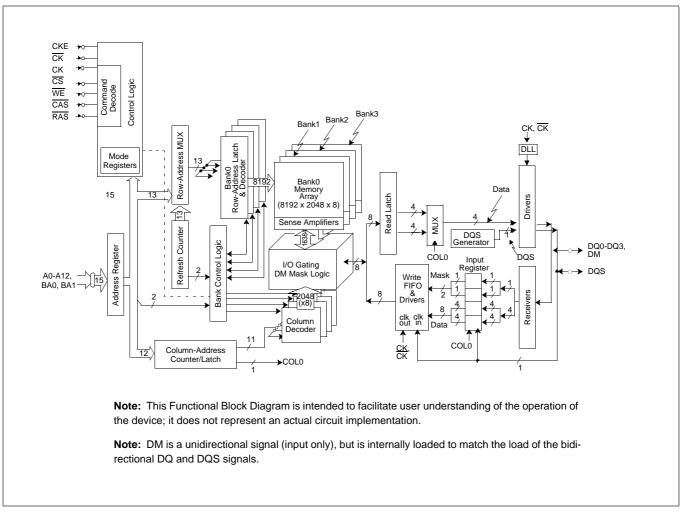

512Mb DDR SDRAM




Block Diagram (64Mb x 8)

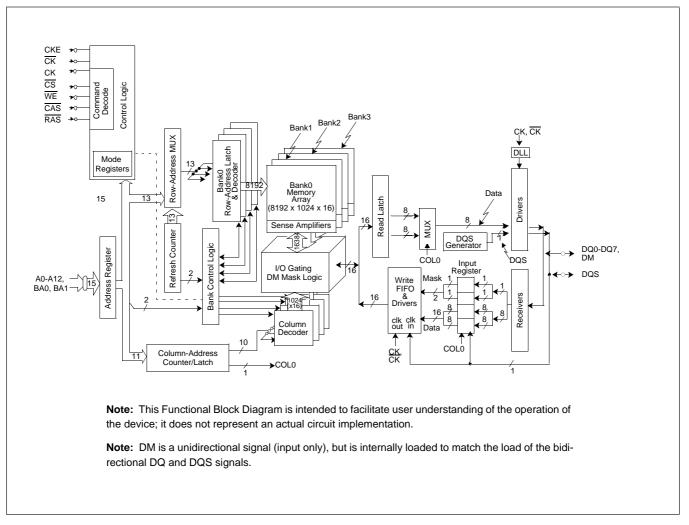

512Mb DDR SDRAM



Block Diagram (32Mb x 16)

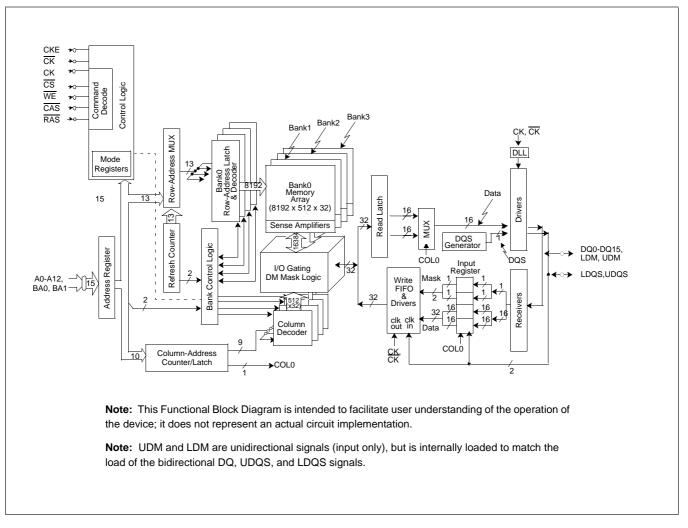



Functional Description

The 512Mb DDR SDRAM is a high-speed CMOS, dynamic random-access memory containing 536,870,912 bits. The 512Mb DDR SDRAM is internally configured as a quad-bank DRAM.

The 512Mb DDR SDRAM uses a double-data-rate architecture to achieve high-speed operation. The double-data-rate architecture is essentially a *2n* prefetch architecture, with an interface designed to transfer two data words per clock cycle at the I/O pins. A single read or write access for the 512Mb DDR SDRAM consists of a single *2n*-bit wide, one clock cycle data transfer at the internal DRAM core and two corresponding n-bit wide, one-half clock cycle data transfers at the I/O pins.

Read and write accesses to the DDR SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an Active command, which is then followed by a Read or Write command. The address bits registered coincident with the Active command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0-A12 select the row). The address bits registered coincident with the Read or Write command are used to select the starting column location for the burst access.

Prior to normal operation, the DDR SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions and device operation.

Initialization

Only one of the following two conditions must be met.

• No power sequencing is specified during power up or power down given the following criteria:

VDD and VDDQ are driven from a single power converter output

- VTT meets the specification
- A minimum resistance of 42 ohms limits the input current from the VTT supply into any pin and
- VREF tracks VDDQ /2

or

• The following relationships must be followed:

VDDQ is driven after or with VDD such that VDDQ < VDD + 0.3V

VTT is driven after or with VDDQ such that VTT < VDDQ + 0.3V

VREF is driven after or with VDDQ such that VREF < VDDQ + 0.3V

The DQ and DQS outputs are in the High-Z state, where they remain until driven in normal operation (by a read access). After all power supply and reference voltages are stable, and the clock is stable, the DDR SDRAM requires a 200µs delay prior to applying an executable command.

Once the 200µs delay has been satisfied, a Deselect or NOP command should be applied, and CKE must be brought HIGH. Following the NOP command, a Precharge ALL command must be applied. Next a Mode Register Set command must be issued for the Extended Mode Register, to enable the DLL, then a Mode Register Set command must be issued for the Mode Register, to reset the DLL, and to program the operating parameters. 200 clock cycles are required between the DLL reset and any read command. A Precharge ALL command should be applied, placing the device in the "all banks idle" state

Once in the idle state, two auto refresh cycles must be performed. Additionally, a Mode Register Set command for the Mode Register, with the reset DLL bit deactivated (i.e. to program operating parameters without resetting the DLL) must be performed. Following these cycles, the DDR SDRAM is ready for normal operation.

DDR SDRAM's may be reinitialized at any time during normal operation by asserting a valid MRS command to either the base or extended mode registers without affecting the contents of the memory array. The contents of either the mode register or extended mode register can be modified at any valid time during device operation without affecting the state of the internal address refresh counters used for device refresh.

Register Definition



Mode Register

The Mode Register is used to define the specific mode of operation of the DDR SDRAM. This definition includes the selection of a burst length, a burst type, a CAS latency, and an operating mode. The Mode Register is programmed via the Mode Register Set command (with BA0 = 0 and BA1 = 0) and retains the stored information until it is programmed again or the device loses power (except for bit A8, which is self-clearing).

Mode Register bits A0-A2 specify the burst length, A3 specifies the type of burst (sequential or interleaved), A4-A6 specify the CAS latency, and A7-A12 specify the operating mode.

The Mode Register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements results in unspecified operation.

Burst Length

Read and write accesses to the DDR SDRAM are burst oriented, with the burst length being programmable. The burst length determines the maximum number of column locations that can be accessed for a given Read or Write command. Burst lengths of 2, 4, or 8 locations are available for both the sequential and the interleaved burst types.

Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a Read or Write command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst wraps within the block if a boundary is reached. The block is uniquely selected by A1-Ai when the burst length is set to two, by A_2 -Ai when the burst length is set to four and by A_3 -Ai when the burst length is set to eight (where Ai is the most significant column address bit for a given configuration). The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. The programmed burst length applies to both Read and Write bursts.

512Mb DDR SDRAM



Mode Register Operation

	BA1	BA0	A12	A11	A10	A9	A8	A7	A6	A5	A4	A3	A2	A1	A0	Address Bus
	0*	0*		С	peratir	ng Mod	е		CA	S Late	ency	BT	Bu	rst Len	gth	Mode Register
12 -	A9	A8	A7	A6 - A	0	Operat	ing Mo	de		_		+		_		
0	0		0	Valio		Do not reset DLL				A3		urst ype				
0	0 1	1	0	Valid							_	0	· ·	uential rleave		
0		0	1	VS**			r-Speci Mode	fic								
_		_	_			Res	erved									
						T(C)	civcu									
	[CAS	Later							Burst	Leng	th	·
			A6	A5	CAS A4			ency	•		A2	A1		Leng A0		rst Length
			A6 0				су		•		A2 0				Βι	rst Length Reserved
			-	A5	A4		icy Late	rved				A1		A0	Βι	
			0	A5 0	A4 0		Late Rese	erved	•		0	A1 0		A0 0	Βι	Reserved
			0 0	A5 0 0	A4 0 1		Late Rese Rese	erved erved	·		0	A1 0 0		A0 0 1	Βι	Reserved 2
			0 0 0	A5 0 0 1	A4 0 1 0		Late Rese Rese	erved erved 2 otion)	· · · · · · · · · · · · · · · · · · ·		0 0 0	A1 0 0 1		A0 0 1 0	Bu	Reserved 2 4
			0 0 0 0	A5 0 0 1 1	A4 0 1 0 1		Late Rese Rese 2 3 (Op	erved erved 2 otion) erved			0 0 0 0	A1 0 0 1 1		A0 0 1 0 1	Bu F	Reserved 2 4 8
			0 0 0 0 1	A5 0 1 1 0	A4 0 1 0 1 0		Late Rese Rese 2 3 (Op Rese	erved erved 2 otion) erved option)			0 0 0 0 1	A1 0 0 1 1 0		A0 0 1 0 1 0	Bu F F	Reserved 2 4 8 Reserved

VS** Vendor Specific

* BA0 and BA1 must be 0, 0 to select the Mode Register (vs. the Extended Mode Register).



Burst Definition

Development	Startir	ng Column A	ddress	Order of Accesses Within a Burst					
Burst Length	A2	A1	A0	Type = Sequential	Type = Interleaved				
			0	0-1	0-1				
2			1	1-0	1-0				
		0	0	0-1-2-3	0-1-2-3				
		0	1	1-2-3-0	1-0-3-2				
4		1	0	2-3-0-1	2-3-0-1				
		1	1	3-0-1-2	3-2-1-0				
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7				
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6				
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5				
	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4				
8	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3				
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2				
ľ	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1				
ľ	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0				

Notes:

1. For a burst length of two, A1-A i selects the two-data-element block; A0 selects the first access within the block.

2. For a burst length of four, A2-A i selects the four-data-element block; A0-A1 selects the first access within the block.

3. For a burst length of eight, A3-A i selects the eight-data- element block; A0-A2 selects the first access within the block.

4. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.

Burst Type

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit A3. The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in *Burst Definition* on page 11.

Read Latency

The Read latency, or CAS latency, is the delay, in clock cycles, between the registration of a Read command and the availability of the first burst of output data. The latency can be programmed 2 or 2.5 clocks.

If a Read command is registered at clock edge n, and the latency is m clocks, the data is available nominally coincident with clock edge n + m.

Reserved states should not be used as unknown operation or incompatibility with future versions may result.




Operating Mode

The normal operating mode is selected by issuing a Mode Register Set Command with bits A7-A12 to zero, and bits A0-A6 set to the desired values. A DLL reset is initiated by issuing a Mode Register Set command with bits A7 and A9-A12 each set to zero, bit A8 set to one, and bits A0-A6 set to the desired values. A Mode Register Set command issued to reset the DLL should always be followed by a Mode Register Set command to select normal operating mode.

All other combinations of values for A7-A12 are reserved for future use and/or test modes. Test modes and reserved states should not be used as unknown operation or incompatibility with future versions may result.

CAS Latencies

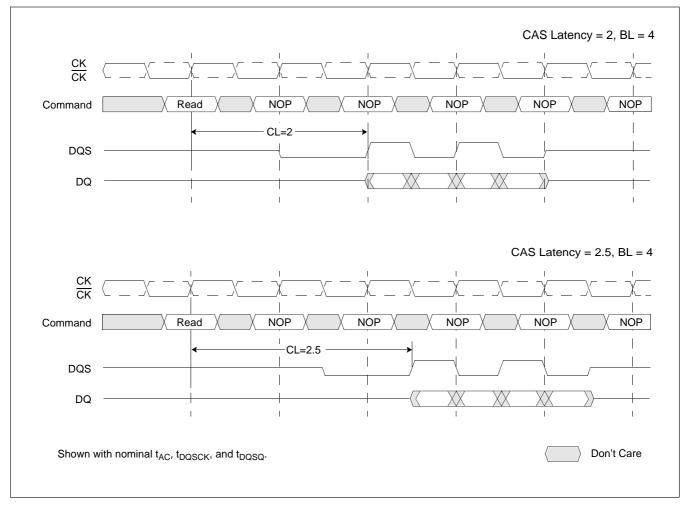

Extended Mode Register

The Extended Mode Register controls functions beyond those controlled by the Mode Register; these additional functions include DLL enable/disable, bit A0; output drive strength selection, bit A1; and \overline{QFC} output enable/disable, bit A2 (NTC optional). These functions are controlled via the bit settings shown in the Extended Mode Register Definition. The Extended Mode Register is programmed via the Mode Register Set command (with BA0 = 1 and BA1 = 0) and retains the stored information until it is programmed again or the device loses power. The Extended Mode Register must be loaded when all banks are idle, and the controller must wait the specified time before initiating any subsequent operation. Violating either of these requirements result in unspecified operation.

DLL Enable/Disable

The DLL must be enabled for normal operation. DLL enable is required during power up initialization, and upon returning to normal operation after having disabled the DLL for the purpose of debug or evaluation. The DLL is automatically disabled when entering self refresh operation and is automatically re-enabled upon exit of self refresh operation. Any time the DLL is enabled, 200 clock cycles must occur to allow time for the internal clock to lock to the externally applied clock before a Read command can be issued. This is the reason for introducing timing parameter t_{XSRD} for DDR SDRAM's (Exit Self Refresh to Read Command). Non- Read commands can be issued 2 clocks after the DLL is enabled via the EMRS command (t_{MRD}) or 10 clocks after the DLL is enabled via self refresh exit command (t_{XSNR}, Exit Self Refresh to Non-Read Command).

Output Drive Strength

The normal drive strength for all outputs is specified to be SSTL_2, Class II.


QFC Enable/Disable

The $\overline{\text{QFC}}$ signal is an optional DRAM output control used to isolate module loads (DIMMs) from the system memory bus by means of external FET switches when the given module (DIMM) is not being accessed. The $\overline{\text{QFC}}$ function is an optional feature for NANYA and is not included on all DDR SDRAM devices.

NT5DS128M4AF NT5DS64M8AF NT5DS32M16AF 512Mb DDR SDRAM



Extended Mode Register Definition

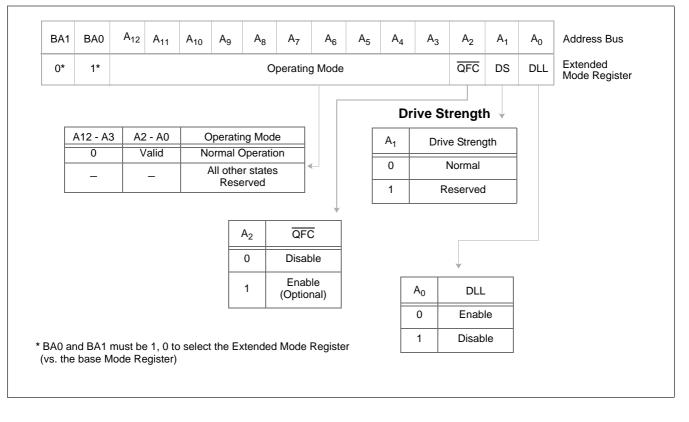

512Mb DDR SDRAM



Commands

Truth Tables 1a and 1b provide a reference of the commands supported by DDR SDRAM devices. A verbal description of each commands follows.

Truth Table 1a: Commands

Name (Function)	CS	RAS	CAS	WE	Address	MNE	Notes
Deselect (Nop)	Н	Х	Х	Х	Х	NOP	1, 9
No Operation (Nop)	L	н	н	н	Х	NOP	1, 9
Active (Select Bank And Activate Row)	L	L	н	н	Bank/Row	ACT	1, 3
Read (Select Bank And Column, And Start Read Burst)	L	н	L	н	Bank/Col	Read	1, 4
Write (Select Bank And Column, And Start Write Burst)	L	н	L	L	Bank/Col	Write	1, 4
Burst Terminate	L	Н	н	L	Х	BST	1, 8
Precharge (Deactivate Row In Bank Or Banks)	L	L	н	L	Code	PRE	1, 5
Auto Refresh Or Self Refresh (Enter Self Refresh Mode)	L	L	L	н	Х	AR / SR	1, 6, 7
Mode Register Set	L	L	L	L	Op-Code	MRS	1, 2

1. CKE is high for all commands shown except Self Refresh.

 BA0, BA1 select either the Base or the Extended Mode Register (BA0 = 0, BA1 = 0 selects Mode Register; BA0 = 1, BA1 = 0 selects Extended Mode Register; other combinations of BA0-BA1 are reserved; A0-A12 provide the op-code to be written to the selected Mode Register.)

3. BA0-BA1 provide bank address and A0-A12 provide row address.

4. BA0, BA1 provide bank address; A0-A*i* provide column address (where *i* = 9 for x8); A10 high enables the Auto Precharge feature (non-persistent), A10 low disables the Auto Precharge feature.

5. A10 LOW: BA0, BA1 determine which bank is precharged.

A10 HIGH: all banks are precharged and BA0, BA1 are "Don't Care."

6. This command is auto refresh if CKE is high; Self Refresh if CKE is low.

7. Internal refresh counter controls row and bank addressing; all inputs and I/Os are "Don't Care" except for CKE.

8. Applies only to read bursts with Auto Precharge disabled; this command is undefined (and should not be used) for read bursts with Auto Precharge enabled or for write bursts

9. Deselect and NOP are functionally interchangeable.

Truth Table 1b: DM Operation

Name (Function)	DM	DQs	Notes
Write Enable	L	Valid	1
Write Inhibit	н	Х	1
1. Used to mask write data; provided coincident with the corresponding data.			



Deselect

The Deselect function prevents new commands from being executed by the DDR SDRAM. The DDR SDRAM is effectively deselected. Operations already in progress are not affected.

No Operation (NOP)

The No Operation (NOP) command is used to perform a NOP to a DDR SDRAM. This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

Mode Register Set

The mode registers are loaded via inputs A0-A12, BA0 and BA1 while issuing the Mode Register Set Command. See mode register descriptions in the Register Definition section. The Mode Register Set command can only be issued when all banks are idle and no bursts are in progress. A subsequent executable command cannot be issued until t_{MRD} is met.

Active

The Active command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-A12 selects the row. This row remains active (or open) for accesses until a Precharge (or Read or Write with Auto Precharge) is issued to that bank. A Precharge (or Read or Write with Auto Precharge) command must be issued and completed before opening a different row in the same bank.

Read

The Read command is used to initiate a burst read access to an active (open) row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-Ai, Aj (where [i = 9, j = don't care] for x8) selects the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected, the row being accessed is precharged at the end of the Read burst; if Auto Precharge is not selected, the row remains open for subsequent accesses.

Write

The Write command is used to initiate a burst write access to an active (open) row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0-Ai, Aj (where [i = 9, j = don't care] for x8) selects the starting column location. The value on input A10 determines whether or not Auto Precharge is used. If Auto Precharge is selected, the row being accessed is precharged at the end of the Write burst; if Auto Precharge is not selected, the row remains open for subsequent accesses. Input data appearing on the DQs is written to the memory array subject to the DM input logic level appearing coincident with the data. If a given DM signal is registered low, the corresponding data is written to memory; if the DM signal is registered high, the corresponding data inputs are ignored, and a Write is not executed to that byte/column location.

Precharge

The Precharge command is used to deactivate (close) the open row in a particular bank or the open row(s) in all banks. The bank(s) will be available for a subsequent row access a specified time (t_{RP}) after the Precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any Read or Write commands being issued to that bank. A precharge command is treated as a NOP if there is no open row in that bank, or if the previously open row is already in the process of precharging.




Auto Precharge

Auto Precharge is a feature which performs the same individual-bank precharge function described above, but without requiring an explicit command. This is accomplished by using A10 to enable Auto Precharge in conjunction with a specific Read or Write command. A precharge of the bank/row that is addressed with the Read or Write command is automatically performed upon completion of the Read or Write burst. Auto Precharge is non-persistent in that it is either enabled or disabled for each individual Read or Write command. Auto Precharge ensures that the precharge is initiated at the earliest valid stage within a burst. This is determined as if an explicit Precharge command was issued at the earliest possible time without violating $t_{RAS}(min)$. The user must not issue another command to the same bank until the precharge (t_{RP}) is completed.

The NTC DDR SDRAM devices supports the optional t_{RAS} lockout feature. This feature allows a Read command with Auto Precharge to be issued to a bank that has been activated (opened) but has not yet satisfied the t_{RAS} (min) specification. The t_{RAS} lockout feature essentially delays the onset of the auto precharge operation until two conditions occur. One, the entire burst length of data has been successfully prefetched from the memory array; and two, t_{RAS} (min) has been satisfied.

As a means to specify whether a DDR SDRAM device supports the t_{RAS} lockout feature, a new parameter has been defined, t_{RAP} (RAS Command to Read Command with Auto Precharge or better stated Bank Activate to Read Command with Auto Precharge). For devices that support the t_{RAS} lockout feature, $t_{RAP} = t_{RCD}$ (min). This allows any Read Command (with or without Auto Precharge) to be issued to an open bank once t_{RCD} (min) is satisfied.

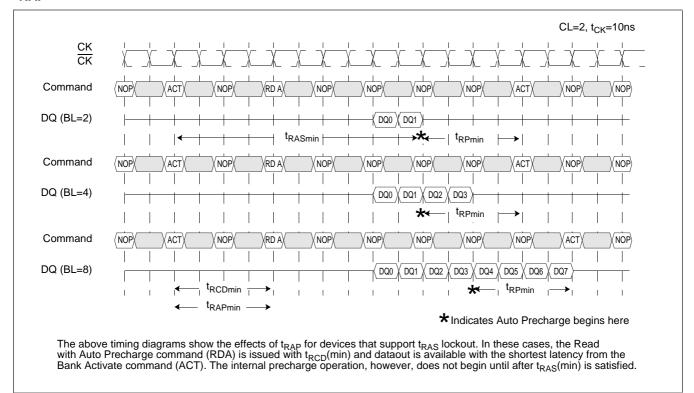

t_{RAP} Definition

Burst Terminate

The Burst Terminate command is used to truncate read bursts (with Auto Precharge disabled). The most re-cently registered Read command prior to the Burst Terminate command is truncated, as shown in the Operation section of this data sheet. Write burst cycles are not to be terminated with the Burst Terminate command.



Auto Refresh

Auto Refresh is used during normal operation of the DDR SDRAM and is analogous to CAS Before RAS (CBR) Refresh in previous DRAM types. This command is nonpersistent, so it must be issued each time a refresh is required.

The refresh addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an Auto Refresh command. The 512Mb DDR SDRAM requires Auto Refresh cycles at an average periodic interval of 7.8µs (maximum).

Self Refresh

The Self Refresh command can be used to retain data in the DDR SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the DDR SDRAM retains data without external clocking. The Self Refresh command is initiated as an Auto Refresh command coincident with CKE transitioning low. The DLL is automatically disabled upon entering Self Refresh, and is automatically enabled upon exiting Self Refresh (200 clock cycles must then occur before a Read command can be issued). Input signals except CKE (low) are "Don't Care" during Self Refresh operation.

The procedure for exiting self refresh requires a sequence of commands. CK (and \overline{CK}) must be stable prior to CKE returning high. Once CKE is high, the SDRAM must have NOP commands issued for t_{XSNR} because time is required for the completion of any internal refresh in progress. A simple algorithm for meeting both refresh and DLL requirements is to apply NOPs for 200 clock cycles before applying any other command.


512Mb DDR SDRAM

Operations

Bank/Row Activation

Before any Read or Write commands can be issued to a bank within the DDR SDRAM, a row in that bank must be "opened" (activated). This is accomplished via the Active command and addresses A0-A12, BA0 and BA1 (see Activating a Specific Row in a Specific Bank), which decode and select both the bank and the row to be activated. After opening a row (issuing an Active command), a Read or Write command may be issued to that row, subject to the t_{RCD} specification. A subsequent Active command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive Active commands to the same bank is defined by t_{RC} . A subsequent Active command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive Active commands to different banks is defined by t_{RD} .

Activating a Specific Row in a Specific Bank

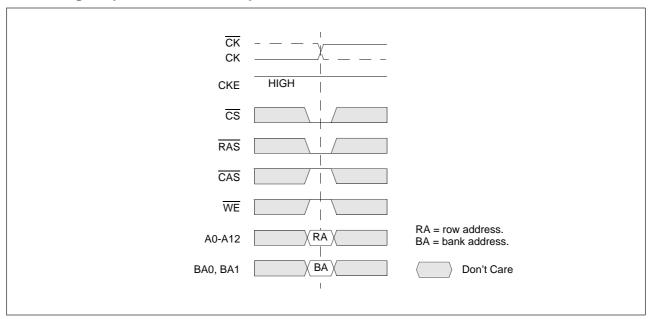




512Mb DDR SDRAM



t_{RCD} and t_{RRD} Definition

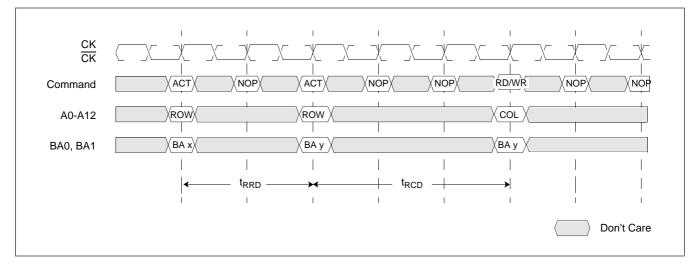

Reads

Subsequent to programming the mode register with CAS latency, burst type, and burst length, Read bursts are initiated with a Read command.


The starting column and bank addresses are provided with the Read command and Auto Precharge is either enabled or disabled for that burst access. If Auto Precharge is enabled, the row that is accessed starts precharge at the completion of the burst, provided t_{RAS} has been satisfied. For the generic Read commands used in the following illustrations, Auto Precharge is disabled.

During Read bursts, the valid data-out element from the starting column address is available following the CAS latency after the Read command. Each subsequent data-out element is valid nominally at the next positive or negative clock edge (i.e. at the next crossing of CK and \overrightarrow{CK}). The following timing figure entitled "Read Burst: CAS Latencies (Burst Length=4)" illustrates the general timing for each supported CAS latency setting. DQS is driven by the DDR SDRAM along with output data. The initial low state on DQS is known as the read preamble; the low state coincident with the last data-out element is known as the read post-amble. Upon completion of a burst, assuming no other commands have been initiated, the DQs and DQS goes High-Z. Data from any Read burst may be concatenated with or truncated with data from a subsequent Read command. In either case, a continuous flow of data can be maintained. The first data element from the new burst follows either the last element of a completed burst or the last desired data element of a longer burst which is being truncated. The new Read command should be issued x cycles after the first Read command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). This is shown in timing figure entitled "Consecutive Read Bursts: CAS Latencies (Burst Length =4 or 8)". A Read command can be initiated on any positive clock cycle following a previous Read command. Nonconsecutive Read data is shown in timing figure entitled "Non-Consecutive Read Bursts: CAS Latencies (Burst Length =4 or 8)". CAS Latencies (Burst Length = 2, 4 or 8) within a page (or pages) can be performed as shown on page 25.

512Mb DDR SDRAM




Read Command

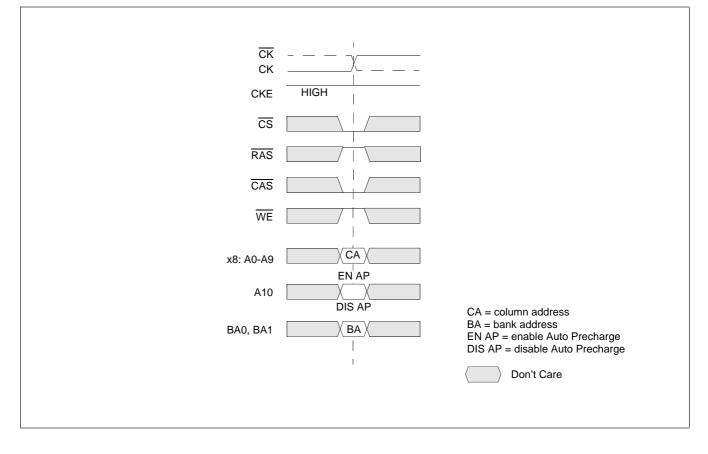

512Mb DDR SDRAM






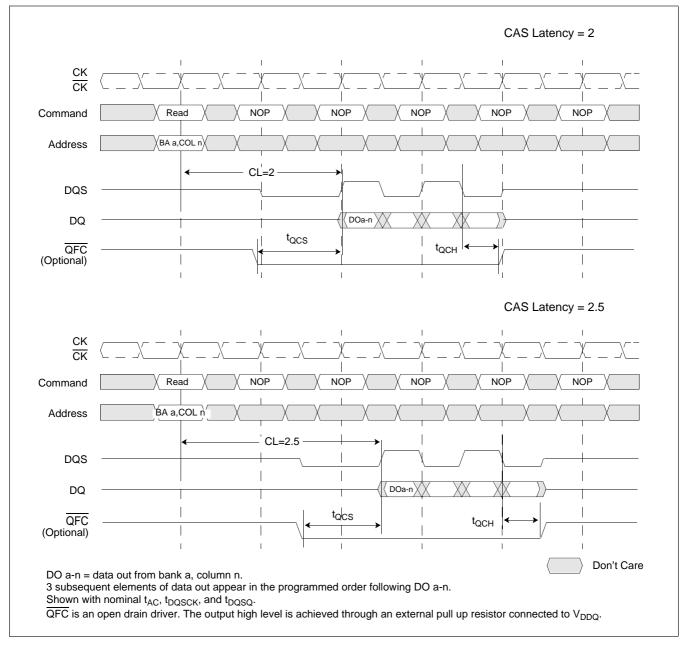


512Mb DDR SDRAM



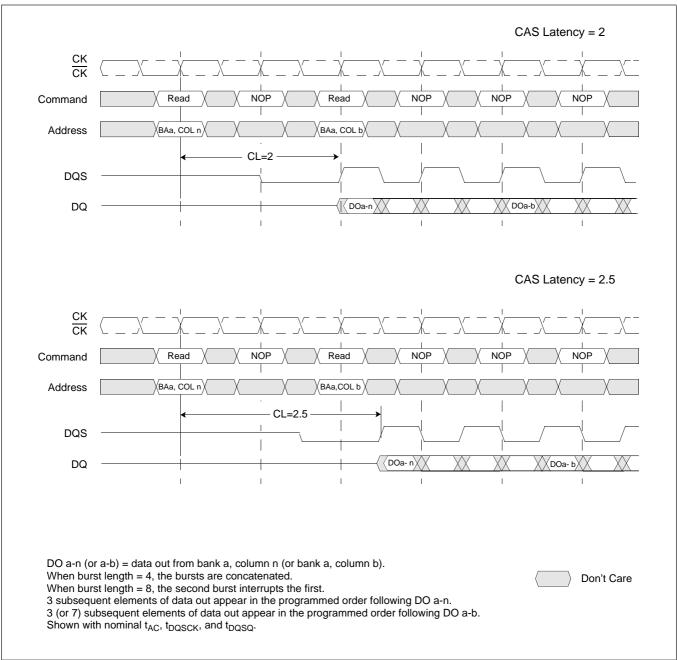

Consecutive Read Bursts: CAS Latencies (Burst Length = 4 or 8)




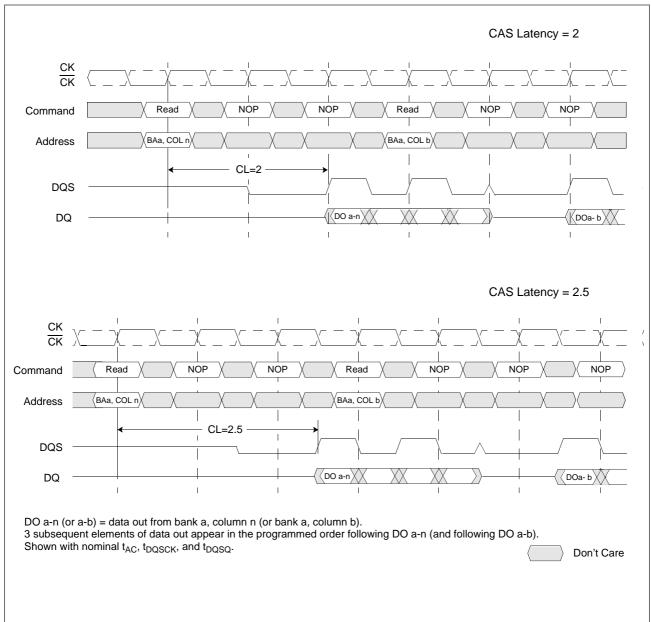

Non-Consecutive Read Bursts: CAS Latencies (Burst Length = 4)

512Mb DDR SDRAM



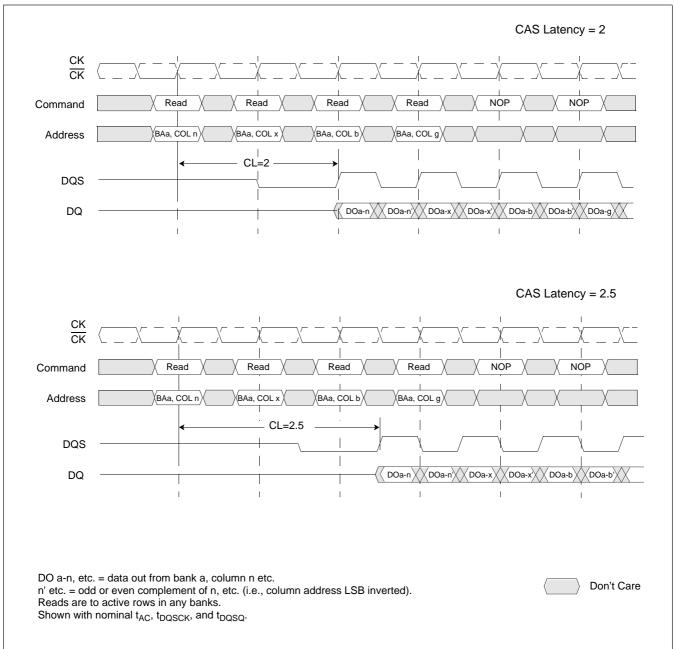

Random Read Accesses: CAS Latencies (Burst Length = 2, 4 or 8)

512Mb DDR SDRAM



Data from any Read burst may be truncated with a Burst Terminate command, as shown in timing figure entitled *Terminating a Read Burst:* CAS Latencies (Burst Length = 8) on page 27. The Burst Terminate latency is equal to the read (CAS) latency, i.e. the Burst Terminate command should be issued x cycles after the Read command, where x equals the number of desired data element pairs.


Data from any Read burst must be completed or truncated before a subsequent Write command can be issued. If truncation is necessary, the Burst Terminate command must be used, as shown in timing figure entitled *Read to Write: CAS Latencies (Burst Length = 4 or 8)* on page 28. The example is shown for $t_{DQSS}(min)$. The $t_{DQSS}(max)$ case, not shown here, has a longer bus idle time. $t_{DQSS}(min)$ and $t_{DQSS}(max)$ are defined in the section on Writes.

A Read burst may be followed by, or truncated with, a Precharge command to the same bank (provided that Auto Precharge was not activated). The Precharge command should be issued x cycles after the Read command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). This is shown in timing figure *Read to Precharge: CAS Latencies (Burst Length = 4 or 8)* on page 29 for Read latencies of 2 and 2.5. Following the Precharge command, a subsequent command to the same bank cannot be issued until t_{RP} is met. Note that part of the row precharge time is hidden during the access of the last data elements.

In the case of a Read being executed to completion, a Precharge command issued at the optimum time (as described above) provides the same operation that would result from the same Read burst with Auto Precharge enabled. The disadvantage of the Precharge command is that it requires that the command and address busses be available at the appropriate time to issue the command. The advantage of the Precharge command is that it can be used to truncate bursts.


512Mb DDR SDRAM



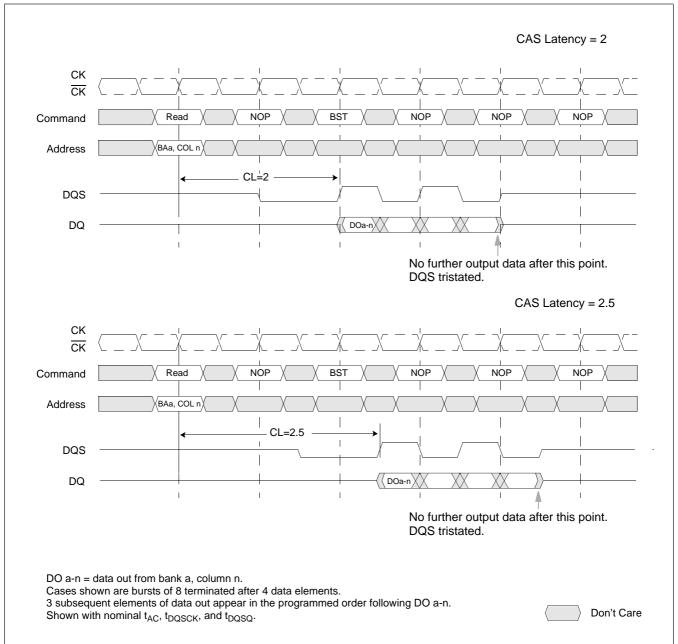

Terminating a Read Burst: CAS Latencies (Burst Length = 8)




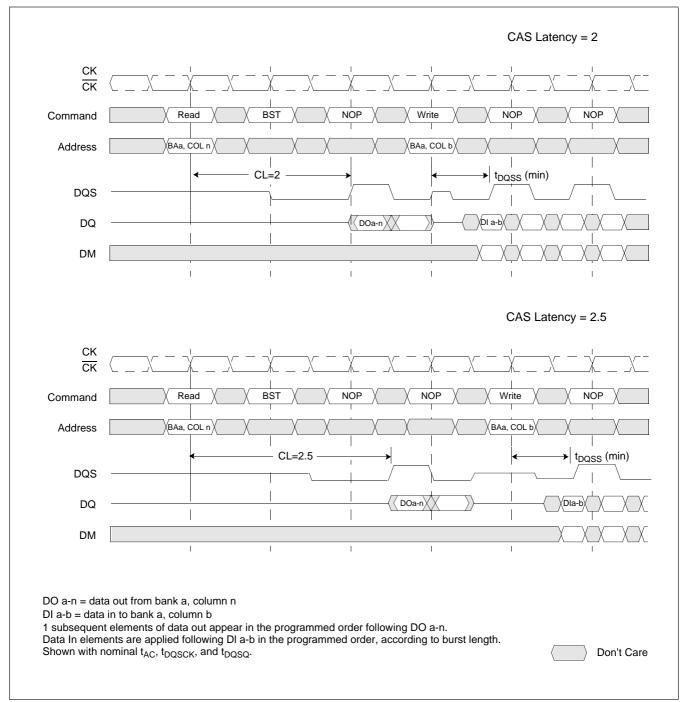

Read to Write: CAS Latencies (Burst Length = 4 or 8)

512Mb DDR SDRAM



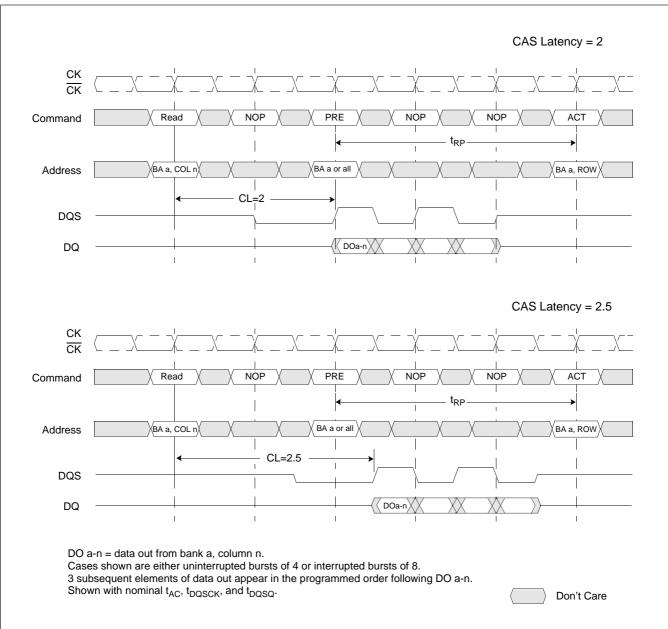

Read to Precharge: CAS Latencies (Burst Length = 4 or 8)



Writes

Write bursts are initiated with a Write command, as shown in timing figure Write Command on page 31.

The starting column and bank addresses are provided with the Write command, and Auto Precharge is either enabled or disabled for that access. If Auto Precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic Write commands used in the following illustrations, Auto Precharge is disabled.

During Write bursts, the first valid data-in element is registered on the first rising edge of DQS following the write command, and subsequent data elements are registered on successive edges of DQS. The Low state on DQS between the Write command and the first rising edge is known as the write preamble; the Low state on DQS following the last data-in element is known as the write postamble. The time between the Write command and the first corresponding rising edge of DQS (t_{DQSS}) is specified with a relatively wide range (from 75% to 125% of one clock cycle), so most of the Write diagrams that follow are drawn for the two extreme cases (i.e. t_{DQSS} (min) and t_{DQSS} (max)). Timing figure *Write Burst (Burst Length = 4)* on page 32 shows the two extremes of t_{DQSS} for a burst of four. Upon completion of a burst, assuming no other commands have been initiated, the DQs and DQS enters High-Z and any additional input data is ignored.

Data for any Write burst may be concatenated with or truncated with a subsequent Write command. In either case, a continuous flow of input data can be maintained. The new Write command can be issued on any positive edge of clock following the previous Write command. The first data element from the new burst is applied after either the last element of a completed burst or the last desired data element of a longer burst which is being truncated. The new Write command should be issued x cycles after the first Write command, where x equals the number of desired data element pairs (pairs are required by the 2n prefetch architecture). Timing figure *Write to Write (Burst Length = 4)* on page 33 shows concatenated bursts of 4. An example of nonconsecutive Writes is shown in timing figure *Write to Write: Max DQSS, Non-Consecutive (Burst Length = 4)* on page 34. Full-speed random write accesses within a page or pages can be performed as shown in timing figure *Random Write Cycles (Burst Length = 2, 4 or 8)* on page 35. Data for any Write burst may be followed by a subsequent Read command. To follow a Write without truncating the write burst, t_{WTR} (Write to Read) should be met as shown in timing figure *Write to Read: Non-Interrupting (CAS Latency = 2; Burst Length = 4)* on page 36.

Data for any Write burst may be truncated by a subsequent (interrupting) Read command. This is illustrated in timing figures "Write to Read: Interrupting (CAS Latency =2; Burst Length = 8)", "Write to Read: Minimum D_{QSS} , Odd Number of Data (3 bit Write), Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)", and "Write to Read: Nominal D_{QSS} , Interrupting (CAS Latency = 2; Burst Length = 8)". Note that only the data-in pairs that are registered prior to the t_{WTR} period are written to the internal array, and any subsequent data-in must be masked with DM, as shown in the diagrams noted previously.

Data for any Write burst may be followed by a subsequent Precharge command. To follow a Write without truncating the write burst, t_{WR} should be met as shown in timing figure *Write to Precharge: Non-Interrupting (Burst Length = 4)* on page 40.


Data for any Write burst may be truncated by a subsequent Precharge command, as shown in timing figures *Write to Pre-charge: Interrupting (Burst Length = 4 or 8)* on page 41 to *Write to Precharge: Nominal DQSS (2 bit Write), Interrupting (Burst Length = 4 or 8)* on page 43. Note that only the data-in pairs that are registered prior to the t_{WR} period are written to the internal array, and any subsequent data in should be masked with DM. Following the Precharge command, a subsequent command to the same bank cannot be issued until t_{RP} is met.

In the case of a Write burst being executed to completion, a Precharge command issued at the optimum time (as described above) provides the same operation that would result from the same burst with Auto Precharge. The disadvantage of the Precharge command is that it requires that the command and address busses be available at the appropriate time to issue the command. The advantage of the Precharge command is that it can be used to truncate bursts.

512Mb DDR SDRAM




Write Command

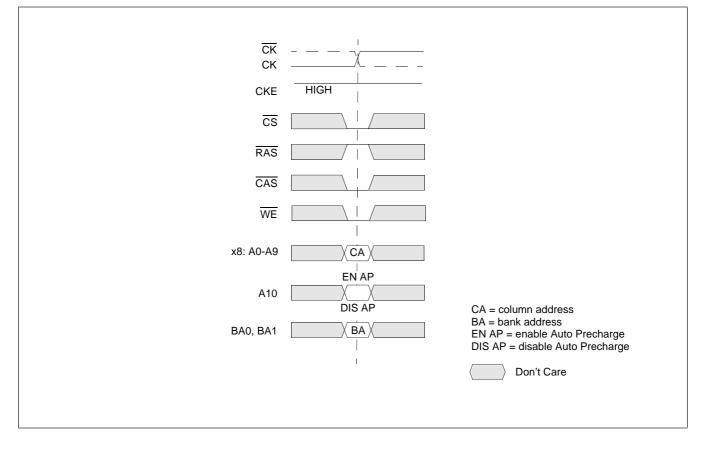

512Mb DDR SDRAM




Write Burst (Burst Length = 4)

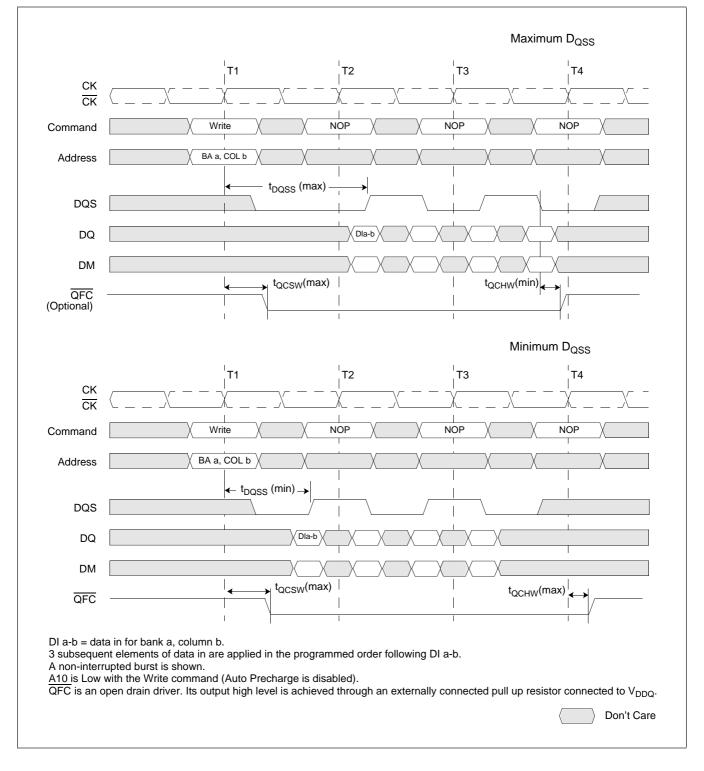




Write to Write (Burst Length = 4)

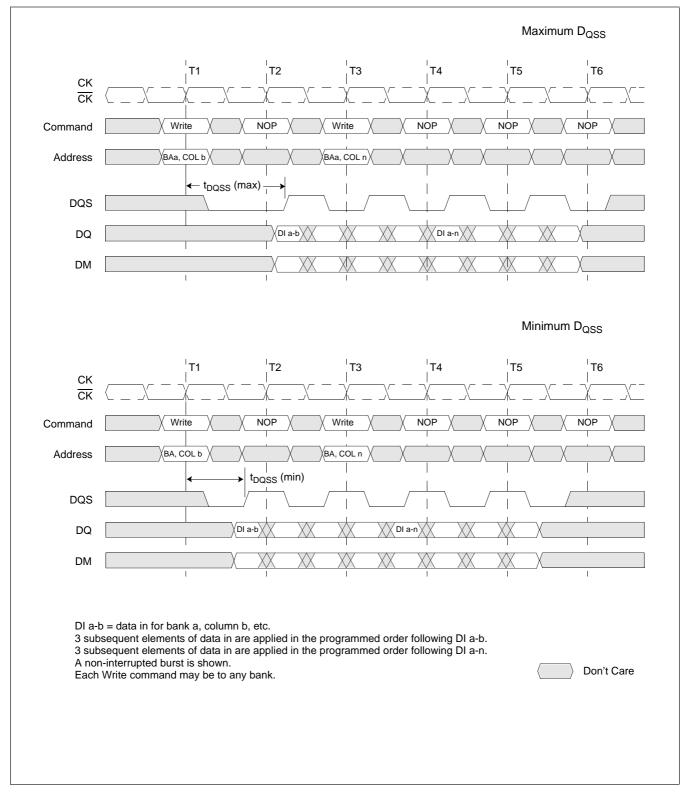

512Mb DDR SDRAM




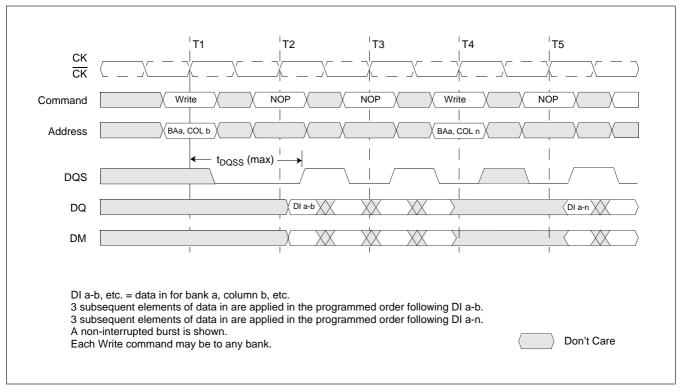

Write to Write: Max DQSS, Non-Consecutive (Burst Length = 4)


512Mb DDR SDRAM



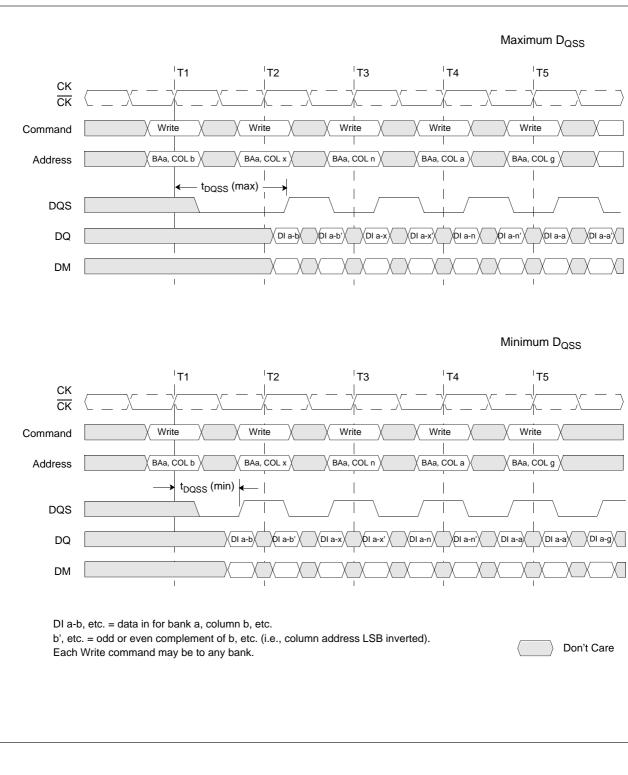


Random Write Cycles (Burst Length = 2, 4 or 8)



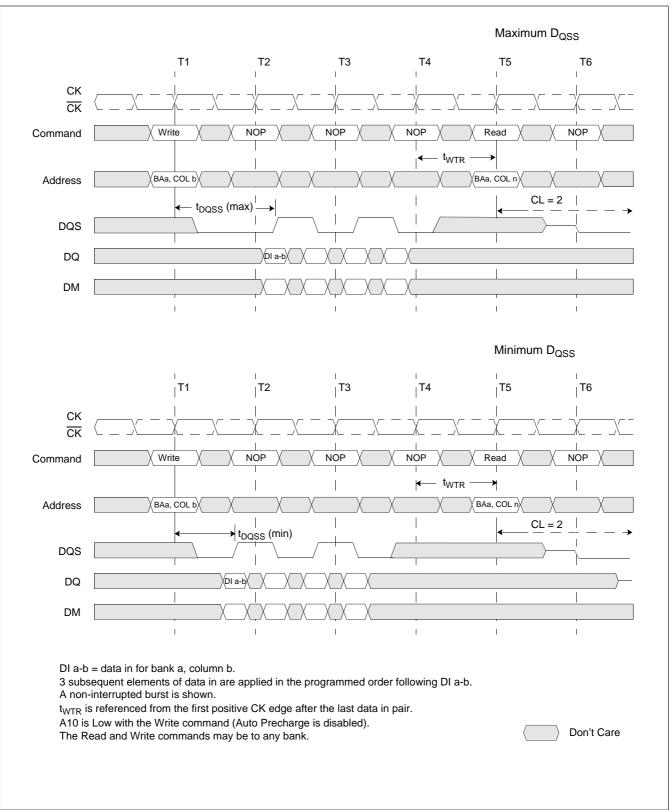


Write to Read: Non-Interrupting (CAS Latency = 2; Burst Length = 4)



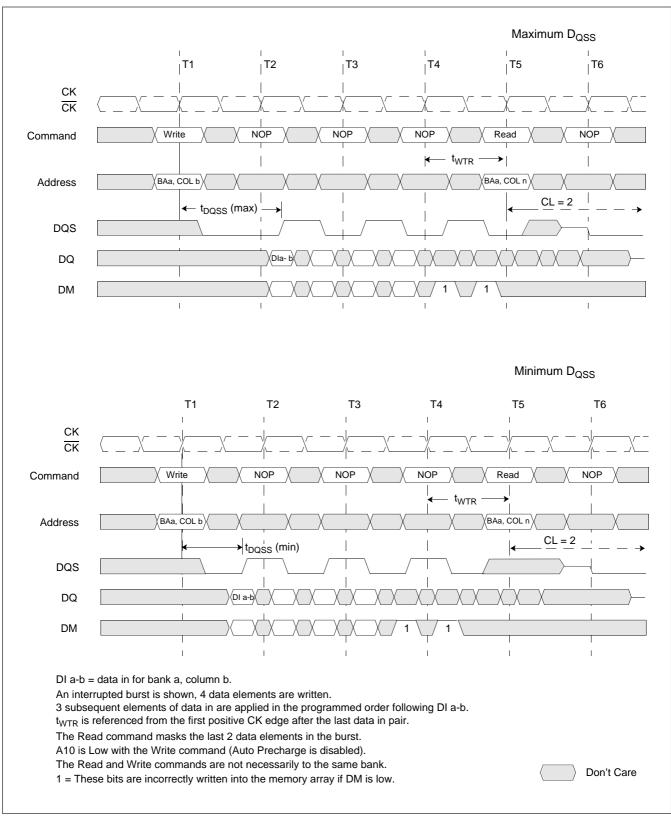


Write to Read: Interrupting (CAS Latency = 2; Burst Length = 8)

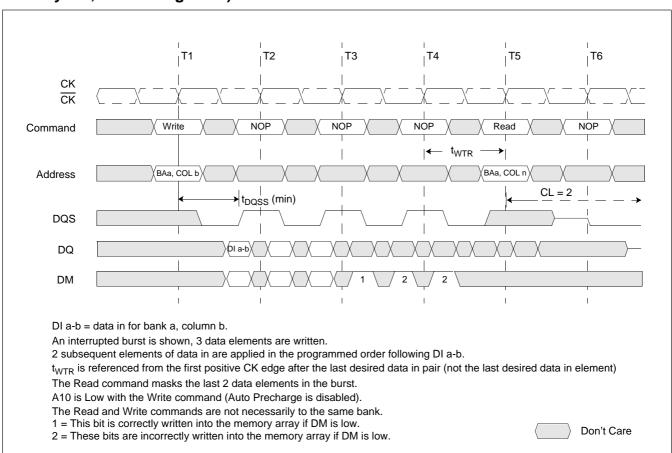

Write to Read: Minimum DQSS, Odd Number of Data (3 bit Write), Interrupting (CAS Latency = 2; Burst Length = 8)






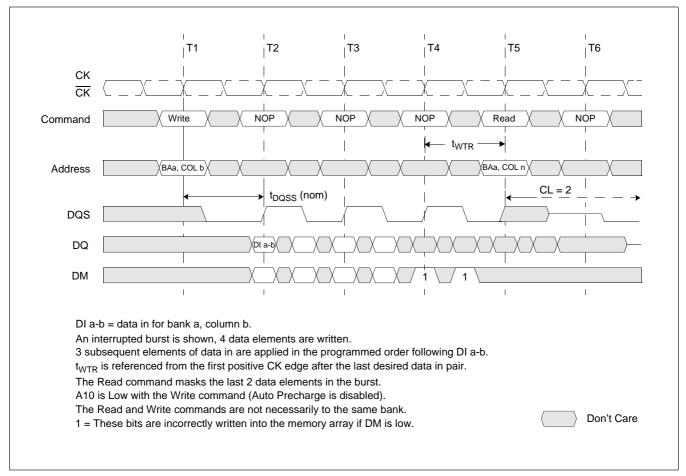

Write to Read: Nominal DQSS, Interrupting (CAS Latency = 2; Burst Length = 8)


512Mb DDR SDRAM



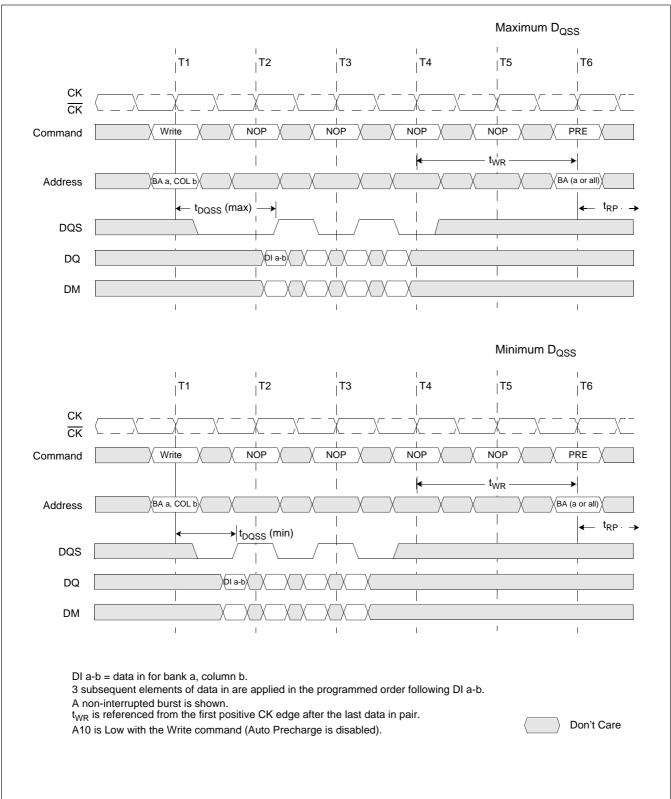


Write to Precharge: Non-Interrupting (Burst Length = 4)



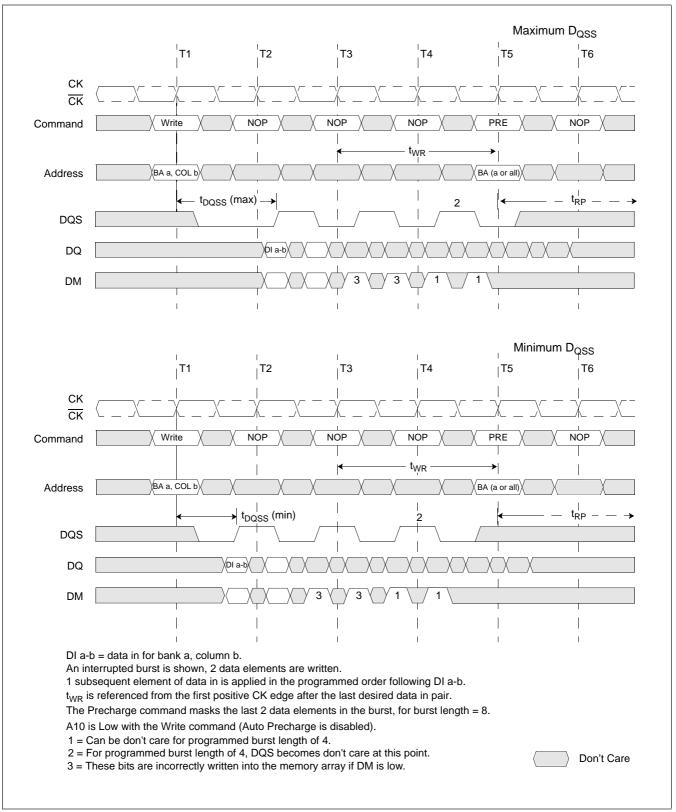


Write to Precharge: Interrupting (Burst Length = 4 or 8)

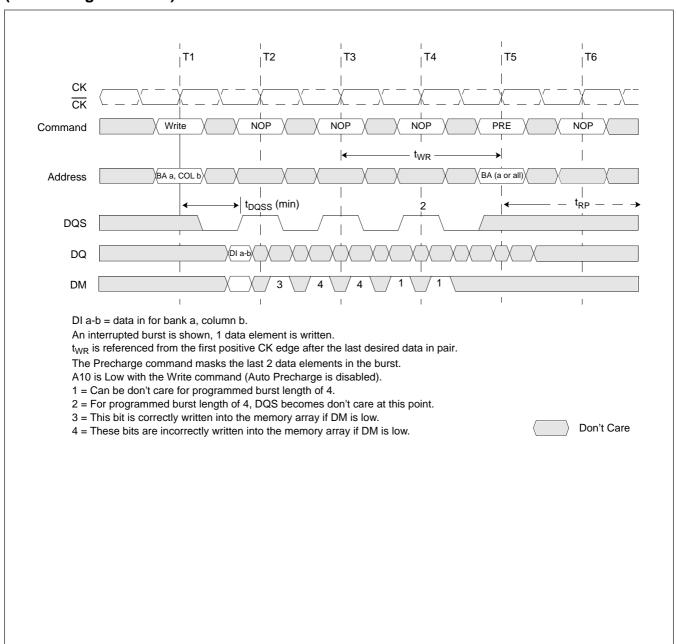

Write to Precharge: Minimum DQSS, Odd Number of Data (1 bit Write), Interrupting (Burst Length = 4 or 8)



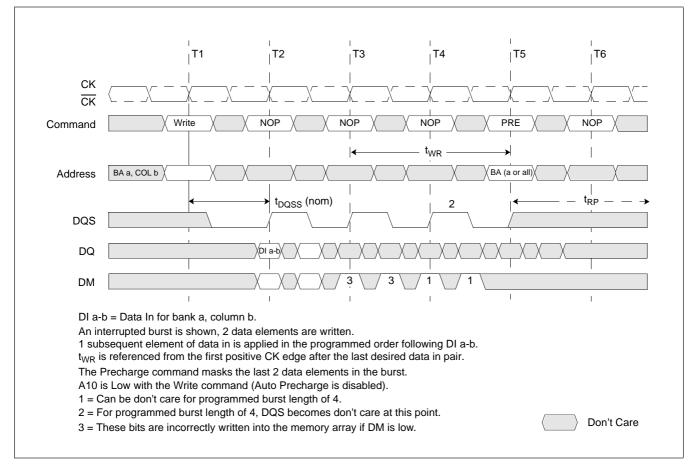


Write to Precharge: Nominal DQSS (2 bit Write), Interrupting (Burst Length = 4 or 8)

512Mb DDR SDRAM



Precharge Command

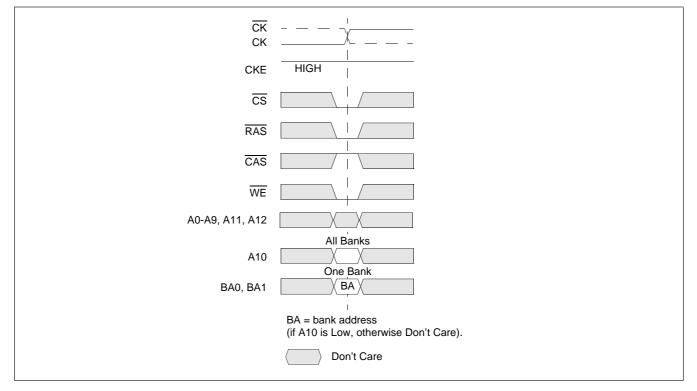

Precharge

The Precharge command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) is available for a subsequent row access some specified time (t_{RP}) after the Precharge command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, inputs BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any Read or Write commands being issued to that bank.

512Mb DDR SDRAM




Power Down

Power Down is entered when CKE is registered low (no accesses can be in progress). If Power Down occurs when all banks are idle, this mode is referred to as Precharge Power Down; if Power Down occurs when there is a row active in any bank, this mode is referred to as Active Power Down. Entering Power Down deactivates the input and output buffers, excluding CK, CK and CKE. The DLL is still running in Power Down mode, so for maximum power savings, the user has the option of disabling the DLL prior to entering Power Down. In that case, the DLL must be enabled after exiting Power Down, and 200 clock cycles must occur before a Read command can be issued. In Power Down mode, CKE Low and a stable clock signal must be maintained at the inputs of the DDR SDRAM, and all other input signals are "Don't Care". However, Power Down duration is limited by the refresh requirements of the device, so in most applications, the self refresh mode is preferred over the DLL-disabled Power Down mode.

The Power Down state is synchronously exited when CKE is registered high (along with a Nop or Deselect command). A valid, executable command may be applied one clock cycle later.

Power Down

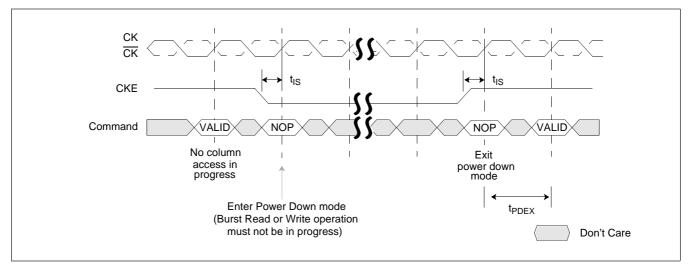



Truth Table 2: Clock Enable (CKE)

- 1. CKE n is the logic state of CKE at clock edge n: CKE n-1 was the state of CKE at the previous clock edge.
- 2. Current state is the state of the DDR SDRAM immediately prior to clock edge n.
- 3. Command n is the command registered at clock edge n, and action n is a result of command n.
- 4. All states and sequences not shown are illegal or reserved.

	CKE n-1	CKEn			
Current State	Previous Cycle	Current Cycle	Command n	Action n	Notes
Self Refresh	L	L	Х	Maintain Self-Refresh	
Self Refresh	L	н	Deselect or NOP	Exit Self-Refresh	1
Power Down	L	L	X	Maintain Power Down	
Power Down	L	н	Deselect or NOP	Exit Power Down	
All Banks Idle	н	L	Deselect or NOP	Precharge Power Down Entry	
All Banks Idle	н	L	Auto Refresh	Self Refresh Entry	
Bank(s) Active	н	L	Deselect or NOP	Active Power Down Entry	
	н	Н	See "Truth Table 3: Current State Bank n - Command to Bank n (Same Bank)" on page 47		

1. Deselect or NOP commands should be issued on any clock edges occurring during the Self Refresh Exit (t_{XSNR}) period. A minimum of 200 clock cycles are needed before applying a read command to allow the DLL to lock to the input clock.



Current State	CS	RAS	CAS	WE	Command	Action	Notes
Any	Н	Х	Х	Х	Deselect	NOP. Continue previous operation	1-6
Any	L	Н	Н	Н	No Operation	NOP. Continue previous operation	1-6
	L	L	Н	Н	Active	Select and activate row	1-6
Idle	L	L	L	Н	Auto Refresh		1-7
	L	L	L	L	Mode Register Set		1-7
	L	Н	L	Н	Read	Select column and start Read burst	1-6, 10
Row Active	L	н	L	L	Write	Select column and start Write burst	1-6, 10
	L	L	Н	L	Precharge	Deactivate row in bank(s)	1-6, 8
Read	L	н	L	Н	Read	Select column and start new Read burst	1-6, 10
(Auto Precharge	L	L	Н	L	Precharge	Truncate Read burst, start Precharge	1-6, 8
Disabled)	L	Н	Н	L	Burst Terminate	Burst Terminate	1-6, 9
Write	L	н	L	Н	Read	Select column and start Read burst	1-6, 10, 1 ²
(Auto Precharge	L	Н	L	L	Write	Select column and start Write burst	1-6, 10
Disabled)	L	L	Н	L	Precharge	Truncate Write burst, start Precharge	1-6, 8, 11
Write: 4. The following Precharging: Row Activatin	states m Star state	nust not ts with re e.	be interr egistratio	upted by on of a P	a command issued to the sa recharge command and ends	bled, and has not yet terminated or been term ame bank. s when t_{RP} is met. Once t_{RP} is met, the bank is hen t_{RCD} is met. Once t_{RCD} is met, the bank is	s in the idle
Read w/Auto I	activ Precharg met.	ve" state. ge Enabl Once t _R	led: Star _{RP} is met	ts with re t, the ba	egistration of a Read commar hk is in the idle state.	nd with Auto Precharge enabled and ends whe	
Deselect or N	OP com	Once t _R mands,	_{RP} is met or allowa	t, the bai able com	nk is in the idle state. Imands to the other bank sho	nd with Auto Precharge enabled and ends whe	n t _{RP} has bee ring these
 The following clock edge du Refreshing: Accessing Mo Precharging A All states and Not bank-species May or may m 	OP com states states m ring the Star in th de Regi met, state sequen- cific; req ot be ba	Once t _F mands, es. Allow hust not l se states ts with re e "all ba ster: Sta the DDI ts with re e. ces not s uires tha nk-speci	RP is mel or allowa vable cor- be interre- egistratic nks idle" urts with R SDRA egistratic shown a at all ban ific; if all/	t, the bar able com nmands upted by on of an A state. registrat M is in th on of a P re illegal uks are id (any ban	ak is in the idle state. Immands to the other bank sho to the other bank are determ any executable command; D Auto Refresh command and e ion of a Mode Register Set co he "all banks idle" state. recharge All command and e or reserved. dle.	build be issued on any clock edge occurring du ined by its current state and according to Truth Deselect or NOP commands must be applied of ends when t_{RFC} is met. Once t_{RFC} is met, the E command and ends when t_{MRD} has been met. Of ands when t_{RP} is met. Once t_{RP} is met, all bank	n t _{RP} has ber ring these h Table 4. n each positi DDR SDRAM Once t _{MRD} is

Truth Table 3: Current State Bank n - Command to Bank n (Same Bank)

Truth Table 4: Current State Bank n - Command to Bank m (Different bank) (Part 1 of 2)

Current State	CS	RAS	CAS	WE	Command	Action	Notes
A	Н	Х	Х	Х	Deselect	NOP/continue previous operation	1-6
Any	L	н	н	н	No Operation	NOP/continue previous operation	1-6
Idle	х	x	х	х	Any Command Otherwise Allowed to Bank m		1-6
	L	L	н	н	Active	Select and activate row	1-6
Row Activating, Active, or Precharging	L	н	L	Н	Read	Select column and start Read burst	1-7
	L	н	L	L	Write	Select column and start Write burst	1-7
	L	L	н	L	Precharge		1-6
Read	L	L	н	н	Active	Select and activate row	1-6
(Auto Precharge	L	н	L	н	Read	Select column and start new Read burst	1-7
Disabled)	L	L	н	L	Precharge		1-6
	L	L	н	н	Active	Select and activate row	1-6
Write	L	н	L	Н	Read	Select column and start Read burst	1-8
(Auto Precharge Disabled)	L	н	L	L	Write	Select column and start new Write burst	1-7
	L	L	н	L	Precharge		1-6

1. This table applies when CKE n-1 was high and CKE n is high (see Truth Table 2: Clock Enable (CKE) and after t_{XSNR /} t_{XSRD} has been met (if the previous state was self refresh).

2. This table describes alternate bank operation, except where noted, i.e., the current state is for bank n and the commands shown are those allowed to be issued to bank m (assuming that bank m is in such a state that the given command is allowable). Exceptions are covered in the notes below.

Row Active: A row in the bank has been activated, and t_{RCD} has been met. No data bursts/accesses and no register accesses are in progress.

Read: A Read burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.

Write: A Write burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.

Read with Auto Precharge Enabled: See note 10.

Write with Auto Precharge Enabled: See note 10.

4. Auto Refresh and Mode Register Set commands may only be issued when all banks are idle.

5. A Burst Terminate command cannot be issued to another bank; it applies to the bank represented by the current state only.

- 6. All states and sequences not shown are illegal or reserved.
- 7. Reads or Writes listed in the Command/Action column include Reads or Writes with Auto Precharge enabled and Reads or Writes with Auto Precharge disabled.
- 8. Requires appropriate DM masking.
- 9. A Write command may be applied after the completion of data output.
- 10. The Read with Auto Precharge enabled or Write with Auto Precharge enabled states can each be broken into two parts: the access period and the precharge period. For Read with Auto Precharge, the precharge period is defined as if the same burst was executed with Auto Precharge disabled and then followed with the earliest possible Precharge command that still accesses all of the data in the burst. For Write with Auto Precharge, the precharge period begins when t_{WR} ends, with t_{WR} measured as if Auto Precharge was disabled. The access period starts with registration of the command and ends where the precharge period (or t_{RP}) begins. During the precharge period of the Read with Auto Precharge Enabled or Write with Auto Precharge Enabled states, Active, Precharge, Read, and Write commands to the other bank may be applied; during the access period, only Active and Precharge commands to the other bank may be applied. In either case, all other related limitations apply (e.g. contention between Read data and Write data must be avoided).

^{3.} Current state definitions:

Idle: The bank has been precharged, and t_{RP} has been met.



Truth Table 4: Current State Bank n - Command to Bank m (Different bank) (Part 2 of 2)

Current State	CS	RAS	CAS	WE	Command	Action	Notes
	L	L	Н	н	Active	Select and activate row	1-6
Read (With	L	н	L	Н	Read	Select column and start new Read burst	1-7,10
Auto Precharge)	L	н	L	L	Write	Select column and start Write burst	1-7,9,10
	L	L	н	L	Precharge		1-6
	L	L	н	н	Active	Select and activate row	1-6
Write (With	L	н	L	н	Read	Select column and start Read burst	1-7,10
Auto Precharge)	L	н	L	L	Write	Select column and start new Write burst	1-7,10
	L	L	Н	L	Precharge		1-6

1. This table applies when CKE n-1 was high and CKE n is high (see Truth Table 2: Clock Enable (CKE) and after t_{XSNR /} t_{XSRD} has been met (if the previous state was self refresh).

2. This table describes alternate bank operation, except where noted, i.e., the current state is for bank n and the commands shown are those allowed to be issued to bank m (assuming that bank m is in such a state that the given command is allowable). Exceptions are covered in the notes below.

3. Current state definitions: Idle: The ban

The bank has been precharged, and t_{RP} has been met.

Row Active: A row in the bank has been activated, and t_{RCD} has been met. No data bursts/accesses and no register accesses are in progress.

Read: A Read burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated.

Write: A Write burst has been initiated, with Auto Precharge disabled, and has not yet terminated or been terminated. Read with Auto Precharge Enabled: See note 10.

Write with Auto Precharge Enabled: See note 10.

4. Auto Refresh and Mode Register Set commands may only be issued when all banks are idle.

5. A Burst Terminate command cannot be issued to another bank; it applies to the bank represented by the current state only.

6. All states and sequences not shown are illegal or reserved.

7. Reads or Writes listed in the Command/Action column include Reads or Writes with Auto Precharge enabled and Reads or Writes with Auto Precharge disabled.


8. Requires appropriate DM masking.

9. A Write command may be applied after the completion of data output.

10. The Read with Auto Precharge enabled or Write with Auto Precharge enabled states can each be broken into two parts: the access period and the precharge period. For Read with Auto Precharge, the precharge period is defined as if the same burst was executed with Auto Precharge disabled and then followed with the earliest possible Precharge command that still accesses all of the data in the burst. For Write with Auto Precharge, the precharge period begins when t_{WR} ends, with t_{WR} measured as if Auto Precharge was disabled. The access period starts with registration of the command and ends where the precharge period (or t_{RP}) begins. During the precharge period of the Read with Auto Precharge Enabled or Write with Auto Precharge Enabled states, Active, Precharge, Read, and Write commands to the other bank may be applied; during the access period, only Active and Precharge commands to the other bank may be applied. In either case, all other related limitations apply (e.g. contention between Read data and Write data must be avoided).



Simplified State Diagram

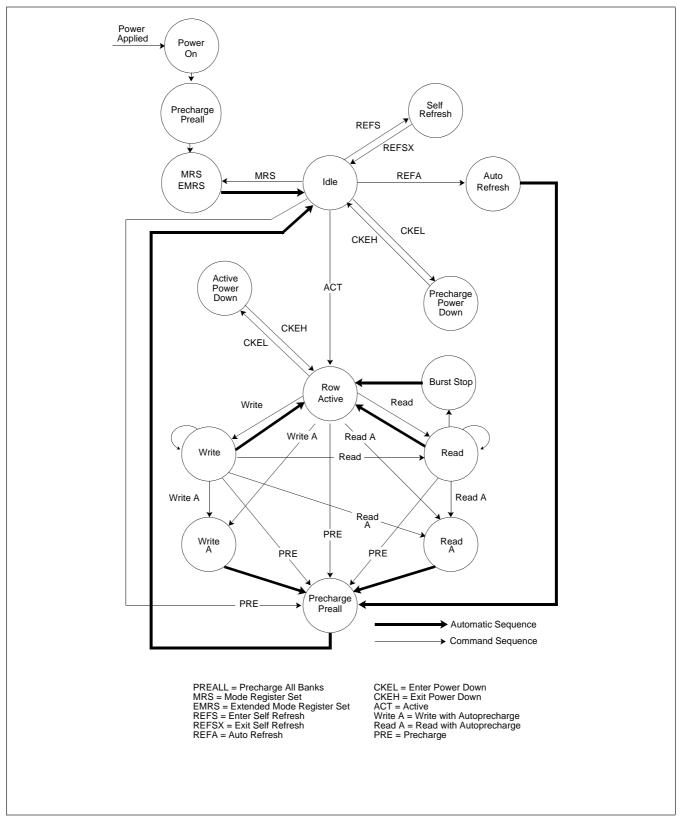



Absolute Maximum Ratings

Symbol	Parameter	Rating	Units	
V _{IN} , V _{OUT}	Voltage on I/O pins relative to V _{SS}	-0.5 to V _{DDQ} + 0.5	V	
V _{IN}	Voltage on Inputs relative to V _{SS}	-0.5 to +3.6	V	
V _{DD}	Voltage on V_{DD} supply relative to V_{SS}	-0.5 to +3.6	V	
V _{DDQ}	Voltage on V _{DDQ} supply relative to V _{SS}	-0.5 to +3.6	V	
T _A	Operating Temperature (Ambient)	0 to +70	°C	
T _{STG}	Storage Temperature (Plastic)	-55 to +150	°C	
PD	Power Dissipation	1.0	W	
I _{OUT}	Short Circuit Output Current	50	mA	

Note: Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

DQS/DQ/DM Slew Rate

Parameter	Symbol		2333 K)		266B 5B)	Unit	Notes
		Min	Max	Min	Max		
DQS/DQ/DM input slew rate	DC _{SLEW}	TBD	TBD	TBD	TBD	V/ns	1, 2

1. Measured between V IH (DC), V IL (DC), and V IL (DC), V IH (DC).

2. DQS, DQ, and DM input slew rate is specified to prevent double clocking of data and preserve setup and hold times. Signal transition through the DC region must be monotonic.

512Mb DDR SDRAM



Capacitance

Parameter	Symbol	Min.	Max.	Units	Notes
Input Capacitance: CK, CK	Cl ₁	2.0	3.0	pF	1
Delta Input Capacitance: CK, CK	delta CI ₁		0.25	pF	1
Input Capacitance: All other input-only pins (except DM)	Cl ₂	2.0	3.0	pF	1
Delta Input Capacitance: All other input-only pins (except DM)	delta Cl ₂		0.5	pF	1
Input/Output Capacitance: DQ, DQS, DM	C _{IO}	4.0	5.0	pF	1, 2
Delta Input/Output Capacitance: DQ, DQS, DM	delta C _{IO}		0.5	pF	1

1. $V_{DDQ} = V_{DD} = 2.5V \pm 0.2V$ (minimum range to maximum range), f = 100MHz, T_A = 25°C, VO_{DC} = $V_{DDQ/2}$, VO_{Peak -Peak} = 0.2V.

2. Although DM is an input-only pin, the input capacitance of this pin must model the input capacitance of the DQ and DQS pins. This is required to match input propagation times of DQ, DQS and DM in the system.

DC Electrical Characteristics and Operating Conditions

(0°C £ T_A £ 70×C; V_{DDQ} = 2.5V ± 0.2V, V_{DD} = + 2.5V ± 0.2V, see AC Characteristics)

Symbol	Parameter	Min	Max	Units	Notes
V _{DD}	Supply Voltage	2.3	2.7	V	1
V _{DDQ}	I/O Supply Voltage	2.3	2.7	V	1
V _{SS} , V _{SSQ}	Supply Voltage I/O Supply Voltage	0	0	V	
V _{REF}	I/O Reference Voltage	0.49 x V _{DDQ}	0.51 x V _{DDQ}	V	1, 2
V _{TT}	I/O Termination Voltage (System)	V _{REF} - 0.04	V _{REF} + 0.04	V	1, 3
V _{IH(DC)}	Input High (Logic1) Voltage	V _{REF} + 0.15	V _{DDQ} + 0.3	V	1
V _{IL(DC)}	Input Low (Logic0) Voltage	- 0.3	V _{REF} – 0.15	V	1
V _{IN(DC)}	Input Voltage Level, CK and CK Inputs	- 0.3	V _{DDQ} + 0.3	V	1
V _{ID(DC)}	Input Differential Voltage, CK and CK Inputs	0.30	V _{DDQ} + 0.6	V	1, 4
V _{IX(DC)}	Input Crossing Point Voltage, CK and CK Inputs	0.30	V _{DDQ} + 0.6	V	1, 4
VI _{Ratio}	V-I Matching Pullup Current to Pulldown Current Ratio	0.71	1.4		5
I	Input Leakage Current Any input $0V \le V_{IN} \le V_{DD}$; (All other pins not under test = 0V)	-2	2	μA	1
I _{OZ}	Output Leakage Current (DQs are disabled; $0V \le V_{out} \le V_{DDQ}$	- 5	5	μΑ	1
I _{ОН}	Output Current: Nominal Strength Driver	- 16.8			4
I _{OL}	High current (V _{OUT} = V _{DDQ} -0.373V, min V _{REF} , min V _{TT}) Low current (V _{OUT} = 0.373V, max V _{REF} , max V _{TT})	16.8		mA	1

1. Inputs are not recognized as valid until V_{REF} stabilizes.

2. V_{REF} is expected to be equal to 0.5 V_{DDQ} of the transmitting device, and to track variations in the DC level of the same. Peak-to-peak noise on V_{REF} may not exceed ± 2% of the DC value.

3. V_{TT} is not applied directly to the device. V_{TT} is a system supply for signal termination resistors, is expected to be set equal to V_{REF}, and must track variations in the DC level of V_{REF}.

4. V_{ID} is the magnitude of the difference between the input level on CK and the input level on CK.

5. The ratio of the pullup current to the pulldown current is specified for the same temperature and voltage, over the entire temperature and voltage range, for device drain to source voltages for 0.25 volts to 1.0 volts. For a given output, it represents the maximum difference between pullup and pulldown drivers due to process variation.



DC Electrical Characteristics and Operating Conditions

(0°C £ T_A £ 70×C; V_{DDQ} = 2.5V ± 0.2V, V_{DD} = + 2.5V ± 0.2V, see AC Characteristics)

Symbol	Parameter	Min	Max	Units	Notes
IOHW	Output Current: Half- Strength Driver	- 9.0		0	
I _{OLW}	High current (V _{OUT} = V _{DDQ} -0.763V, min V _{REF} , min V _{TT}) Low current (V _{OUT} = 0.763V, max V _{REF} , max V _{TT})	9.0		mA	1


1. Inputs are not recognized as valid until V_{REF} stabilizes.

- V_{REF} is expected to be equal to 0.5 V_{DDQ} of the transmitting device, and to track variations in the DC level of the same. Peak-to-peak noise on V_{REF} may not exceed ± 2% of the DC value.
- 3. V_{TT} is not applied directly to the device. V_{TT} is a system supply for signal termination resistors, is expected to be set equal to V_{REF}, and must track variations in the DC level of V_{REF}.
- 4. V_{ID} is the magnitude of the difference between the input level on CK and the input level on \overline{CK} .
- 5. The ratio of the pullup current to the pulldown current is specified for the same temperature and voltage, over the entire temperature and voltage range, for device drain to source voltages for 0.25 volts to 1.0 volts. For a given output, it represents the maximum difference between pullup and pulldown drivers due to process variation.

Normal Strength Driver Pulldown and Pullup Characteristics

- 1. The full variation in driver pulldown current from minimum to maximum process, temperature and voltage will lie within the outer bounding lines of the V-I curve.
- 2. It is recommended that the "typical" IBIS pulldown V-I curve lie within the shaded region of the V-I curve.

Normal Strength Driver Pulldown Characteristics

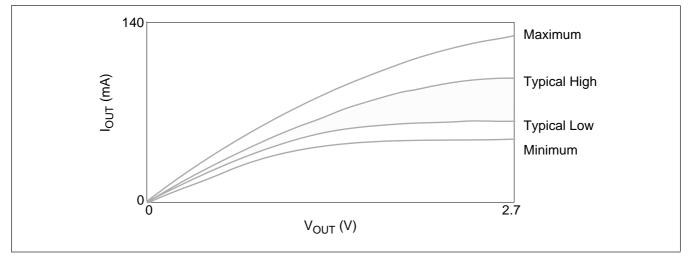


3. The full variation in driver pullup current from minimum to maximum process, temperature and voltage will lie within the outer bounding lines of the V-I curve.

4. It is recommended that the "typical" IBIS pullup V-I curve lie within the shaded region of the V-I curve.

512Mb DDR SDRAM





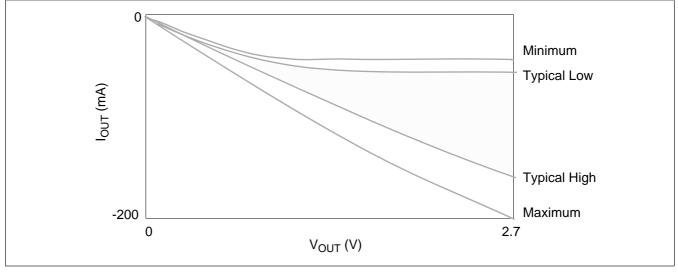

5. The full variation in the ratio of the maximum to minimum pullup and pulldown current will not exceed 1.7, for device drain to source voltages from 0.1 to 1.0.

- 6. The full variation in the ratio of the "typical" IBIS pullup to "typical" IBIS pulldown current should be unity <u>+</u> 10%, for device drain to source voltages from 0.1 to 1.0. This specification is a design objective only. It is not guaranteed.
- 7. These characteristics are intended to obey the SSTL_2 class II standard.
- 8. This specification is intended for DDR SDRAM only.



Normal Strength Driver Pulldown and Pullup Currents

[Pulldown C	urrent (mA)			Pullup Cu	rrent (mA)	
Voltage (V)	Typical Low	Typical High	Min	Max	Typical Low	Typical High	Min	Max
0.1	6.0	6.8	4.6	9.6	-6.1	-7.6	-4.6	-10.0
0.2	12.2	13.5	9.2	18.2	-12.2	-14.5	-9.2	-20.0
0.3	18.1	20.1	13.8	26.0	-18.1	-21.2	-13.8	-29.8
0.4	24.1	26.6	18.4	33.9	-24.0	-27.7	-18.4	-38.8
0.5	29.8	33.0	23.0	41.8	-29.8	-34.1	-23.0	-46.8
0.6	34.6	39.1	27.7	49.4	-34.3	-40.5	-27.7	-54.4
0.7	39.4	44.2	32.2	56.8	-38.1	-46.9	-32.2	-61.8
0.8	43.7	49.8	36.8	63.2	-41.1	-53.1	-36.0	-69.5
0.9	47.5	55.2	39.6	69.9	-43.8	-59.4	-38.2	-77.3
1.0	51.3	60.3	42.6	76.3	-46.0	-65.5	-38.7	-85.2
1.1	54.1	65.2	44.8	82.5	-47.8	-71.6	-39.0	-93.0
1.2	56.2	69.9	46.2	88.3	-49.2	-77.6	-39.2	-100.6
1.3	57.9	74.2	47.1	93.8	-50.0	-83.6	-39.4	-108.1
1.4	59.3	78.4	47.4	99.1	-50.5	-89.7	-39.6	-115.5
1.5	60.1	82.3	47.7	103.8	-50.7	-95.5	-39.9	-123.0
1.6	60.5	85.9	48.0	108.4	-51.0	-101.3	-40.1	-130.4
1.7	61.0	89.1	48.4	112.1	-51.1	-107.1	-40.2	-136.7
1.8	61.5	92.2	48.9	115.9	-51.3	-112.4	-40.3	-144.2
1.9	62.0	95.3	49.1	119.6	-51.5	-118.7	-40.4	-150.5
2.0	62.5	97.2	49.4	123.3	-51.6	-124.0	-40.5	-156.9
2.1	62.9	99.1	49.6	126.5	-51.8	-129.3	-40.6	-163.2
2.2	63.3	100.9	49.8	129.5	-52.0	-134.6	-40.7	-169.6
2.3	63.8	101.9	49.9	132.4	-52.2	-139.9	-40.8	-176.0
2.4	64.1	102.8	50.0	135.0	-52.3	-145.2	-40.9	-181.3
2.5	64.6	103.8	50.2	137.3	-52.5	-150.5	-41.0	-187.6
2.6	64.8	104.6	50.4	139.2	-52.7	-155.3	-41.1	-192.9
2.7	65.0	105.4	50.5	140.8	-52.8	-160.1	-41.2	-198.2

Normal Strength Driver Evaluation Conditions


	Typical	Minimum	Maximum
Temperature (T _{ambient})	25 °C	70 °C	0 °C
V _{DDQ}	2.5V	2.3V	2.7V
Process conditions	typical process	slow-slow process	fast-fast process

AC Characteristics

(Notes 1-5 apply to the following Tables; Electrical Characteristics and DC Operating Conditions, AC Operating Conditions, I_{DD} Specifications and Conditions, and Electrical Characteristics and AC Timing.)

- 1. All voltages referenced to V_{SS} .
- Tests for AC timing, I_{DD}, and electrical, AC and DC characteristics, may be conducted at nominal reference/supply voltage levels, but the related specifications and device operation are guaranteed for the full voltage range specified.
- 3. Outputs measured with equivalent load. Refer to the AC Output Load Circuit below.
- 4. AC timing and I_{DD} tests may use a V_{IL} to V_{IH} swing of up to 1.5V in the test environment, but input timing is still referenced to V_{REF} (or to the crossing point for CK, CK), and parameter specifications are guaranteed for the specified AC input levels under normal use conditions. The minimum slew rate for the input signals is 1V/ns in the range between V_{IL(AC)} and V_{IH(AC)}.
- 5. The AC and DC input level specifications are as defined in the SSTL_2 Standard (i.e. the receiver effectively switches as a result of the signal crossing the AC input level, and remains in that state as long as the signal does not ring back above (below) the DC input low (high) level.

AC Output Load Circuit Diagrams

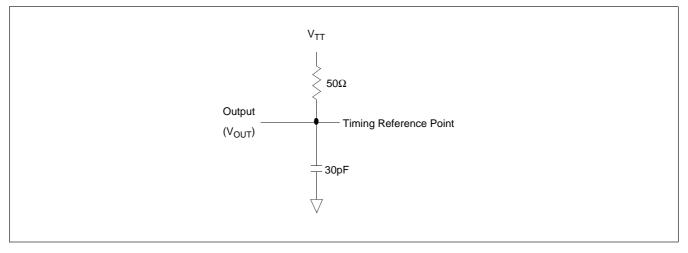



AC Input Operating Conditions (0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V, See AC

Characteristics)

Symbol	Parameter/Condition	Min	Max	Unit	Notes
V _{IH(AC)}	Input High (Logic 1) Voltage, DQ, DQS, and DM Signals	V _{REF} + 0.31		V	1, 2
V _{IL(AC)}	Input Low (Logic 0) Voltage, DQ, DQS, and DM Signals		V _{REF} – 0.31	V	1, 2
V _{ID(AC)}	Input Differential Voltage, CK and CK Inputs	0.62	V _{DDQ} + 0.6	V	1, 2, 3
V _{IX(AC)}	Input Crossing Point Voltage, CK and CK Inputs	$0.5^*V_{DDQ} - 0.2$	0.5*V _{DDQ} + 0.2	V	1, 2, 4

1. Input slew rate = 1V/ns.

2. Inputs are not recognized as valid until $\mathsf{V}_{\mathsf{REF}}$ stabilizes.

3. V_{ID} is the magnitude of the difference between the input level on CK and the input level on \overline{CK} .

4. The value of V_{IX} is expected to equal $0.5*V_{DDQ}$ of the transmitting device and must track variations in the DC level of the same.

I_{DD} **Specifications and Conditions** (0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V, See AC Characteristics)

Symbol	Parameter/Condition	DDR333 (-6K) t _{CK} =6ns	DDR266B (-75B) t _{CK} =7.5ns	Unit	Notes
I _{DD0}	Operating Current : one bank; active / precharge; $t_{RC} = t_{RC}$ (min); DQ, DM, and DQS inputs changing twice per clock cycle; address and control inputs changing once per clock cycle	160	160 125 mA		1
I _{DD1}	Operating Current : one bank; active / read / precharge; Burst = 2; $t_{RC} = t_{RC}$ (min); CL = 2.5; $I_{OUT} = 0$ mA; address and control inputs changing once per clock cycle	170	150 mA		1
I _{DD2P}	Precharge Power Down Standby Current : all banks idle; Power Down mode; CKE \leq V _{IL} (max)	15	15	mA	1
I _{DD2N}	$\label{eq:linear} \begin{array}{llllllllllllllllllllllllllllllllllll$	40	40 m.		1
I _{DD3P}	Active Power Down Standby Current: one bank active; Power Down mode; CKE \leq V _{IL} (max)	18	18	mA	1
I _{DD3N}	Active Standby Current: one bank; active / precharge; $\overline{CS} \ge V_{IH}$ (min); CKE $\ge V_{IH}$ (min); t _{RC} = t _{RAS} (max); DQ, DM, and DQS inputs changing twice per clock cycle; address and control inputs changing once per clock cycle	70	70	mA	1
I _{DD4R}	Operating Current: one bank; Burst = 2; reads; continuous burst; address and control inputs changing once per clock cycle; DQ and DQS outputs changing twice per clock cycle; CL = 2.5; I _{OUT} = 0mA	200	200	mA	1
I _{DD4W}	Operating Current : one bank; Burst = 2; writes; continuous burst; address and control inputs changing once per clock cycle; DQ and DQS inputs changing twice per clock cycle; CL = 2.5	215	195	mA	1
I _{DD5}	Auto-Refresh Current: t _{RC} = t _{RFC} (min)	360	300	mA	1
I _{DD6}	Self-Refresh Current: CKE ≤ 0.2V	4	4	mA	1, 2
I _{DD7}	Operating current : four bank; four bank interleaving with BL = 4, address and control inputs randomly changing; 50% of data changing at every trans- fer; t RC = t RC (min); I OUT = 0mA.	420	395	mA	1

2. Enables on-chip refresh and address counters.



Electrical Characteristics & AC Timing - Absolute Specifications (0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V, See AC Characteristics) (Part 1 of 2)

Symbol	Parameter		DDR333 (-6K)		DDR266B (-75B)		Unit	Notes
			Min	Max	Min	Max		
t _{AC}	DQ output access time from CK/CK		- 0.7	+ 0.7	- 0.75	+ 0.75	ns	1-4
t _{DQSCK}	DQS output access time from CK/CK		- 0.6	+ 0.6	- 0.75	+ 0.75	ns	1-4
t _{CH}	CK high-level width		0.45	0.55	0.45	0.55	t _{CK}	1-4
t _{CL}	CK low-level width		0.45	0.55	0.45	0.55	t _{CK}	1-4
		CL = 2.5	6	12	7.5	12		1-4
t _{CK}	Clock cycle time	CL = 2.0	7.5	12	10	12	ns	
t _{DH}	DQ and DM input hold time		0.45		0.5		ns	1-4, 15, 1
t _{DS}	DQ and DM input setup time		0.45		0.5		ns	1-4, 15, 1
t _{IPW}	Input pulse width		2.2		2.2		ns	2-4, 1
t _{DIPW}	DQ and DM input pulse width (each inp	ut)	1.75		1.75		ns	1-4
t _{HZ}	Data-out high-impedance time from CK	/CK	- 0.7	+ 0.7	- 0.75	+ 0.75	ns	1-4, :
t _{LZ}	Data-out low-impedance time from CK/CK		- 0.7	+ 0.7	- 0.75	+ 0.75	ns	1-4, 8
	DQS-DQ skew (DQS & associated DQ	TSOP Package		+ 0.45		+ 0.5	ns	1-4
	signals)	BGA Package		+ 0.4		+ 0.5	ns	1-4
t _{HP}	Minimum half clk period for any given cycle; defined by clk high (t_{CH}) or clk low (t_{CL}) time		min (t _{CL} , t _{CH})		min (t _{CL} , t _{CH})		t _{CK}	1-4
t _{QH}	Data output hold time from DQS		t _{HP} - t _{QHS}		t _{HP} - t _{QHS}		t _{CK}	1-4
	Data hald Skow Fastar	TSOP Package		0.55		0.75	t _{CK}	1-4
t _{QHS}	Data hold Skew Factor	BGA Package		0.5		0.75	t _{CK}	1-4
t _{DQSS}	Write command to 1st DQS latching transition	1	0.75	1.25	0.75	1.25	t _{СК}	1-4
t _{DQSH}	DQS input high pulse width (write cycle)	0.35		0.35		t _{CK}	1-4
t _{DQSL}	DQS input low pulse width (write cycle)		0.35		0.35		t _{CK}	1-4
t _{DSS}	DQS falling edge to CK setup time (writ	e cycle)	0.2		0.2		t _{CK}	1-4
t _{DSH}	DQS falling edge hold time from CK (wi	rite cycle)	0.2		0.2		t _{CK}	1-4
t _{MRD}	Mode register set command cycle time		2		2		t _{CK}	1-4
t _{WPRES}	Write preamble setup time		0		0		ns	1-4,
t _{WPST}	Write postamble		0.40	0.60	0.40	0.60	t _{CK}	1-4, 0
t _{WPRE}	Write preamble		0.25		0.25		t _{CK}	1-4
t _{IH}	Address and control input hold time (fast slew rate)		0.75		0.9		ns	2-4, 9 11, 1
t _{IS}	Address and control input setup time (fast slew rate)		0.75		0.9		ns	2-4, 9 11, 1
t _{IH}	Address and control input hold time (slow slew rate)		0.8		1.0		ns	2-4, 1 11, 12,



Electrical Characteristics & AC Timing - Absolute Specifications (0 °C \leq T_A \leq 70 °C; V_{DDQ} = 2.5V \pm 0.2V; V_{DD} = 2.5V \pm 0.2V, See AC Characteristics) (Part 2 of 2)

Symbol	Parameter	DDR333 (-6K)		DDR266B (-75B)		Unit	Notes
-		Min	Max	Min	Max		
t _{IS}	Address and control input setup time (slow slew rate)	0.8		1.0		ns	2-4, 10, 11, 12, 14
t _{RPRE}	Read preamble	0.9	1.1	0.9	1.1	t _{СК}	1-4
t _{RPST}	Read postamble	0.40	0.60	0.40	0.60	t _{CK}	1-4
t _{RAS}	Active to Precharge command	42	120,000	45	120,000	ns	1-4
t _{RC}	Active to Active/Auto-refresh command period	60		65		ns	1-4
t _{RFC}	Auto-refresh to Active/Auto-refresh command period	72		75		ns	1-4
t _{RCD}	Active to Read or Write delay	18		20		ns	1-4
t _{RAP}	Active to Read Command with Autoprecharge	min (t _{RCD} , t _{RAS})		min (t _{RCD} , t _{RAS})		ns	1-4
t _{RP}	Precharge command period	18		20		ns	1-4
t _{RRD}	Active bank A to Active bank B command	12		15		ns	1-4
t _{WR}	Write recovery time	15		15		ns	1-4
t _{DAL}	Auto precharge write recovery + precharge time	(t _{WR} /t _{CK}) + (t _{RP} /t _{CK})		(t _{WR} /t _{CK}) + (t _{RP} /t _{CK})		t _{СК}	1-4, 13
t _{WTR}	Internal write to read command delay	1		1		t _{CK}	1-4
t _{PDEX}	Power down exit time	6		7.5		ns	1-4
t _{XSNR}	Exit self-refresh to non-read command	75		75		ns	1-4
t _{XSRD}	Exit self-refresh to read command	200		200		t _{CK}	1-4
t _{REFI}	Average Periodic Refresh Interval		7.8		7.8	μs	1-4, 8



Electrical Characteristics & AC Timing - Absolute Specifications Notes

- 1. Input slew rate = 1V/ns.
- 2. The CK/CK input reference level (for timing reference to CK/CK) is the point at which CK and CK cross; the input reference level for signals other than CK/CK is V_{REF}.
- 3. Inputs are not recognized as valid until V_{REF} stabilizes.
- The Output timing reference level, as measured at the timing reference point indicated in AC Characteristics (Note 3) is V_{TT}.
- t_{HZ} and t_{LZ} transitions occur in the same access time windows as valid data transitions. These parameters are not referred to a specific voltage level, but specify when the device is no longer driving (HZ), or begins driving (LZ).
- 6. The maximum limit for this parameter is not a device limit. The device operates with a greater value for this parameter, but system performance (bus turnaround) degrades accordingly.
- 7. The specific requirement is that DQS be valid (high, low, or some point on a valid transition) on or before this CK edge. A valid transition is defined as monotonic and meeting the input slew rate specifications of the device. When no writes were previously in progress on the bus, DQS will be transitioning from Hi-Z to logic LOW. If a previous write was in progress, DQS could be HIGH, LOW, or transitioning from high to low at this time, depending on t_{DQSS}.
- 8. A maximum of eight Autorefresh commands can be posted to any given DDR SDRAM device.
- 9. For command/address input slew rate ≥ 1.0V/ns. Slew rate is measured between V_{OH} (AC) and V_{OL} (AC).
- 10. For command/address input slew rate \ge 0.5V/ns and < 1.0V/ns. Slew rate is measured between V_{OH} (AC) and V_{OL} (AC).
- 11. CK/ \overline{CK} slew rates are \geq 1.0V/ns.
- 12. These parameters guarantee device timing, but they are not necessarily tested on each device, and they may be guaranteed by design or tester characterization.
- For each of the terms in parentheses, if not already an integer, round to the next highest integer. t_{CK} is equal to the actual system clock cycle time. For example, for DDR266B at CL = 2.5, t_{DAL} = (15ns/7.5ns) + (20ns/7.5ns) = 2 + 3 = 5.

NT5DS128M4AF NT5DS64M8AF NT5DS32M16AF 512Mb DDR SDRAM



14. An input setup and hold time derating table is used to increase t_{IS} and t_{IH} in the case where the input slew rate is below 0.5 V/ns.

Input Slew Rate	delta (t _{IS})	delta (t _{IH})	Unit	Notes
0.5 V/ns	0	0	ps	1,2
0.4 V/ns	+50	0	ps	1,2
0.3 V/ns	+100	0	ps	1,2

1. Input slew rate is based on the lesser of the slew rates determined by either V IH (AC) to V IL (AC) or V IH (DC) to V IL (DC), similarly for rising transitions.

2. These derating parameters may be guaranteed by design or tester characterization and are not necessarily tested on each device.

15. An input setup and hold time derating table is used to increase t_{DS} and t_{DH} in the case where the I/O slew rate is below 0.5 V/ns.

Input Slew Rate	delta (t _{DS})	delta (t _{DH})	Unit	Notes
0.5 V/ns	0	0	ps	1,2
0.4 V/ns	+75	+75	ps	1,2
0.3 V/ns	+150	+150	ps	1,2

1. I/O slew rate is based on the lesser of the slew rates determined by either V IH (AC) to V IL (AC) or V IH (DC) to V IL (DC), similarly for rising transitions.

2. These derating parameters may be guaranteed by design or tester characterization and are not necessarily tested on each device.

16. An I/O Delta Rise, Fall Derating table is used to increase t_{DS} and t_{DH} in the case where DQ, DM, and DQS slew rates differ.

Input Slew Rate	delta (t _{DS})	delta (t _{DH})	Unit	Notes
0.0 V/ns	0	0	ps	1,2,3,4
0.25 V/ns	+50	+50	ps	1,2,3,4
0.5 V/ns	+100	+100	ps	1,2,3,4

1. Input slew rate is based on the lesser of the slew rates determined by either V IH (AC) to V IL (AC) or V IH (DC) to V IL (DC), similarly for rising transitions.

2. Input slew rate is based on the larger of AC to AC delta rise, fall rate and DC to DC delta rise, fall rate.

3. The delta rise, fall rate is calculated as: [1/(slew rate 1)] - [1/(slew rate 2)]

For example: slew rate 1 = 0.5 V/ns; slew rate 2 = 0.4 V/ns

Delta rise, fall = (1/0.5) - (1/0.4) [ns/V]

= -0.5 ns/V


Using the table above, this would result in an increase in t DS and t DH of 100 ps.

4. These derating parameters may be guaranteed by design or tester characterization and are not necessarily tested on each device.


512Mb DDR SDRAM



Data Input (Write) (Timing Burst Length = 4)

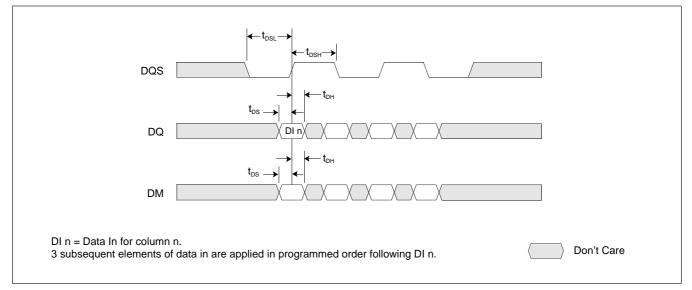


Data Output (Read) (Timing Burst Length = 4)

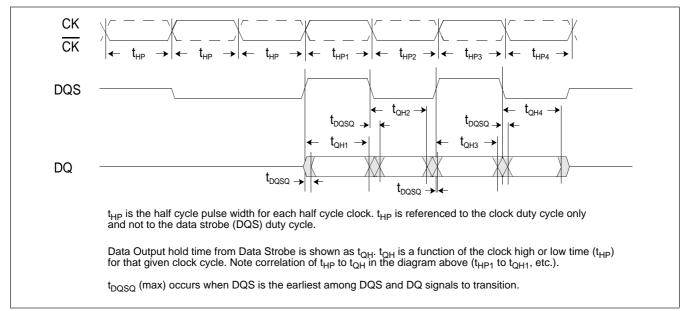

512Mb DDR SDRAM




Initialize and Mode Register Sets

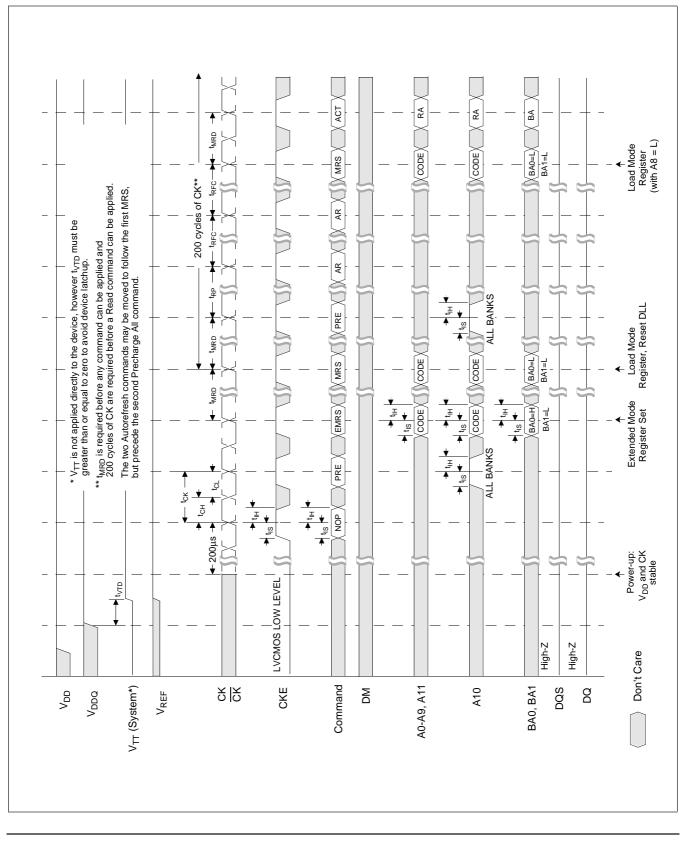

512Mb DDR SDRAM




Power Down Mode

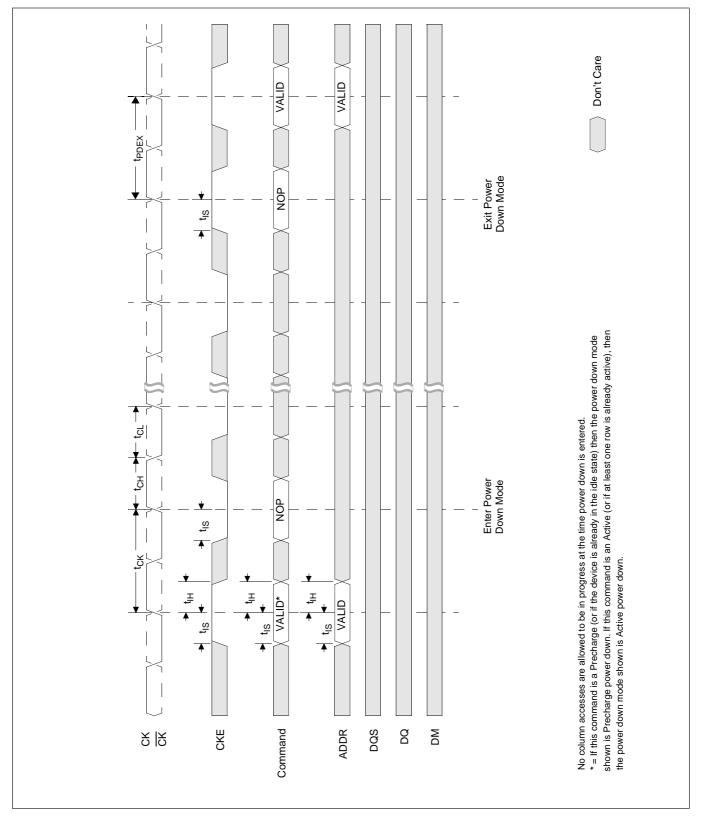

512Mb DDR SDRAM




Auto Refresh Mode

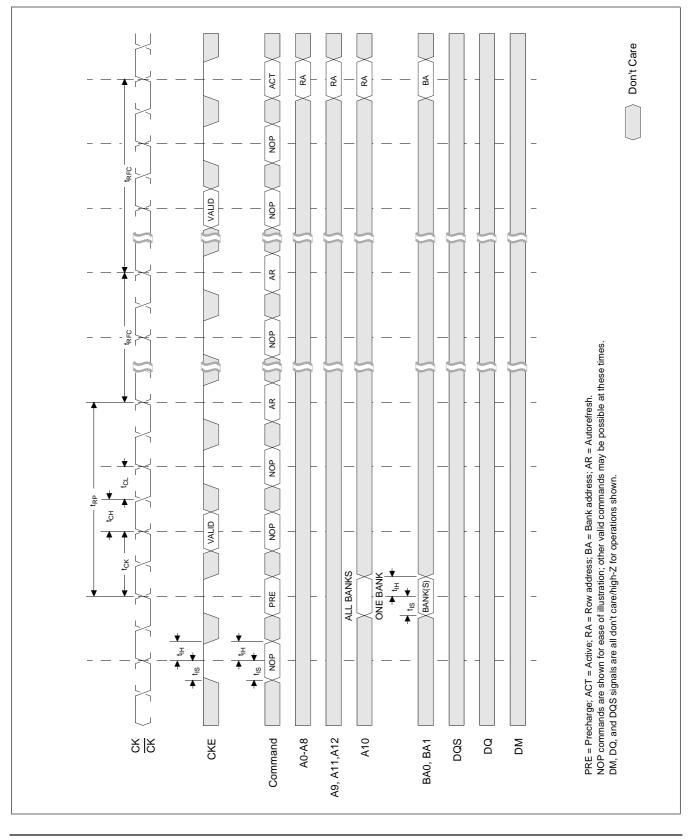

NT5DS128M4AF NT5DS64M8AF NT5DS32M16AF




Self Refresh Mode

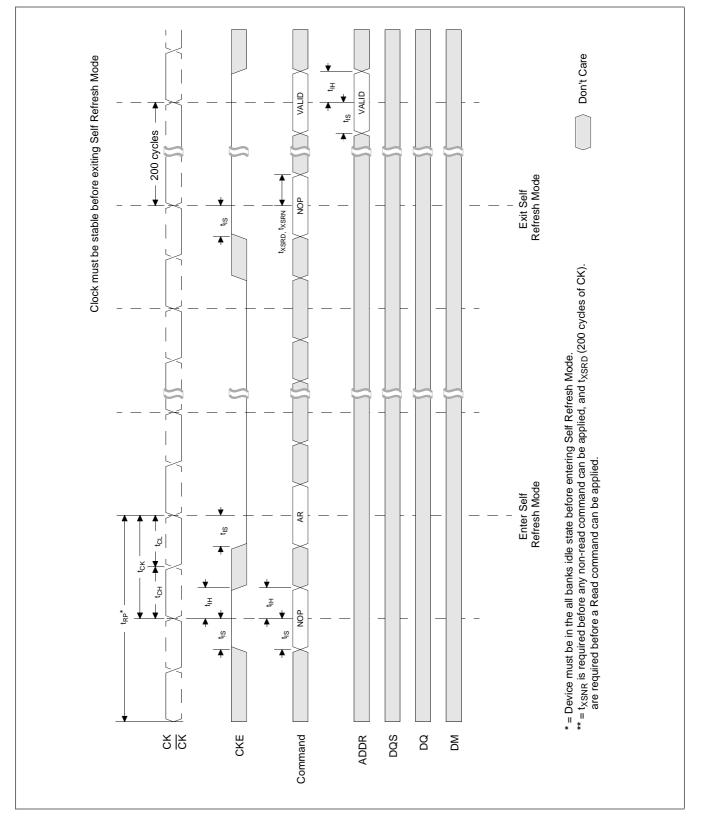


512Mb DDR SDRAM



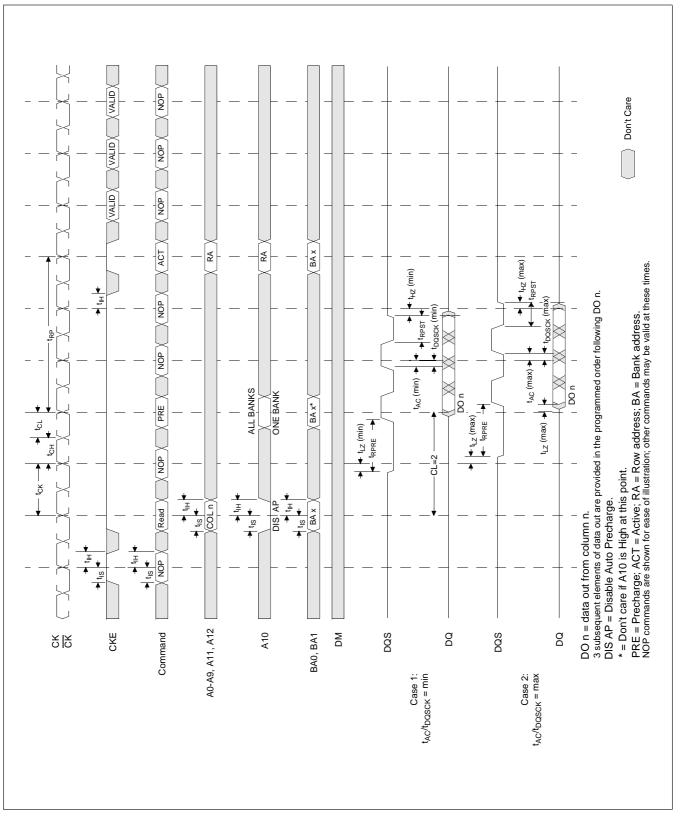

512Mb DDR SDRAM



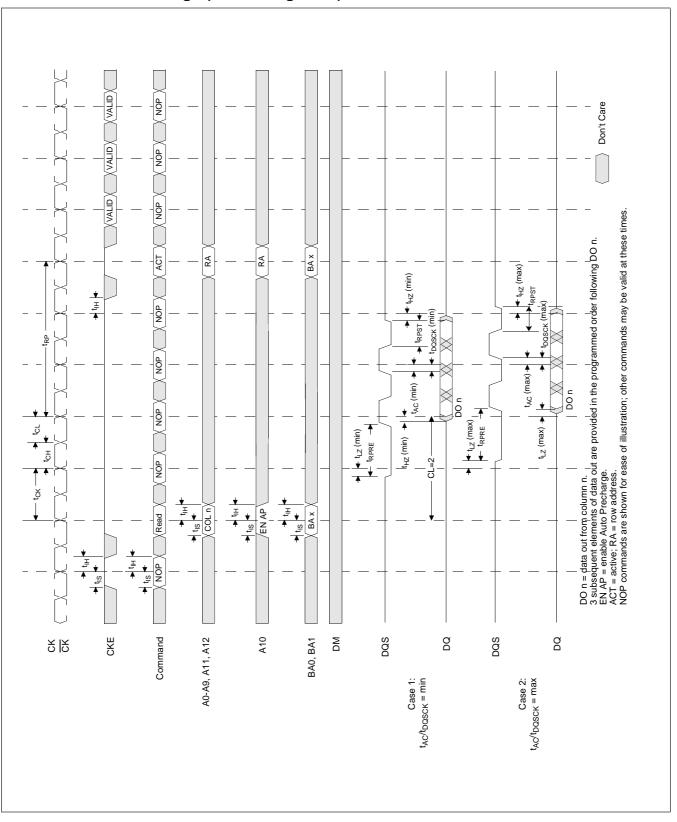


Read with Auto Precharge (Burst Length = 4)

NANYA TECHNOLOGY CORP. reserves the right to change Products and Specifications without notice.

512Mb DDR SDRAM




Bank Read Access (Burst Length = 4)

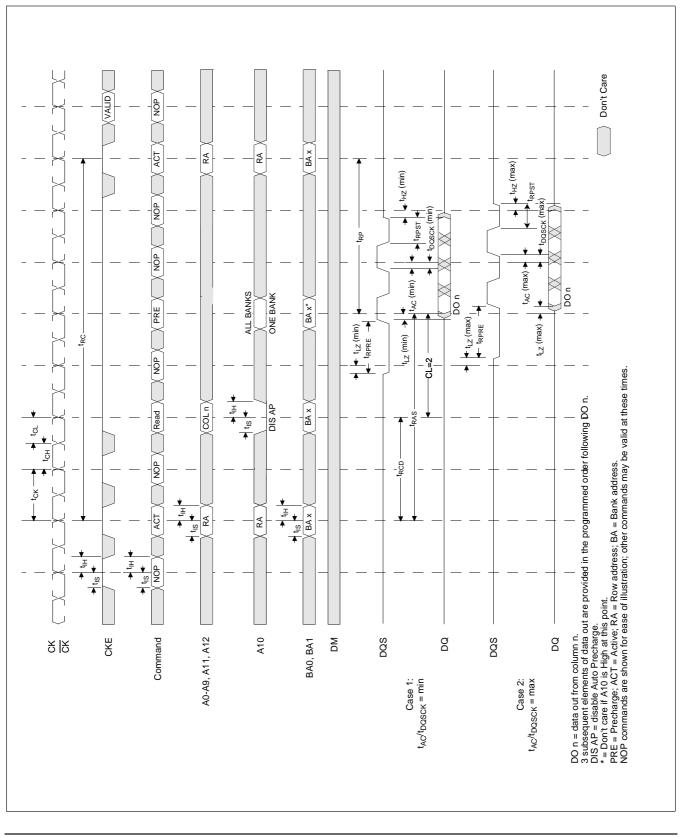


NANYA TECHNOLOGY CORP. reserves the right to change Products and Specifications without notice.



Write without Auto Precharge (Burst Length = 4)

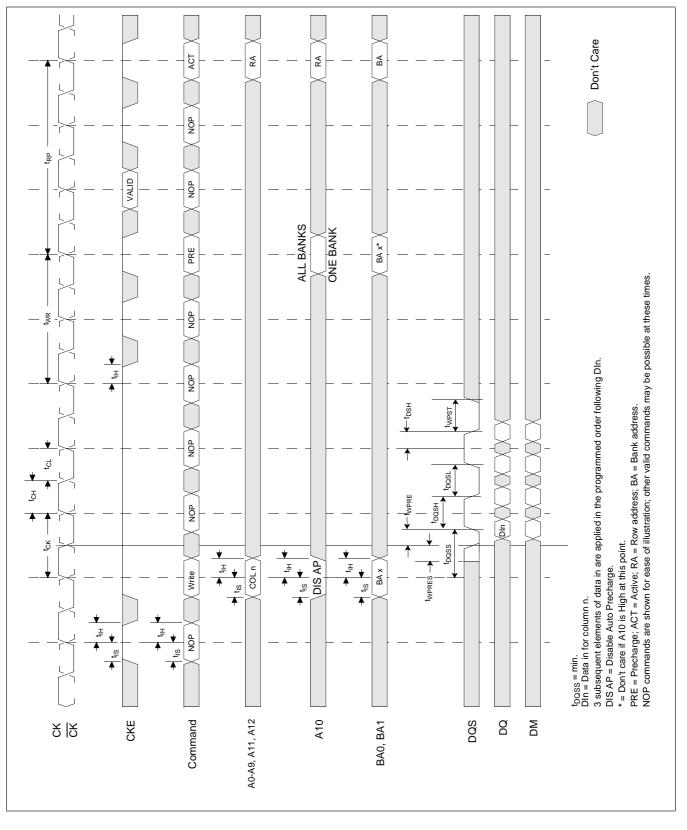




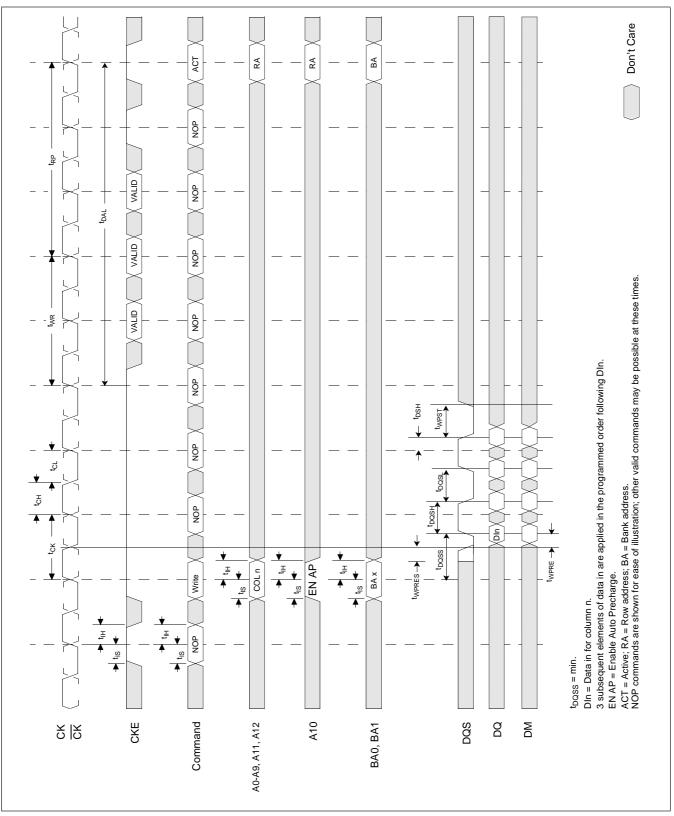

Write with Auto Precharge (Burst Length = 4)



Bank Write Access (Burst Length = 4)

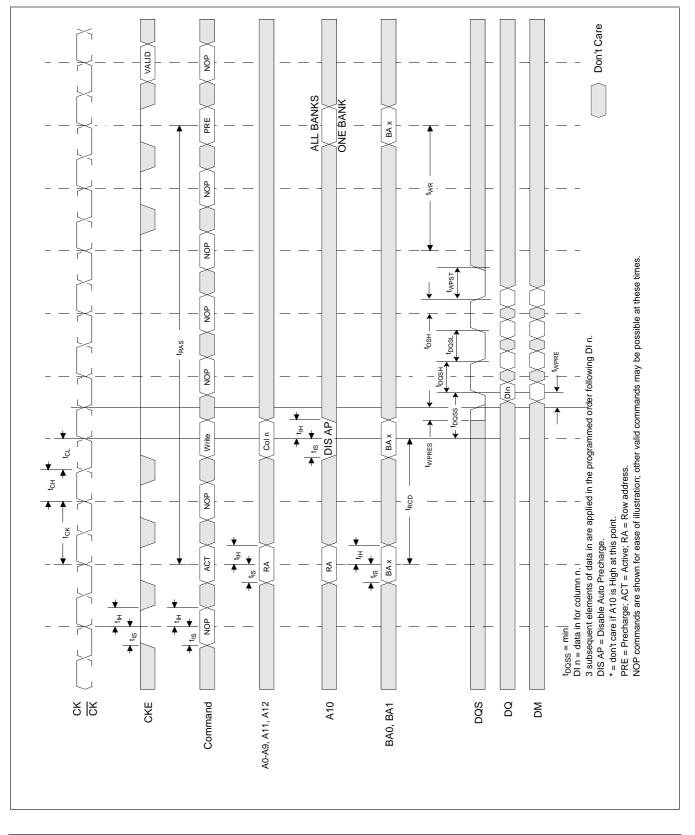




Write DM Operation (Burst Length = 4) Don't Care ACT RA RA BA ЧON RP. VALID NOP 3 subsequent elements of data in are applied in the programmed order following DI n (the second element of the 4 is masked) DIS AP = Disable Auto Precharge. ALL BANKS BANK BA x* PRE -NO PRE = Precharge; ACT = Ăctive; RA = Row address; BA = Bank address. NOP commands are shown for ease of illustration; other valid commands may be possible at these times. NOP NOP (— t_{DSH} twpst NOP Ę DOSL с Ц NOP ^tDQSH . E * = Don't care if A10 is High at this point. ç SOL ¥ ¥ ¥ ♦ t_{is} ♦ DIS AP ± ≣ ≣ ≣ ∎ WPRES COL n t tis ≣. ≹ BA x ♦ tis Write DI n = data in for column n. . Ē ₹ NOP ¥ ¥ ٨ ↓ t_{IS} t_{IS} Dass = min. 4 СKЕ A10 DQS ЯŖ g MD Command A0-A9, A11, A12 BA0, BA1

512Mb DDR SDRAM



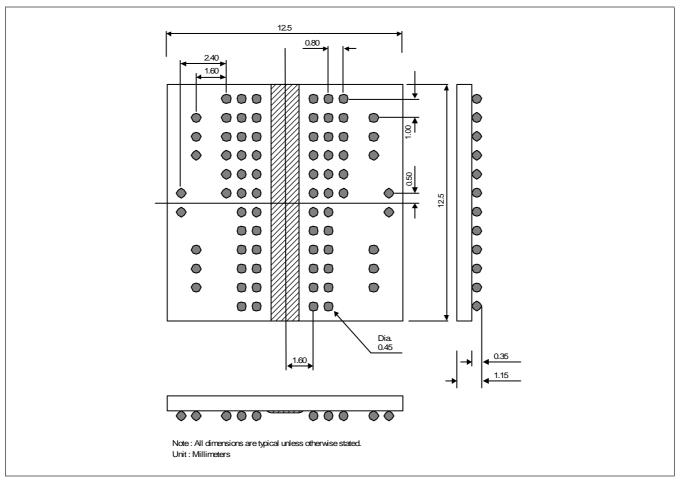

Package Dimensions (60 balls + 16 support balls; 0.8mmx1.0mm Pitch; CSP BGA Package)

512Mb DDR SDRAM



Revision Log

Rev	Date	Modification	
0.1	04/2003	Preliminary Release	
0.2	0.2 04/2003	Fixed typo in Pin Configuration	
0.2		Updated support/thermal balls in Package Dimensions	
0.3	05/2003	Jpdated currents in I _{DD} Specifications and Conditions table	
1.0	06/2003	Official Release	
1.1	12/2003	Jpdated I _{DD} Testing Data	
1.2	10 Mar 2004	Updated DDR333 I _{DD0} , I _{DD1} and I _{DD5} data x4 wide product removed from spec	
1.3	13 Oct 2004	Updated to have NT5DS128MAF	

512Mb DDR SDRAM





Nanya Technology Corporation.

Copyright 2004.

All rights reserved.

The following are trademarks of NANYA TECHNOLOGY CORPORATION: NANYA and the NANYA logo.

Other company, product and service names may be trademarks or service marks of others.

NANYA TECHNOLOGY CORPORATION (NTC) reserves the right to make changes without notice. NTC warrants performance of its semiconductor products and related software to the specifications applicable at the time of sale in accordance with NTC's standard warranty. Testing and other quality control techniques are utilize to the extent NTC deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Certain applications using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage ("Critical Applications").

NTC SEMICONDUCTOR PRODUCTS ARE NOT DESIGNED, INTEND, AUTHORIZED, OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS OR OTHER CRITICAL APPLICATIONS.

Inclusion of NTC products in such applications is understood to be fully at the risk of the customer. Use of NTC products in such applications requires the written approval of an appropriate NTC officer. Question concerning potential risk applications should be directed to NTC through a local sales office.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards should be provided by customer to minimize the inherent or procedural hazards.

NTC assumes no liability of applications assistance, customer product design, software performance, or infringement of patents or services described herein. Nor does NTC warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of NTC covering or relating to any combination, machine, or process in which such semiconductor products or services might be or are used.

NANYA TECHNOLOGY CORPORATION HWA YA Technology Park 669, FU HSING 3rd Rd., Kueishan, Taoyuan, Taiwan, R.O.C.

The NANYA TECHNOLOGY CORPORATION home page can be found at http://www.nanya.com