NAIS

COMPACT BUT CUT OFF DC **POWER CURRENT, POWER** CAPSULE CONTACT RELAY.

EV-RELAYS



30a

FEATURES

- Small size & light weight: size 1/4, weight 1/2(compared to conventional contactors)
- · No arc space is required: size including arc space 1/9 (compared to conventional contactors)

The arc is not exposed to the outside, therefore, no arc space is not required.

Safety construction

The arc is not exposed, therefore, the contactor is explosion proof and intrinsically safe.

• Quiet: operation noise 1/4 (compared to conventional contactors).

Along with the above-mentioned miniaturization, the operation noise has been reduced to 70dB, and, in addition, the

operation noise remains unchanged when a current of 1000A or more is inter-

· High contact reliability

The contact part is hermetically sealed with H2 mixed gas, hence the contact resistance remains stable regardless of the ambient conditions.

- Mounting direction is not specified The weight of the movable parts is light, and also the restoring force is large, hence the contactor is relatively unaffected by gravity.
- Line-up of indicator Type (150A Type

A line-up of relays with indicator that can monitor the relay operation.

SPECIFICATIONS

60a

Contact

Туре		150A type	60A type	30A type	
Arrangement		1 Form A, 2 Form A	1 Form A	1 Form A	
Rating	Nominal switching capacity (resistive load)	150A 400V DC	60A 400V DC	30A 400V DC	
	Short term current	300A (10min) (40mm²)	120A (15min) (15mm²)	60A (5min) (5.5mm ²)	
	Max. cut-off current	2,500A 300V DC (3 cycles)#1	600A 300V DC (5 cycles)	_	
	Overload opening/closing rating	600A 300V DC (25 cycles)	120A 400V DC (50 cycles)	120A 400V DC (50 cycles)	
	Contact voltage drop (Max.)	0.1V (When current (is 150A per 1) contact set)	0.1V (When current (is 60A per 1) contact set)	0.2V (When current (is 30A per 1) contact set)	
Nominal operating power		35W (Inrush, approx 0.1s) 5W (Stable)	Max. 5W	Max. 5W	
Expected life (min. operations)	Mechanical	1 Form A: 10 ⁵ 2 Form A: 5 × 10 ⁴	10 ⁵		
	Electrical	150A 400V DC 10³ L/R ≦ 1ms	60A 400V DC 10 ³ L/R ≦ 1ms	30A 400V DC 3 × 10 ⁴ L/R ≦ 1ms	

Characteristics

Initial insulation resistance			Min. 100 MΩ (at 500 V DC)*1		
Initial	Between open contacts		AC 2,500 Vrms for 1 min.*2		
breakdown voltage	Between contact and coil		AC 2,500 Vrms for 1 min.*2		
Operate time (at 20°C) (at nominal voltage)			Max. 50ms ⁻³		
Reset time (without diode) (at 20°C) (at nominal voltage)		ltage)	Max. 30ms*4		
Shock resistance		Functional	Min. 196 m/s ² {20 G} ^{*5}		
		Destructive	Min. 490 m/s ² {50 G} ^{*6}		
Vibration resistance		Functional	43 m/s ² {4.4 G} 10 to 200Hz ⁻⁷		
Vibration resistance		Destructive 43 m/s ² {4.4 G} 10 to 200 Hz ⁻⁸			
Conditions for operation, transport and storage (Not freezing and condensing at low temperature)		Ambient temperature	-40°C to +80°C -40°F to +176°F⁺9		
		Humidity	5 to 85% R.H.		
Unit weight			150 A 1 Form A: 660 g 21.16oz 150 A 2 Form A: 1,100 g 38.80o 60 A: 330 g 11.64oz 30 A: 310 g 10.93oz		

Remarks

- * Specifications will vary with foreign standards certification ratings.

 Measurement at same location as "Initial breakdown voltage" section.
- ² Detection current: 10mA.
- *3 Nominal voltage applied to the coil, excluding bounce time.
- ^{*4} Nominal voltage applied to the coil.
- *5 Half-wave pulse of sine wave: 11 ms; detection time: 10μs.
- ^{*6} Half-wave pulse of sine wave: 6 ms.

- *7 Detection time: 10 us
- *8 3 directions, each 4 hours
- *9 Storage: Max.85°C 185°F.

Same specifications as the 12 V type.

#1 Condition: Nominal switching 100cycles, each cut off 2,500A

Indicator ratings

Arrangement	1 Form A	1 Form B	
Material	Gold-clad		
Rating (resistive load)	0.1 A 30 V DC		
Contact resistance	Max. 100 m MΩ		


Note:

Indicator type is only available for the 150 A type.

TYPICAL APPLICATIONS

- Electric Vehicle
- Hybrid Electric Vehicle

ORDERING INFORMATION



Packing quantity

Types	Inner	Outer
150A 2 Form A	1pc.	5pcs.
150A 1 Form A	1pc.	10pcs.
60A 1 Form A	1pc.	20pcs.
30A 1 Form A	1pc.	20pcs.

SPARE PARTS

Installing parts	Part No.	Packing Quantity	
M8 nut with washer for 150A type	AEV801	2pcs.	
M5 screw for 60A type	AEV802	2pcs.	
M4 screw for 30A type	AEV803	2pcs.	
Bus bar for 60A type	AEV804	1pcs.	

TYPES AND COIL DATA (at 20°C 68°F)


Part No.	Coil voltage, V DC	Pick-up voltage, V DC (max.)	Drop-out voltage, V DC (min.)	Nominal coil current, mA (±10%)	Operating power, W (12 V DC)	Max. allowable voltage, V DC
AEV25012*	12 V DC	9 V DC	1 V DC	2.8 A (at peak)*	35W (Inrush, approx. 0.1S) 5W (Stable)	16 V DC
AEV15012*						
AEV16012				0.415 A	Max. 5W	
AEV13012						
AEV25024*	24 V DC	18 V DC	2 V DC	1.9 A (at peak)*	35W (Inrush, approx. 0.1S) Max. 5W (1 Form A) Max. 6W (2 Form A)	32 V DC
AEV15024*				2.2 A (at peak)*		
AEV16024				0.208 A	Max. 5W	
AEV13024						

Note:


^{*} Same coil data as Indicator type.

DIMENSIONS mm inch


150A 2a

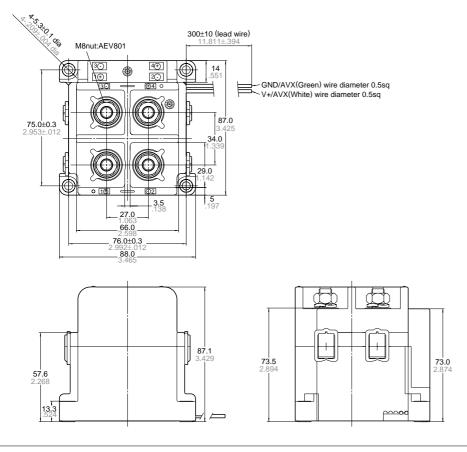

Schematic (TOP VIEW)




Mounting dimensions

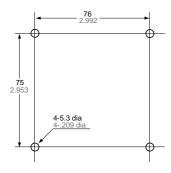


General tolerance:

less than 10 (.394) ± 0.3 $(\pm .012)$ 10 (.394) to 50 (1.969) ± 0.6 $(\pm .024)$ more than 50 (1.969) ± 1.0 $(\pm .039)$


150A 2a Indicator Type

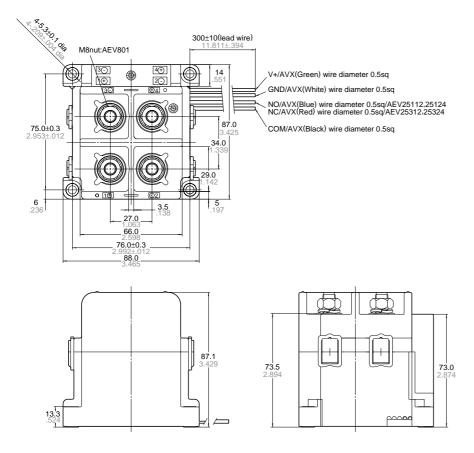

Schematic (TOP VIEW)



Mounting dimensions

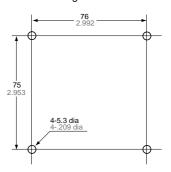


General tolerance:


less than 10 (.394) ± 0.3 $(\pm .012)$ 10 (.394) to 50 (1.969) ± 0.6 $(\pm .024)$ more than 50 (1.969) ± 1.0 $(\pm .039)$




150A 1a mm inch

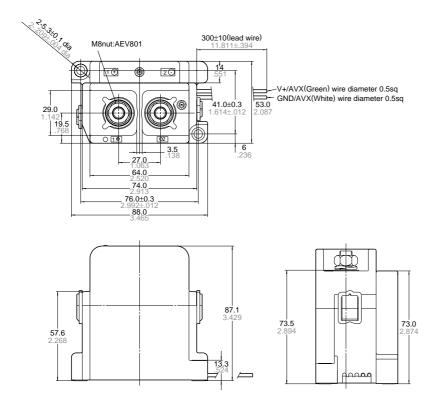

Schematic (TOP VIEW)




Mounting dimensions

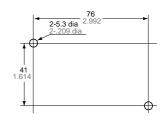


General tolerance:

less than 10 (.394) ± 0.3 $(\pm .012)$ 10 (.394) to 50 (1.969) ± 0.6 $(\pm .024)$ more than 50 (1.969) ± 1.0 $(\pm .039)$


150A 1a Indicator Type

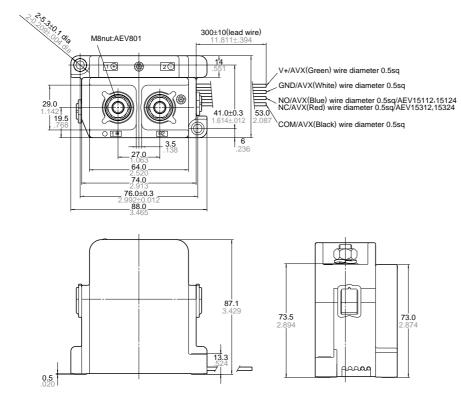

Schematic (TOP VIEW)





Mounting dimensions

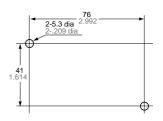

General tolerance:

less than 10 (.394) $\pm 0.3 (\pm .012)$ 10 (.394) to 50 (1.969) $\pm 0.6 (\pm .024)$ more than 50 (1.969) $\pm 1.0 (\pm .039)$ 60A mm inch

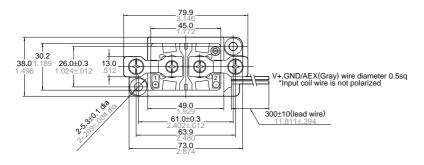


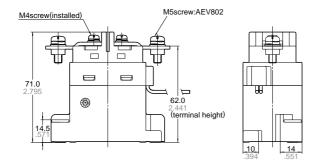

Schematic (TOP VIEW) (60A) Coil

output side has polarities (+) and (-)


Mounting dimension




General tolerance:

 $\begin{array}{lll} \text{less than 10 } (.394) & \pm 0.3 \; (\pm .012) \\ \text{10 } (.394) \; \text{to 50 } (1.969) \; \pm 0.6 \; (\pm .024) \\ \text{more than 50 } (1.969) & \pm 1.0 \; (\pm .039) \end{array}$

30A

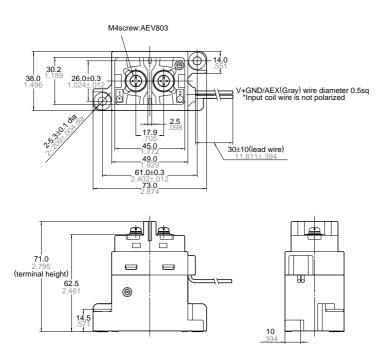


Schematic (TOP VIEW) (60A)



output side has polarities (+) and (-)

Mounting dimension




General tolerance:


 $\begin{array}{lll} \text{less than 10 } (.394) & \pm 0.3 \; (\pm .012) \\ \text{10 } (.394) \; \text{to 50 } (1.969) \; \pm 0.6 \; (\pm .024) \\ \text{more than 50 } (1.969) & \pm 1.0 \; (\pm .039) \end{array}$

REFERENCE DATA

1-(1) Ambient temperature characteristics Sample: AEV15012,3pcs

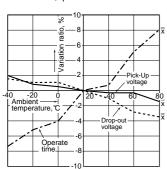

1-(2) Ambient temperature characteristics Sample: AEV16012,3pcs

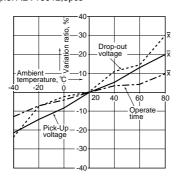

NOTES

1. When installing the relay, always use washers to prevent loosening of the screws.

Tighten each of the screws within the rated ranges given below. Exceeding the maximum torque may result in breakage. Mounting is possible in either direction.

- M8 screw (for 150 A main terminal): 10 to 15 Nm
- M5 screw (150 A, 60 A, 30 A main unit mounting section)

(60 A main terminal): 2.5 to 3.6 Nm

- M4 screw (30 A terminal): 1.8 to 2.7 Nm
- 2. The coils (150 A type) and contacts (30 A, 60 A, 150 A) of the relay are polarized, so follow the instructions in the connection schematic when connecting the coils and contacts.

Type 150 A has contains a reverse surge voltage absorption circuit;

therefore a surge protector is not needed. We recommend installing a surge protector varistor (ZNR) for the 30 A and 60 A types. Avoid using a diode as this may result in decreased cut-off capability.

- 3. As a general rule, do not use a relay if it has been dropped.
- 4. Avoid mounting the relay in strong magnetic fields (near a transformer or magnet) or close to an object that radiates heat.

5. Electrical life

This relay is a high-voltage direct-current switch. In its final breakdown mode, it may lose the ability to provide the proper cutoff. Therefore, do not exceed the indicated switching capacity and life. (Please treat the relay as a product with limited life and replace it when necessary.)

In the event that the relay loses cut-off ability, there is a possibility that burning may spread to surrounding parts, so configure the layout so that the power is turned off within one second.

When using the 30 A type, to prevent increases in the contact resistance, do not allow switching without any load.

6. Permeation life of internal gas

This relay uses a hermetically encased contact (capsule contact) with gas inside. The gas has a permeation life that is affected by the temperature inside the capsule contact (ambient temperature + temperature rise due to flow of electrical current). For this reason, make sure the ambient operating temperature is between –40 and 80°C –40 and +176°F, and the ambient storage temperature is between –40 and 85°C –40 and +185°F.

7. If the power is turned off and then immediately on after applying the rated voltage (current) continuously to the relay's coil and contact, the resistance of the coil will increase due to a rise in the coil temperature.

This causes the pick-up voltage to rise, and possibly exceed the rated pick-up voltage. In these circumstances, take measures such as reducing the load current, limiting the duration of current flow, and applying a coil voltage higher than the rated operating voltage (quick start).

8. Main contact ratings in the ratings apply to when there is a resistive load.

- **9.** If you are using an inductive load (L load) such that L/R > 1 ms, add surge protection in parallel with the inductive load. If this is not done, the electrical life will decrease and cut-off failure may occur.
- **10.** When using the 150 A type, mount it as far away as possible from amateur wireless transmitters or devices that may generate large surges.

To prevent malfunctioning due to high emission levels, it may be neccessary to take measures for E.M.I., such as adding a line noise filter or an electromagnetic shield.

- **11.** Since coil current control is performed, a slight amount of superimposed line noise may be generated in the input line system. If this noise must be removed, install a line noise filter.
- 12. Be careful that foreign matter and oils and fats kind doesn't stick to the main terminal part because it is likely to cause a terminal part to give off unusual heat.
- 13. Avoid excessive load applied to the terminal in case of installing such as a bus bar etc., because it might give bad influence to the opening and closing performance.
- M8 screw terminal (150A main terminal part)

Terminal pulling up strength; Max.100N per terminal

The up-down rotation torque applied to the terminal; Max.15N·m