# **TOSHIBA**





#### Precaution for Using the Emulation Chip / Difference among Products

- (1) Precaution for Using the Emulation Chip (Development Tool)
  - · Precaution for debugging the voltage detection circuit

The functions of the voltage detection circuit vary between the TMP86FH92DMG and the emulation chip TMP86C993XB. Therefore, please ensure that the final verification of software operation related to the voltage detection circuit is conducted with the TMP86FH92DMG.

For details, refer to the chapter on the voltage detection circuit.

· Precaution for debugging the power-on reset circuit

The power-on reset circuit cannot be emulated with the TMP86C993XB. Therefore, when using the development tool for debugging, ensure that operation is performed within the operating voltage range of the TMP86FH92DMG. For the operating voltage range, refer to the chapter on electrical characteristics.

Precaution for debugging the Flash control register

Although the TMP86FH92DMG contains the Flash control register (FLSCR) at 0FFFH in the DBR area, the TMP86C993XB do not contain the FLSCR register. Therefore, when using the development tool for debugging, a program that accesses the FLSCR register cannot function properly (executes differently as in the case of TMP86FH92DMG).



## (2) Difference among Products

#### • Differences in Functions

Products				
ROM  RAM  512 bytes  Interrrupt  22 interrupts (External:5 Internal:17)  I/O  24 pins  26 pins  8pins(Large current output/sipk open-drain or C-MOS output/with Programmable Pull-up resistance)  Port 0  8 pins (sink-opendrain or C-MOS output/with Programmable Pull-up resistance)  Port 2  3 pins (P20 is addition programmable Pull-up resistance)  Port 3  Watchdog Timer  Timer/counter  UART  UART  1 channel (shared with IPC bus)  Serial bus interface (IPC bus)  SEI  1 channel (shared with UART) SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channels  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  operating  other functions  Low voltage detector circuit  4.0v to 5.5v (at 16MHz / 32.768KHz) 2.7v to 5.5v (at 8MHz / 32.768KHz) 2.7v to 5.5v (at 8MHz / 32.768KHz) 2.7v to 5.5v (at 8MHz / 32.768KHz)	Producrs	TMP86FH92DMG	TMP86FH93NG	
ROM  (FLASH)  RAM  512 bytes  Interrrupt  22 interrupts (External: 5 Internal: 17)  I/O  24 pins  26 pins  Port 0  8pins(Large current output/sink open-drain or C-MOS output/with Programmable Pull-up resistance)  5 pins  Port 1  (sink-opendrain or C-MOS output/with Programmable Pull-up resistance)  Port 2  3 pins (P20 is addition programmable Pull-up resistance)  Port 3  8 pins  Watchdog Timer  Timer/counter  1 channel  1 channel  1 channel (shared with IPC bus)  Serial bus interface (IPC bus)  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) or SDA(P15) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 obit ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  Operating voltage (VDD)  Operating voltage (VDD)  Operating voltage(VDD)  (FLASH)  22 interrupts (External: 5 Internal: 17)  8pins  7pins  7pins  7pins  7pins  7pins  7pins  8 pins  8 pins  2 channels  1 channel  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) or SDA(P	CPUCORE	TLCS-	-870/C	
Interrupt  22 interrupts (External:5 Internal:17)  I/O  24 pins  26 pins  8pins(Large current output/sink open-drain or C-MOS output/with Programmable Pull-up resistance)  Port 1  5 pins  7 pins  (sink-opendrain or C-MOS output/with Programmable Pull-up resistance)  Port 2  3 pins (P20 is addition programmable Pull-up resistance)  Port 3  8 pins  Watchdog Timer  Timer/counter  16 bit: 1 channel  8 bit: 2 channels  UART  (1 channel is shared with IPC bus)  2 channels  Serial bus interface (IPC bus)  SDA(P13) and SCL(P14) are fixed  SEI  1 channel  ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  operating  Operating voltage(VDD)  Operating voltage(VDD)  22 interrupts (External: 17)  8pins  26 pins  26 pins  26 pins  8pins  7pins	ROM			
Port 0  Repins(Large current output/sink open-drain or C-MOS output/with Programmable Pull-up resistance)  Port 1  Spins  Fort 1  Spins  Fort 2  Spins  Port 3  Watchdog Timer  Timer/counter  UART  Serial bus interface (I°C bus)  SEI  1 channel (shared with UART) SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channels  Clock Oscillation circuit  Low power consumption operating other functions  Operating yoltage(VDD)  Port 1  Spins  Tonanal (spins (P20 is addition programmable Pull-up resistance)  8 pins  Tonannel  1 channel  8 pins  1 channel  2 circuits (single / dual clock modes are selectable)  Power on reset circuit  Low voltage detector circuit  Low voltage detector circuit  1 channel  1 channel  2 circuits (single / dual clock modes are selectable)  2 circuits (single / dual clock modes are selectable)  2 circuits (single / dual clock modes are selectable)  2 circuits (single / dual clock modes are selectable)  2 circuits (single / dual clock modes are selectable)	RAM	512 I	bytes	
Port 0  8pins(Large current output/sink open-drain or C-MOS output/with Programmable Pull-up resistance)  5 pins  7pins  (sink-opendrain or C-MOS output/with Programmable Pull-up resistance)  Port 1  8 pins  Port 2  3 pins (P20 is addition programmable Pull-up resistance)  Port 3  8 pins  Watchdog Timer  Timer/counter  16 bit: 1 channel  16 bit: 2 channels  2 channels  1 channel is shared with IPC bus)  Serial bus interface (IPC bus)  SEI  1 channel (shared with UART) SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 o bit ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  other functions  CSTOP/SLOW1/SLOW2/IDLE/IDLE I/IDLE E/IDLE EP1/SLEEP2)  Power on reset circuit Low voltage detector circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	Interrrupt	22 interrupts (Exte	ernal:5 Internal:17)	
Port 1  C-MOS output/with Programmable Pull-up resistance)  5 pins  7pins  (sink-opendrain or C-MOS output/with Programmable Pull-up resistance)  Port 2  3 pins (P20 is addition programmable Pull-up resistance)  Port 3  Watchdog Timer  Timer/counter  UART  UART  1 channel  1 channel  1 channel  1 channel  Serial bus interface (I²C bus)  SDA(P13) and SCL(P14) are fixed  SEI  1 channels  1 channel  10 bit ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  (STOP/SLOW1/SLOW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2 rincuits (smigle) voltage (VDD)  2 cyrcuits (smigle) voltage detector circuit  4.0V to 5.5V (at 8MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	I/O	24 pins	26 pins	
Port 1  (sink-opendrain or C-MOS output/with Programmable Pull-up resistance)  Port 2  3 pins (P20 is addition programmable Pull-up resistance)  Port 3  8 pins  Watchdog Timer  Timer/counter  UART  UART  (1 channel is shared with IPC bus)  Serial bus interface (IPC bus)  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channels  ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  (STOR/SLOW1/SLOW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	Port 0			
Port 2 Port 3 Port 3 Port 3  Watchdog Timer  Timer/counter  UART  UART  Serial bus interface (I²C bus)  SEI  1 channel (shared with UART) SDA(P13) and SCL(P14) are fixed  SEI  1 channels  Clock Oscillation circuit  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  operating  Operating voltage(VDD)  Operating voltage(VDD)  Port 3  8 pins  8 pins  1 channel  1 channel  8 bit: 2 channels  2 channels  2 channels  2 channels  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  1 channel  1 channel  1 channel  1 channel  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channels  1 channels  1 channels  1 channels  1 channels  1 channels  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  9 modes  (STOR/SLOW1/SLOW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	Port 1			
Port 3  Watchdog Timer  Timer/counter  UART  UART  UART  1 channel 8 bit: 2 channels  (1 channel is shared with I²C bus)  Serial bus interface (I²C bus)  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channels  1 channels  SDA(P13) and SCL(P16) are selectable  1 channels  Clock Oscillation circuit  Clock Oscillation circuit  2 circuits (single dual clock modes are selectable)  Low power consumption operating  (STOP(SLOW1/SLOW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Coperating voltage(VDD)  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	Dort 2	(1//		
Watchdog Timer  Timer/counter  UART  UART  (1 channel is shared with IPC bus)  Serial bus interface (IPC bus)  SEI  1 channel (shared with UART) SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channels  ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  Operating  Operating yoltage(VDD)  Value (VDD)  Power on reset circuit  4.0 v to 5.5V (at 16MHz / 32.768KHz)  2 channels  2 channels  2 channels  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channels  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SCL(P16) are selectable  9 modes  1 channels  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SCL(P16) are selectable  1 channels  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) or SDA(P15) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) are fixed  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) are fixed  SDA(P13) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) are fixed  SDA(P13) and SCL(P14) are fixed  SDA(P			1 10/11	
Timer/counter  UART  UART  (1 channel is shared with I <sup>2</sup> C bus)  Serial bus interface (I <sup>2</sup> C bus)  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channel  1 channel  SDA(P13) and SCL(P16) are selectable  SEI  1 channels  6 channels  Key-on wake-up  4 channels  Clock Oscillation circuit  2 circuits (single dual clock modes are selectable)  Low power consumption operating  (STOP/SLOW1/SLOW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)				
UART  UART  (1 channel is shared with IPC bus)  Serial bus interface (IPC bus)  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channel  1 channel  SDA(P13) and SCL(P16) are selectable  SEI  1 channels  6 channels  Key-on wake-up  Clock Oscillation circuit  2 circuits (single/dual clock modes are selectable)  Low power consumption operating  (STOP/SLOW1/SLOW2/IDLEO/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  Operating voltage(VDD)  3 bit: 2 channels  2 channels  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  9 modes (STOP/SLOW1/SLOW2/IDLEO/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)	watchdog Timer			
Serial bus interface (I²C bus)  Serial bus interface (I²C bus)  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channel  SDA(P13) and SCL(P16) are selectable  1 channels  6 channels  Clock Oscillation circuit  2 circuits (single / dual clock modes are selectable)  Low power consumption operating  Operating  Operating voltage(VDD)  (1 channel is shared with I²C bus)  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) are selectable  1 channels	Timer/counter	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		
Serial bus interface (I²C bus)  SDA(P13) and SCL(P14) are fixed  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  SEI  1 channel  10 bit ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  Operating  Operating  Operating voltage(VDD)  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and SCL(P14) or SDA(P15) and SCL(P16) are selectable  1 channel  SDA(P13) and SCL(P14) or SDA(P15) and	UART		2) channels	
10 bit ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  otehr functions  Operating voltage(VDD)  Operating voltage(VDD)  6 channels  6 channels  6 channels  9 modes  9 modes  (STOR/SLQW1/SLQW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)			SDA(P13) and SCL(P14) or SDA(P15) and	
ADconverter  Key-on wake-up  Clock Oscillation circuit  Low power consumption operating  Operating  Operating voltage(VDD)  A channels  2 circuits (single / dual clock modes are selectable)  9 modes  9 modes  (STOP/SLOW1/SLOW2/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	SEI	1 cha	annel	
Clock Oscillation circuit  2 circuits (single.) dual clock modes are selectable)  9 modes operating (STOP/SLOW1/SLOW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz) 2.7V to 5.5V (at 8MHz / 32.768KHz)		6 cha	nnels	
Low power consumption operating (STOP/SLOW1/SLOW2/IDLE0/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	Key-on wake-up	4-cha	nnels	
operating (STOP/SLQW1/SLQW2/IDLE1/IDLE2/SLEEP0/SLEEP1/SLEEP2)  Power on reset circuit  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	Clock Oscillation circuit	2 circuits (single / dual clo	ock modes are selectable)	
Operating voltage(VDD)  Low voltage detector circuit  4.0V to 5.5V (at 16MHz / 32.768KHz)  2.7V to 5.5V (at 8MHz / 32.768KHz)	. // .)			
Operating voltage(VDD)  2.7V to 5.5V (at 8MHz / 32.768KHz)	otehr functions			
Package / 30pin (SSOP30-P-56-0.65) 32pin (SDIP32-P-400-1.78)	Operating voltage(VDD)			
	Package	/30pin (SSOP30-P-56-0.65)	32pin (SDIP32-P-400-1.78)	

# Difference in Electrical Characteristics

		TMP86FH92DMG	TMP86FH93NG
Operating condition	Read/Fetch	3.0V to 5.5V (-40 to 85°C) 2.7V to 3.0V (-20 to 85°C)	
(MCU mode)	Erase/ Program	4.5V to 5.5V (-10 to 40°C)	
Operating condition (Serial PROM mode)		4.5V to 5.5V	(-10 to 40°C)

# Revision History

Date	Revision	
2007/4/19	1	First Release
2007/5/17	2	Contents Revised
2007/6/26	3	Contents Revised
2008/1/31	4	Contents Revised
2008/2/27	5	Contents Revised
2008/9/26	6	Contents Revised
2009/8/24	7	Contents Revised



# **Table of Contents**

			>
Precaution for Using the Emulation	on Chip / Difference a	mong Products	
TMP86FH92DMG	/		
1.1 Features		,,	1
1.2 Pin Assignment		<u> </u>	3
1.3 Block Diagram			1,,,,,,,
1.4 Pin Names and Functions			55
	4()		
2. Operational Description			
A1 CDUC E		$((// \land)$	7
2.1 CPU Core Functions			/
2.1.1 Memory Address Map			
2.1.3 Data Memory (RAM)		))	_
2.2 System Clock Controller	()	//	8
2.2.1 Clock Generator			
2.2.2 Timing Generator			9
2.2.2.2 Machine cycle			11
2.2.3 Operation Mode Control Circuit			,11
2.2.3.2 Dual-clock mode			
2.2.3.3 STOP mode 2.2.3.4 Operating Mode Transition	$\sim$ (7/ $\wedge$		
2.2.4 Operating Mode Control			16
2.2.4.1 STOP mode / 2.2.4.2 IDLE1/2 mode and SLEEP1/2 mode/			
2.2.4.3 IDLE0 and SLEER0 modes (IDLE0, Si 2.2.4.4 SLOW mode	LEEP0)		
			30
2.3.1 External Reset Input	······································		30
2.3.2 Address trap reset			31
2.3.3 Watchdog timer reset			31
2.3.5 Power-on Reset	<u> </u>		32
2.3.6 Voltage detection reset			32
2.4 Internal Reset Detection Flags			33
2.4 Internal Reset Detection Flags	······		
3. Interrupt Control Circuit			
3.1 Interrupt latches (IL21 to IL2)	·		36
3.2 Interrupt enable register (EIR)	)		36
3.2.1 Interrupt master enable flag (IMF)			
3.2.2 Individual interrupt enable flags (EF2			
3.3 Interrupt Sequence			
	,		

3	3.2 Saving/restoring general-purpose registers		39
	3.3.2.1 Using PUSH and POP instructions 3.3.2.2 Using data transfer instructions		
3	.3.3 Interrupt return		42
3.4			42
3	.4.1 Address error detection		42
3	.4.2 Debugging		43
3.5	Undefined Instruction Interrupt (INTUNDEF)		43
3.6	Address Tran Interrunt (INTATRAP)	$(0/\wedge$	43
3.7			43 44
3.7	External Interrupts	·	44
4. Spe	ecial Function Register (SFR)		_
		· //	
4.1	SFR	$\triangle$	47
4.2	DBR		·49
		<b>(U)</b>	\
		× ~ ~ ~ / )	)
T (0			
5. I/O	Ports		
5.1			52
5.2	P1 (P14 to P10) Port	//	54
5.3	P2 (P22 to P20) Port		56
5.4	P3 (P37 to P30) Port.		
3.1	10 (107 to 100) 1 ort		
6. Po	wer-on reset circuit		
6.1			61
	5		
6	1.2 function		61
7. Vo	Itage detection circuit (VLTD)		
7.1	Configuration		63
7.2	Control		64
7.3			
	.3.1 Enabling/Disabling Voltage Detection Operation		
	3.2 Selecting the Voltage Detect Operating Mode		66
<\7	3.3 Detection voltage level section 3.4 Voltage detection flag and voltage detection status flag		67
	3.4 Voltage detection flag and voltage detection status flag		67
7.4	Setting of register		68
1	.4.1 Setting Procedure for Generate an interrupt		68
7	4.2 Setting procedure to generate a reset		69
	$\searrow$		
8. Wa	tchdog Timer (WDT)		
	<del>o</del> - (·· /		
8.1	Watchdog Timer Configuration		71
8.2			
	2.1 Malfunction Detection Methods Using the Watchdog Timer		
	2.2.2 Watchdog Timer Enable		
	2.3 Watchdog Timer Disable		
	2.4 Watchdog Timer Interrupt (INTWDT)		

	8.2.5 Watchdog Timer Reset			
	8.3 Address Trap			
	8.3.1 Selection of Address Trap in Internal RAM (ATAS)		······································	76
	8.3.2 Selection of Operation at Address Trap (ATOUT)			
	8.3.4 Address Trap Interrupt (INTATRAP)			
	8.3.4 Addiess Trap Reset	•••••		//
<u> </u>	Time Dage Timer (TDT)	$\wedge$		
9.	Time Base Timer (TBT)			
	9.1 Time Base Timer			79
	9.1.1 Configuration			
	9.1.2 Control			79
	9.1.3 Function			80
	9.2 Divider Output (DVO)		· · · · · · · · · · · · · · · · · · ·	81
	9.2.1 Configuration			,81
	9.2.2 Control	(-(-/-/}-)	~ (O)~~	81
			~~~~///	
10	1( P', T' (C , 1 (TC1)			
10.	16-Bit Timer/Counter 1 (TC1)			
	10.1 Configuration	$\vee$		02
	10.1 Configuration	>	$\bigcirc \bigcirc \bigcirc \bigcirc$	
	10.2 Timer/Counter Control		(-(-/-/)-)	84
	10.3 Function			86
	10.3.1 Timer mode	/-/	<u> </u>	86
	10.3.2 External Trigger Timer Mode		))	90
	10.3.4 Window Mode		′_/	91
	10.3.5 Pulse Width Measurement Mode			
	10.3.6 Programmable Pulse Generate (PPG) Output Mode			95
11.	8-Bit TimerCounter (TC3, TC4)			
11.	0-Bit 11mer counter (103, 104)			
	11.1 Configuration			99
	11.2 TimerCounter Control	)		100
	11.3 Function			
	11.3.1 8-Bit Timer Mode (TC3 and 4)		•••••	105
	11.3.2			105
	11.3.3 8-Bit Programmable Divider Output (PDO) Mode (TC3, 4).			106
	11.3.4 8-Bit Pulse Wighth Modulation (PWM) Output Mode (TC3,			
	11.3.5 16-Bit Timer Mode (TC3 and 4)			
	11.3.7 16-Bit Pulse Width Modulation (PWM) Output Mode (TC3			
	11.3.8 16-Bit Programmable Pulse Generate (PPG) Output Mode (	TC3 and 4)		115
_	11.3.9 Warm-Up Counter Mode			117
	11.3.9.1 Low-Frequency Warm-up Counter Mode (NORMAL1 → NORMAL2 → SLOW2 → SLOW1)			
	11.3.9.2 High-Frequency Warm-Up Counter Mode			
	$(SLOW1 \rightarrow SLOW2 \rightarrow NORMAL2 \rightarrow NORMAL1)$			
12.	Asynchronous Social interface (IIADT1)			
14.	Asynchronous Serial interface (UART1)			
	12.1 Configuration			119
	12.2 Control			120
	12.3 Transfer Data Format			
	12.4 Transfer Rate			
	AL MANUAL ARMOV		• • • • • • • • • • • • • • • • • • • •	

	12.5	Data Sampling Method			124
	12.6	STOP Bit Length			
	12.7	Parity		······	125
	12.8	Transmit/Receive Operation.	/	<del></del>	125
	12.8.	1 Data Transmit Operation		()- <sub>P</sub>	.125
	12.8.	2 Data Receive Operation			.125
	<b>12.9</b> 12.9.		~ (7)	$\langle \cdot \rangle$	
	12.9.	2 Framing Error		<i>)</i>	
	12.9.	3 Overrun Error		······	.126
	12.9. 12.9.				.127
	12.9.				
			$\langle \langle \rangle \rangle$		
13.	Asvi	nchronous Serial interface (UART2)			
		, ,	$\langle \rangle \rangle \langle \rangle$		
	13.1	Configuration Control	<u></u>		129
	13.2	Control		~ \	
	13.3	Transfer Data Format	S(.(.//	<u></u>	
	13.4	Transfer Rate	·	<u> </u>	134
	13.5	Data Sampling Method STOP Bit Length Parity	(.(7/.\.		134
	13.6	STOP Bit Length			135
	13.7	Parity.	,/,/		135
	13.8	Transmit/Receive Operation			135
	13.8.	1 Data Transmit Operation			.135
	13.8.	2 Data Receive Operation.			.135
	<b>13.9</b> 13.9.		<i></i>		136
	13.9.	2 Framing Error	- J. J		136
	13.9.				.136
	13.9. 13.9.		<u>,                                    </u>		.137
	13.9.				138
14.	Seri	al Expansion Interface (SEI)			
	14.1	Features			139
	14.2	SEI Registers			140
	14.2.				
	14.2.	2.1.1 Transfer rate 2 SEL Status Register (SESR)			141
	14.2.	3 SEI Data Register (SEDR)			.141
(	14.3	SEI Operation			142
	14.3.				
	14.3.	\ \ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			
	14.4	SEI Pin Functions			
	14.4. 14.4.	P			
	14.4.	3 SS pin			143
	14.5	SEI Transfer Formats			
	14.5.	- ( 8 )			
	14.5. <b>14.6</b>				
		Functional Description			
	14.7	Interrupt Generation			
	14.8	SEI System Errors			147

14. 14. 14.	8.2 Overflow error	14
14.9		
15. Ser	rial Bus Interface(I <sup>2</sup> C Bus) VerD (SBI)	
13. 301	$\wedge$ ((// $\wedge$ )	
15.1	Configuration	
15.2	Control	
15.3		
15.4	The Data Format in the I2C Bus Mode	
15.5	I2C Bus Control	
15.	5.1 Acknowledgement mode specification	15
	15.5.1.2 Non-acknowledgment mode (ACK = "0")	
15.		
15.	15.5.3.1 Clock source	15
	15.5.3.2 Clock synchronization	>
15. 15.		15
15.		15
15.	5.7 Start/stop condition generation	15
15.	5.8 Interrupt service request and cancel	15
15.		15
	5.10 Arbitration lost detection monitor	15
	5.12 GENERAL CALL detection monitor	15
	5.13 Last received bit monitor	15
15.6		
15. 15.	~ \\	
15.	6.3 1-word data transfer	
	15.6.3.1 When the MST is "1" (Master mode)	
15.	15.6.3.2 When the MST is "0" (Slave mode) 6.4 Stop condition generation	16
15.		
16 10	LIVAD C. A MADO	
	bit AD Converter (ADC)	
16.1	Configuration	
16.2	Register configuration	
16.3	Function	
16. 16.		
	3.3 Register Setting	
16.4	STOP/SLOW Modes during AD Conversion	
16.5		
16.6	Precautions about AD Converter	
1 <b>0.0</b> 16.		
16.		
16.	6.3 Noise Countermeasure	17
17. Ke	y-on Wakeup (KWU)	
	* ` '	
17.1	Configuration	

	7.2 Control	176
<u> 18.</u>	Flash Memory	
	8.1 Flash Memory Control.	179
	18.1.1 Flash Memory Command Sequence Execution Control (FLSCR <flsmd>)</flsmd>	178
	18.1.1 Flash Memory Command Sequence Execution Control (FLSCR <flsmd>)</flsmd>	178
	8.2 Command Sequence	180
	18.2.1 Byte Program	180
	18.2.2 Sector Erase (4-kbyte Erase)	181
	18.2.4 Product ID Entry.	181
	18.2.5 Product ID Exit	181
	18 2.6 Security Program.  8.3 Toggle Bit (D6).  8.4 Access to the Flash Memory Area.  18.4.1 Flash Memory Control in the Serial PROM Mode.	197
	8.4 Access to the Flash Memory Area	183
	18.4.1 Flash Memory Control in the Serial PROM Mode.	183
	18.4.1.1 How to write to the flash memory by executing the control program in the RAM area (in the RAM loader mode within the	e serial
	PROM mode) 18.4.2 Flash Memory Control in the MCU mode	195
	18.4.2.1 How to write to the flash memory by executing a user write control program in the RAM area (in the MCU mode)	105
19.	Serial PROM Mode	
	9.1 Outline	187
	9.2 Memory Mapping	187
	9.3 Serial PROM Mode Setting.	188
	19.3.1 Serial PROM Mode Control Pins.	
	19.3.2 Pin Function	189
	19.3.4 Activating the Serial PROM Mode	190
	19.3.4 Activating the Serial PROM Mode	191
	9.5 Operation Command 9.6 Operation Mode	192
	9.6 Operation Mode	192
	19.6.1 Flash Memory Erasing Mode (Operating command: F0H)	194
	19.6.2 Flash Memory Writing Mode (Operation command: 30H)	
	19.6.4 / Flash Memory SUM Output Mode (Operation Command: 90H)	
	19.6.5 Product ID Code Output Mode (Operation Command: C0H)	202
	19.6.6 Flash Memory Status Output Mode (Operation Command: C3H)	
	9.7 Error Code	206
_		
\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	19.8.1 Calculation Method	
	9.9 Intel Hex Format (Binary)	208
	9.10 Passwords	
	19.10.1 Password String	
	19.10.2 Handling of Password Error	
	9.11 Product ID Code	
	9.12 Flash Memory Status Code	
	9.13 Specifying the Erasure Area	
	9.14 Port Input Control Register	
	9.15 Flowchart	
	9.16 UART Timing	
	7.10 OAN HIIIIIg	∠13

20.	Inp	ut/Output Circuitry	
	20.1 20.2	Control Pins. Input/Output Ports.	217
<u></u> 21.	Elec	etrical Characteristics	
	21.1 21.2 21.2 21.2 21.3 21.4 21.5 21.6 21.7 21.8 21.8 21.9 21.10	2 MCU mode (Except Flash Programming or erasing) 3 Serial PROM mode.  DC Characteristics  AD Conversion Characteristics.  Power-on reset circuit Characteristics.  Voltage detection circuit characteristics.  AC Characteristics.  Flash Characteristics.  1 Write/Erase Characteristics.  Oscillating Conditions.	221222224226226228228228230
22.	Pac	kage Dimensions	



#### CMOS 8-Bit Microcontroller

# TMP86FH92DMG

Product No.	ROM (FLASH)	RAM	Package	Emulation Chip
TMP86FH92DMG	16384	512	SSOP30-P-56-0.65	TMP86C993XB
TIVIFOOI H92DIVIG	bytes	bytes	330F30-F-30-0.03	I ML 000993VP

#### 1.1 Features

- 1. 8-bit single chip microcomputer TLCS-870/C series
  - Instruction execution time :

0.25 µs (at 16 MHz)

122 µs (at 32.768 kHz)

- 132 types & 731 basic instructions
- 2. 22interrupt sources (External : 5 Internal : 17)
- 3. Input / Output ports (24 pins)

Large current output: 8pins (Typ. 20mA), LED direct drive

- 4. Power-on reset circuit
- 5. Voltage detection circuit
- 6. Watchdog Timer
- 7. Prescaler
  - Time base timer
  - Divider output function
- 8. 16-bit timer counter: 1 ch/
  - Timer, External trigger, Window, Pulse width measurement,

Event counter, Programmable pulse generate (PPG) modes

- 9. 8-bit timer counter: 2 ch
  - Timer, Event counter, Programmable divider output (PDO),

Pulse width modulation (PWM) output,

Programmable pulse generation (PPG),

16bit mode (8bit timer 2ch combination) modes

- 10. 8-bit UART: 2 ch
- 11. 8bit Serial Expansion Interface (SEI): 1 channel

(MSB/LSB selectable and max. 4Mbps at 16MHz)

- 12. Serial Bus Interface(I<sup>2</sup>C Bus): 1ch
- 13. 10-bit successive approximation type AD converter
  - Analog input: 6 ch
- 14. Key-on wakeup: 4 channels
- 15. Clock operation

Single clock mode

Dual clock mode

16. Low power consumption operation

This product uses the Super Flash® technology under the licence of Silicon Storage Technology, Inc. Super Flash® is registered trademark of Silicon Storage Technology, Inc.

1.1 Features TMP86FH92DMG

STOP mode: Oscillation stops. (Battery/Capacitor back-up.)

SLOW1 mode: Low power consumption operation using low-frequency clock.(High-frequency clock stop.)

SLOW2 mode: Low power consumption operation using low-frequency clock.(High-frequency clock oscillate.)

IDLE0 mode: CPU stops, and only the Time-Based-Timer(TBT) on peripherals operate using high frequency clock. Release by falling edge of the source clock which is set by TBTCR TBTCK>.

IDLE1 mode: CPU stops and peripherals operate using high frequency clock. Release by interruputs(CPU restarts).

IDLE2 mode: CPU stops and peripherals operate using high and low frequency clock. Release by interruputs. (CPU restarts).

SLEEP0 mode: CPU stops, and only the Time-Based-Timer(TBT) on peripherals operate using low frequency clock. Release by falling edge of the source clock which is set by TBTCR<TBTCK>.


SLEEP1 mode: CPU stops, and peripherals operate using low frequency clock. Release by interruput.(CPU restarts).

SLEEP2 mode: CPU stops and peripherals operate using high and low frequency clock. Release by interruput.

17. Wide operation voltage:


4.0 V to 5.5 V at 16MHz /32.768 kHz 2.7 V to 5.5 V at 8 MHz /32.768 kHz TOSHIBA TMP86FH92DMG

## 1.2 Pin Assignment

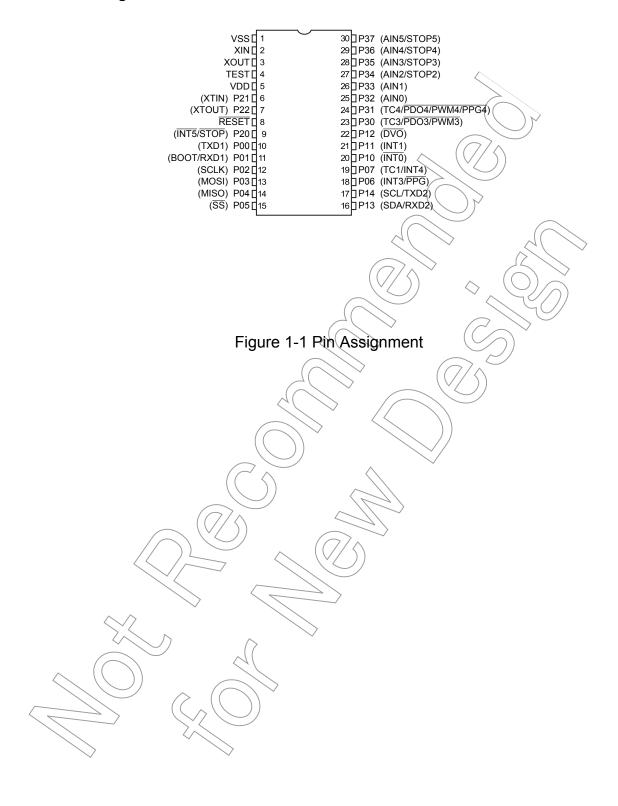

1.3 Block Diagram TMP86FH92DMG

# 1.3 Block Diagram

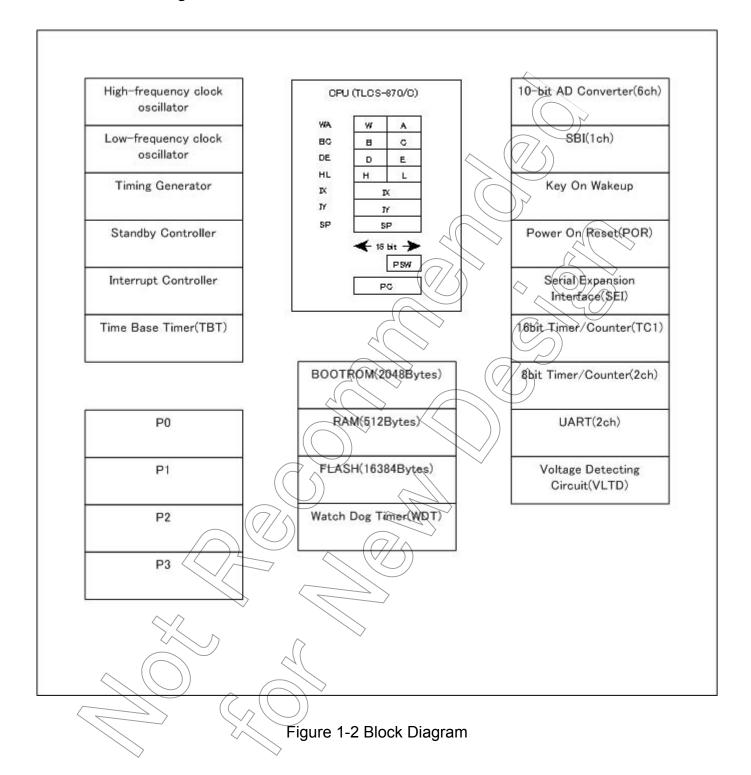

# 1.4 Pin Names and Functions

The TMP86FH92DMG has MCU mode, parallel PROM mode, and serial PROM mode. Table 1-1 shows the pin functions in MCU mode. The serial PROM mode is explained later in a separate chapter.

Table 1-1 Pin Names and Functions(1/2)

Pin Name	Pin Number	Input/Output	Functions
P07 TC1 INT4	19	IO I	PORT07 TC1 input External (interrupt 4 input
P06 INT3 PPG	18	10 1 0	PORT06 External interrupt 3 input PPG output
P05 SS	15	IO I	PORT05 SEI master/slave select input
P04 MISO	14	IO (	PORT04 SEI master input, slave output
P03 MOSI	13	10 10	PORT03 SEI master input, slave output
P02 SCLK	12	10	PORT02 SEI serial clock input/outbut-pin
P01 RXD1 BOOT	11	IO I	PORT01 UART data input 1 Serial PROM mode control input
P00 TXD1	10	0	PORT00 UART data output 1
P14 SCL TXD2	17	10	PORT14 V2C bus clock UABT data output 2
P13 SDA RXD2	16	10	PORT13 I2C bus data UART data input 2
P12 DVO	22	10 0	PORT12 Divider Output
P11 INT1	21	10	PORT11 External interrupt 1 input
P10 INTO	20	10	PORT10 External interrupt 0 input
P22 XTOUT	7	IO O	PORT22 Resonator connecting pins(32.768kHz) for inputting external clock
P21 XTIN	6	IO I	PORT21 Resonator connecting pins(32.768kHz) for inputting external clock
P20 STOP INT5	9	10 1	PORT20 STOP mode release signal input External interrupt 5 input

1.4 Pin Names and Functions TMP86FH92DMG

Table 1-1 Pin Names and Functions(2/2)

Pin Name	Pin Number	Input/Output	Functions
P37 AIN5 STOP5	30	10 1	PORT37 Analog Input5 STOP5
P36 AIN4 STOP4	29	10 1	PORT36 Analog Input4 STOP4
P35 AIN3 STOP3	28	10 1 1	PORT35 Analog Input3 STOP3
P34 AIN2 STOP2	27	10 1 1	PORT34 Analog Input2 STOP2
P33 AIN1	26	IO	PÓRT33 Analog Input1
P32 AIN0	25	9	PORT32 Analog Input0
P31 TC4 PDO4/PWM4/PPG4	24	0	PORT31 TC4 input PDO4/PWM4/RPG4 output
P30 TC3 PDO3/PWM3	23	10 0	PORT30 TC3 input PDO3/PWM3 output
XIN	2		Resonator connecting pins for high-frequency clock
XOUT	3 ((		Resonator connecting pins for high-frequency clock
RESET	8		Reset signal
TEST	4(///		Test pin for out-going test. Normally, be fixed to low.
VDD /	5		+5V
vss	1		0(GND)

TOSHIBA TMP86FH92DMG

# 2. Operational Description


#### 2.1 CPU Core Functions

The CPU core consists of a CPU, a system clock controller, and an interrupt controller.

This section provides a description of the CPU core, the program memory, the data memory, and the reset circuit.

#### 2.1.1 Memory Address Map

The TMP86FH92DMG memory is composed Flash, RAM, DBR(Data buffer register) and SFR(Special function register). They are all mapped in 64-Kbyte address space. Figure 2-1 shows the TMP86FH92DMG memory address map.

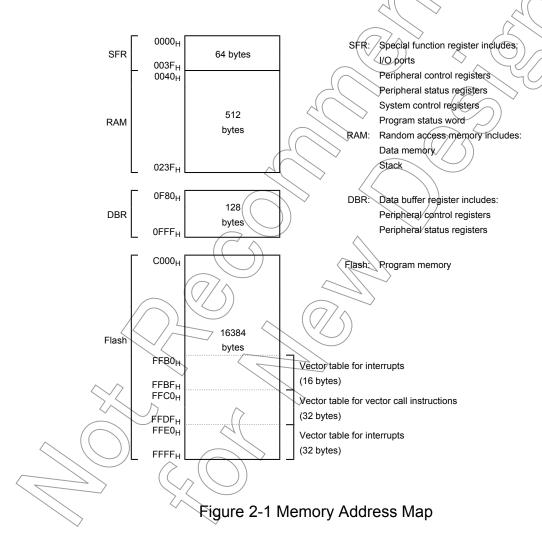

#### 2.1.2 Program Memory (Flash)


The TMP86FH92DMG has a 16384 bytes (Address C000H to FFFFH) of program memory (Flash).

#### 2.1.3 Data Memory (RAM)

The TMP86FH92DMG has 512bytes (Address 0040H to 023FH) of internal RAM. The first 192 bytes (0040H to 00FFH) of the internal RAM are located in the direct area; instructions with shorten operations are available against such an area.

The data memory contents become unstable when the power supply is turned on; therefore, the data memory should be initialized by an initialization routine.

Example: Clears RAM to "00H". (TMP86FH92DMG)

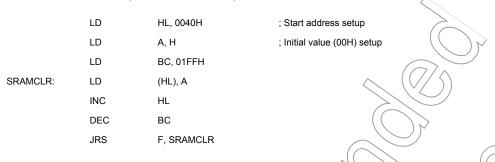

## 2.2 System Clock Controller

The system clock controller consists of a clock generator, a timing generator, and a standby controller.

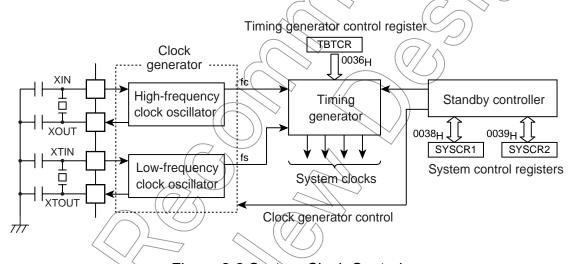


Figure 2-2 System Clock Control

#### 2.2.1 Clock Generator

The clock generator generates the basic clock which provides the system clocks supplied to the CPU core and peripheral hardware. It contains two oscillation circuits: One for the high-frequency clock and one for the low-frequency clock. Power consumption can be reduced by switching of the standby controller to low-power operation based on the low-frequency clock.

The high-frequency (fc) clock and low-frequency (fs) clock can easily be obtained by connecting a resonator between the XIN/XOUT and XTIN/XTOUT pins respectively. Clock input from an external oscillator is also possible. In this case, external clock is applied to XIN/XTIN pin with XOUT/XTOUT pin not connected.

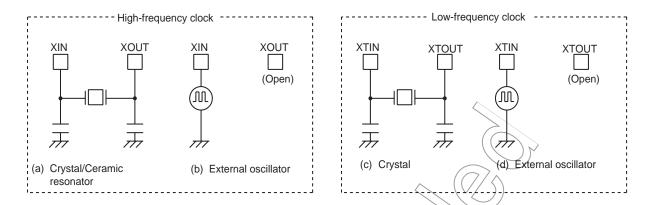


Figure 2-3 Examples of Resonator Connection

Note: The function to monitor the basic clock directly at external is not provided for hardware, however, with disabling all interrupts and watchdog timers, the oscillation frequency can be adjusted by monitoring the pulse which the fixed frequency is outputted to the port by the program.

The system to require the adjustment of the oscillation frequency should create the program for the adjustment in advance.

#### 2.2.2 Timing Generator

The timing generator generates the various system clocks supplied to the CPU core and peripheral hardware from the basic clock (fc or fs). The timing generator provides the following functions.

- 1. Generation of main system clock
- 2. Generation of divider output (DVO) pulses
- 3. Generation of source clocks for time base timer
- 4. Generation of source clocks for watchdog timer
- 5. Generation of internal source clocks for timer counters
- 6. Generation of warm-up clocks for releasing STOP mode

#### 2.2.2.1 Configuration of timing generator

The timing generator consists of a 2-stage prescaler, a 21-stage divider, a main system clock generator, and machine cycle counters.

An input clock to the 7th stage of the divider depends on the operating mode, SYSCR2<SYSCK> and TBTCR<DV7CK>, that is shown in Figure 2-4. As reset and STOP mode started/canceled, the prescaler and the divider are cleared to "0".


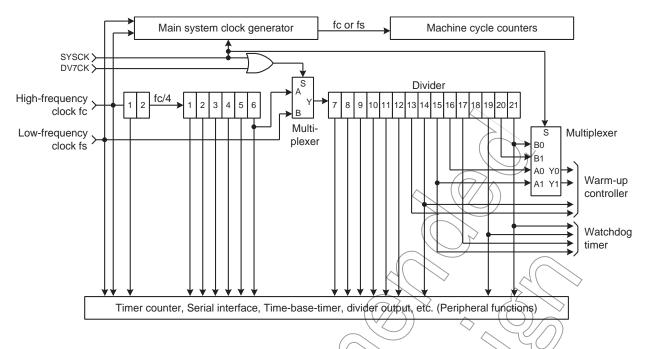


Figure 2-4 Configuration of Timing Generator

#### **Timing Generator Control Register**



Note 1: In single clock mode, do not set DV7CK to "1".

Note 2: Do not set "1" on DV7CK while the low-frequency clock is not operated stably.

Note 3: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz], \*: Don't care

Note 4: In SLOW1/2 and SLEEP1/2 modes, the DV7CK setting is ineffective, and fs is input to the 7th stage of the divider.

Note 5: When STOP mode is entered from NORMAL1/2 mode, the DV7CK setting is in effective during the warm-up period after release of STOP mode, and the 6th stage of the divider is input to the 7th stage during this period.

#### 2.2.2.2 Machine cycle

Instruction execution and peripheral hardware operation are synchronized with the main system clock.

The minimum instruction execution unit is called an "machine cycle". There are a total of 10 different types of instructions for the TLCS-870/C Series: Ranging from 1-cycle instructions which require one machine cycle for execution to 10-cycle instructions which require 10 machine cycles for execution. A machine cycle consists of 4 states (S0 to S3), and each state consists of one main system clock.

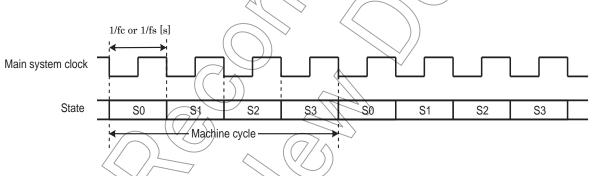


Figure 2-5 Machine Cycle

#### 2.2.3 Operation Mode Control Circuit

The operation mode control circuit starts and stops the oscillation circuits for the high-frequency and low-frequency clocks, and switches the main system clock. There are three operating modes: Single clock mode, dual clock mode and STOP mode. These modes are controlled by the system control registers (SYSCR1 and SYSCR2). Figure 2-6 shows the operating mode transition diagram.

#### 2.2.3.1 Single-clock mode

Only The oscillation circuit for the high-frequency clock is used, and P21 (XTIN) and P22 (XTOUT) pins are used as input/output ports. The main-system clock is obtained from the high-frequency clock. In the single-clock mode, the machine cycle time is 4/fc [s].

#### (1) NORMAL1 mode

In this mode, both the CPU core and on-chip peripherals operate using the high-frequency clock. The TMP86FH92DMG is placed in this mode after reset.

TMP86FH92DMG

## (2) IDLE1 mode

In this mode, the internal oscillation circuit remains active. The CPU and the watchdog timer are halted; however on-chip peripherals remain active (Operate using the high-frequency clock).

IDLE1 mode is started by SYSCR2<IDLE> = "1", and IDLE1 mode is released to NORMAL1 mode by an interrupt request from the on-chip peripherals or external interrupt inputs. When the IMF (Interrupt master enable flag) is "1" (Interrupt enable), the execution will resume with the acceptance of the interrupt, and the operation will return to normal after the interrupt service is completed. When the IMF is "0" (Interrupt disable), the execution will resume with the instruction which follows the IDLE1 mode start instruction.

#### (3) IDLE0 mode

In this mode, all the circuit, except oscillator and the timer-base-timer, stops operation.

This mode is enabled by SYSCR2<TGHALT> = 1

When IDLE0 mode starts, the CPU stops and the timing generator stops feeding the clock to the peripheral circuits other than TBT. Then, upon detecting the falling edge of the source clock selected with TBTCR<TBTCK>, the timing generator starts feeding the clock to all peripheral circuits.

When returned from IDLE0 mode, the CPU restarts operating, entering NORMAL1 mode back again. IDLE0 mode is entered and returned regardless of how TBTCR<TBTEN is set. When IMF = "1", EF7 (TBT interrupt individual enable flag) = "1", and TBTCR<TBTEN = "1", interrupt processing is performed. When IDLE0 mode is entered while TBTCR<TBTEN = "1", the INTTBT interrupt latch is set after returning to NORMAL1 mode.

#### 2.2.3.2 Dual-clock mode

Both the high-frequency and low-frequency oscillation circuits are used in this mode. P21 (XTIN) and P22 (XTOUT) pins cannot be used as input/output ports. The main system clock is obtained from the high-frequency clock in NORMAL2 and IDLE2 modes, and is obtained from the low-frequency clock in SLOW and SLEEP modes. The machine cycle time is 4/fc [s] in the NORMAL2 and IDLE2 modes, and 4/fs [s] (122 µs at fs = 32.768 kHz) in the SLOW and SLEEP modes.

The TLCS-870/C is placed in the single-clock mode during reset. To use the dual-clock mode, the low-frequency oscillator should be turned on at the start of a program.

#### (1) NORMAL2 mode

In this mode, the CPU core operates with the high-frequency clock. On-chip peripherals operate using the high-frequency clock and/or low-frequency clock.

#### (2) SLOW2 mode

In this mode, the CPU core operates with the low-frequency clock, while both the high-frequency clock and the low-frequency clock are operated. As the SYSCR2<SYSCK> becomes "1", the hardware changes into SLOW2 mode. As the SYSCR2<SYSCK> becomes "0", the hardware changes into NOR-MAL2 mode. As the SYSCR2<XEN> becomes "0", the hardware changes into SLOW1 mode. Do not clear SYSCR2<XTEN> to "0" during SLOW2 mode.

#### (3) SLOW1 mode

This mode can be used to reduce power-consumption by turning off oscillation of the high-frequency clock. The CPU core and on-chip peripherals operate using the low-frequency clock.

Switching back and forth between SLOW1 and SLOW2 modes are performed by SYSCR2<XEN>. In SLOW1 and SLEEP modes, the input clock to the 1st stage of the divider is stopped; output from the 1st to 6th stages is also stopped.

#### (4) IDLE2 mode

In this mode, the internal oscillation circuit remain active. The CPU and the watchdog timer are halted; however, on-chip peripherals remain active (Operate using the high-frequency clock and/or the low-frequency clock). Starting and releasing of IDLE2 mode are the same as for IDLE1 mode, except that operation returns to NORMAL2 mode.

#### (5) SLEEP1 mode

In this mode, the internal oscillation circuit of the low-frequency clock remains active. The CPU, the watchdog timer, and the internal oscillation circuit of the high-frequency clock are halted, however, on-chip peripherals remain active (Operate using the low-frequency clock). Starting and releasing of SLEEP mode are the same as for IDLE1 mode, except that operation returns to SLOW1 mode. In SLOW1 and SLEEP1 modes, the input clock to the 1st stage of the divider is stopped; output from the 1st to 6th stages is also stopped.

#### (6) SLEEP2 mode

The SLEEP2 mode is the idle mode corresponding to the SLOW2 mode. The status under the SLEEP2 mode is same as that under the SLEEP1 mode, except for the oscillation circuit of the high-frequency clock.

#### (7) SLEEP0 mode

In this mode, all the circuit, except oscillator and the timer-base-timer, stops operation. This mode is enabled by setting "1" on bit SYSCR2<TGHALT>.

When SLEEPO mode starts, the CPU stops and the timing generator stops feeding the clock to the peripheral circuits other than TBT. Then upon detecting the falling edge of the source clock selected with TBTCR<TBTCK>, the timing generator starts feeding the clock to all peripheral circuits.


When returned from SLEEP0 mode, the CPU restarts operating, entering SLOW1 mode back again. SLEEP0 mode is entered and returned regardless of how TBTCR<TBTEN> is set. When IMF = "1", EF7 (TBT interrupt individual enable flag) = "1", and TBTCR<TBTEN> = "1", interrupt processing is performed. When SLEEP0 mode is entered while TBTCR<TBTEN> = "1", the INTTBT interrupt latch is set after returning to SLOW1 mode.

#### 2.2.3.3 STOP mode

In this mode, the internal oscillation circuit is turned off, causing all system operations to be halted. The internal status immediately prior to the halt is held with a lowest power consumption during STOP mode.

STOP mode is started by the system control register 1 (SYSCR1), and STOP mode is released by a inputting (Either level-sensitive or edge-sensitive can be programmable selected) to the  $\overline{\text{STOP}}$  pin. After the warm-up period is completed, the execution resumes with the instruction which follows the STOP mode start instruction.

#### 2.2.3.4 Operating Mode Transition

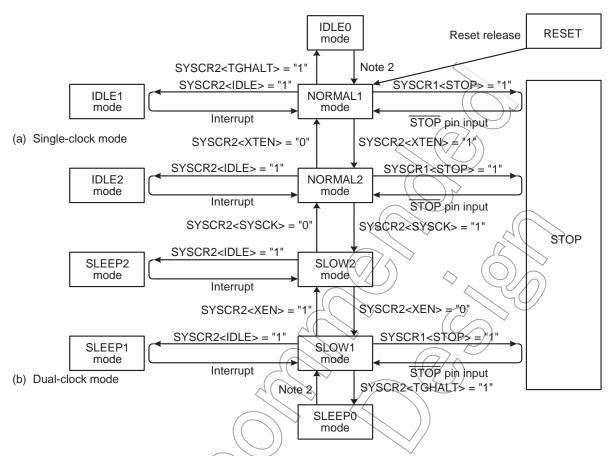

Note 1: NORMAL1 and NORMAL2 modes are generically called NORMAL; SLOW1 and SLOW2 are called SLOW; IDLE0, IDLE1 and IDLE2 are called IDLE, SLEEP0, SLEEP1 and SLEEP2 are called SLEEP.

Note 2: The mode is released by falling edge of TBTCR<TBTCK> setting.

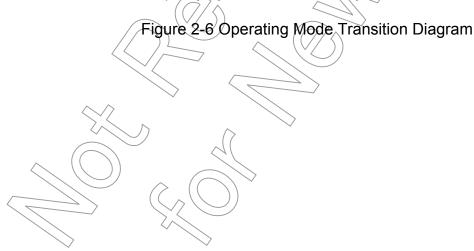


Table 2-1 Operating Mode and Conditions

Operating Mode		Oscillator					AD	Power-on Rest	Other	Machine
		High Frequency	Low Frequency	CPU Core	WDT	TBT	Converter	Voltage Detect Reset	Peripherals	Cycle Time
	RESET		Stop	Reset	Reset	Reset	Reset	Operate	Reset	4/5-5-3
	NORMAL1			Operate	Operate	Operate	Operate		> Operate	
Single clock	IDLE1	Oscillation			Halt					4/fc [s]
	IDLE0			Halt			. Halt		Halt -	
	STOP	Stop				Halt	Пан			-
	NORMAL2	Oscillation	Oscillation	Operate with High-freq.	Operate with High or Low- freq.	Operate	Operate			4/fs [s]
	IDLE2			Halt	Halt		Halt	Operate	Operate	
D .1	SLOW2			Operate with Low-freq.	Operate with Low-freq.					
Dual clock	SLEEP2			Halt	Halt	Operate				
	SLOW1	Stop		Operate with Low-freq.	Operate with Low-freq.			0		4/fs [s]
	SLEEP1								$\bigcirc/$	
	SLEEP0			Halt	Halt				Halt	
	STOP		Stop		4	₩alt	Halt		riall	-

TMP86FH92DMG

#### 2.2 System Clock Controller

#### 2.2.4 Operating Mode Control

#### System Control Register 1

SYSCR1	7	6	5	4	3	2	1	0	
(0038H)	STOP	RELM	RETM	OUTEN	W	UT			(Initial value: 0000 00**)

STOP	STOP mode start	0: CPU core and peripherals remain active 1: CPU core and peripherals are halted (Start STOP mode)			
RELM	Release method for STOP mode	0: Edge-sensitive release 1: Level-sensitive release			
RETM	Operating mode after STOP mode	0: Return to NORMAL1/2 mode 1: Return to SLOW1 mode			
OUTEN	Port output during STOP mode	0: High impedance 1: Output kept			
WUT	Warm-up time at releasing STOP mode	Return to NORMAL mode Return to SLOW mode  00 3 x 2 <sup>19</sup> /fc 3 x 2 <sup>13</sup> /fs  01 2 <sup>16</sup> /fc 2 <sup>19</sup> /fs  10 3 x 2 <sup>14</sup> /fc 3 x 2 <sup>6</sup> /fs  11 2 <sup>14</sup> /fc 2 <sup>6</sup> /fs	R/W		

- Note 1: Always set RETM to "0" when transiting from NORMAL mode to STOP mode. Always set RETM to "1" when transiting from SLOW mode to STOP mode.
- Note 2: When STOP mode is released with RESET pin input, a return is made to NORMAL1 regardless of the RETM contents.
- Note 3: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz], \*; Oon't care
- Note 4: Bits 0 and 1 in SYSCR1 are read as undefined data when a read instruction is executed.
- Note 5: As the hardware becomes STOP mode under OUTEN = "0", input value is fixed to "0"; therefore it may cause external interrupt request on account of falling edge.
- Note 6: When the key-on wakeup is/used, RELM should be set to "1"
- Note 7: In case of setting as STOP mode is released by a rising edge of STOP pin input, the release setting by STOP5 to STOP2 on STOPCR register is prohibited.
- Note 8: Port P20 is used as STOP pin Therefore, when stop mode is started, OUTEN does not affect to P20, and P20 becomes High-Z mode.
- Note 9: The warming-up time should be set correctly for using oscillator.

#### System Control Register 2

SYSCR2 7 6 5 4 3 2 1 0
(0039H) XEN XTEN SYSCK IDLE TGHALT (Initial value: 1000 \*0\*\*)

//	XEN	High-frequency oscillator control	Turn off oscillation     Turn on oscillation	
//	XTEN	Low-frequency oscillator control	Turn off oscillation     Turn on oscillation	R/W
/	Main system clock select (Write)/ main system clock monitor (Read)		0: High-frequency clock (NORMAL1/NORMAL2/IDLE1/IDLE2) 1: Low-frequency clock (SLOW1/SLOW2/SLEEP1/SLEEP2)	
	IDLE	CPU and watchdog timer control (IDLE1/2 and SLEEP1/2 modes)	0: CPU and watchdog timer remain active 1: CPU and watchdog timer are stopped (Start IDLE1/2 and SLEEP1/2 modes)	
	TGHALT TG control (IDLE0 and SLEEP0 modes)		0: Feeding clock to all peripherals from TG 1: Stop feeding clock to peripherals except TBT from TG. (Start IDLE0 and SLEEP0 modes)	R/W

- Note 1: A reset is applied if both XEN and XTEN are cleared to "0", XEN is cleared to "0" when SYSCK = "0", or XTEN is cleared to "0" when SYSCK = "1".
- Note 2: \*: Don't care, TG: Timing generator.
- Note 3: Bits 3, 1 and 0 in SYSCR2 are always read as undefined value.

- Note 4: Do not set IDLE and TGHALT to "1" simultaneously.
- Note 5: Because returning from IDLE0/SLEEP0 to NORMAL1/SLOW1 is executed by the asynchronous internal clock, the period of IDLE0/SLEEP0 mode might be shorter than the period setting by TBTCR<TBTCK>.
- Note 6: When IDLE1/2 or SLEEP1/2 mode is released, IDLE is automatically cleared to "0".
- Note 7: When IDLE0 or SLEEP0 mode is released, TGHALT is automatically cleared to "0".
- Note 8: Before setting TGHALT to "1", be sure to stop peripherals. If peripherals are not stopped, the interrupt latch of peripherals may be set after IDLE0 or SLEEP0 mode is released.

#### 2.2.4.1 STOP mode

STOP mode is controlled by the system control register 1, the STOP pin input and key-on wakeup input (STOP5 to STOP2) which are controlled by the STOP mode release control register (STOPCR).

The STOP pin is also used both as a port P20 and an INT5 (external interrupt input 5) pin. STOP mode is started by setting SYSCR1<STOP> to "1". During STOP mode, the following status is maintained.

- 1. Oscillations are turned off, and all internal operations are halted.
- 2. The data memory, registers, the program status word and port output latches are all held in the status in effect before STOP mode was entered.
- 3. The prescaler and the divider of the timing generator are cleared to "0"
- 4. The program counter holds the address 2 ahead of the instruction (e.g., [SET (SYSCR1).7]) which started STOP mode.

STOP mode includes a level-sensitive mode and an edge-sensitive mode either of which can be selected with the SYSCR1<RELM>. Do not use any key-on wakeup input (STOP5 to STOP2) for releasing STOP mode in edge-sensitive mode.

- Note 1: The STOP mode can be released by either the STOP or key-on wakeup pins (STOP5 to STOP2). However, because the STOP pin is different from the key-on wakeup and can not inhibit the release input, the STOP pin must be used for releasing STOP mode.
- Note 2: During STOP period (from start of STOP mode to end of warm up), due to changes in the external interrupt pin signal, interrupt latches may be set to "1" and interrupts may be accepted immediately after STOP mode is released. Before starting STOP mode, therefore, disable interrupts. Also, before enabling interrupts after STOP mode is released, clear unnecessary interrupt latches.

#### (1) Level-sensitive release mode (RELM = "1")

In this mode, STOP mode is released by setting the STOP pin high or detecting high or low edge input for the STOP5 to STOP2 pins which are enabled by STOPCR. This mode is used for capacitor backup when the main power supply is cut off and long term battery backup.

Even if an instruction for starting STOP mode is executed while STOP pin input is high, STOP mode does not start but instead the warm-up sequence starts immediately. Thus, to start STOP mode in the level sensitive release mode, it is necessary for the program to first confirm that the STOP pin input is low and the STOP5 to STOP2 inputs are high. The following two methods can be used for confirmation.

- Testing a port.
- 2. Using an external interrupt input INT5 (INT5 is a falling edge-sensitive input).

Example 1 :Starting STOP mode from NORMAL mode by testing a port P20.

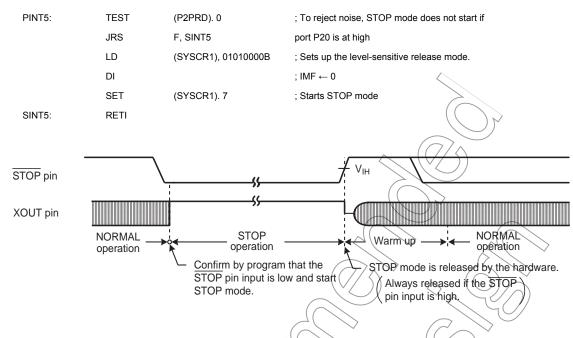


Figure 2-7 Level-sensitive Release Mode

Note 1: Even if the STOP pin input is low or the STOP5 to STOP2 pin inputs are high after warm-up start, the STOP mode is not restarted.

Note 2: In this case of changing to the level-sensitive mode from the edge-sensitive mode, the release mode is not switched until a rising edge of the STOP pin input is detected.

#### (2) Edge-sensitive release mode (RELM = "0")

In this mode, STOP mode is released by a rising edge of the STOP pin input. This is used in applications where a relatively short program is executed repeatedly at periodic intervals. This periodic signal (for example, a clock from a low-power consumption oscillator) is input to the STOP pin. In the edge-sensitive release mode, STOP mode is started even when the STOP pin input is high level. Do not use any STOP5 to STOP2 pin inputs for releasing STOP mode in edge-sensitive release mode.

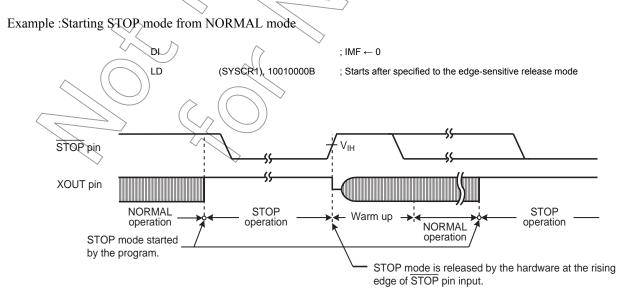


Figure 2-8 Edge-sensitive Release Mode

STOP mode is released by the following sequence.

- 1. In the dual-clock mode, when returning to NORMAL2, both the high-frequency and low-frequency clock oscillators are turned on; when returning to SLOW1 mode, only the low-frequency clock oscillator is turned on. In the single-clock mode, only the high-frequency clock oscillator is turned on.
- 2. A warm-up period is inserted to allow oscillation time to stabilize. During warm up, all internal operations remain halted. Four different warm-up times can be selected with the SYSCR1<WUT> in accordance with the resonator characteristics.
- 3. When the warm-up time has elapsed, normal operation resumes with the instruction following the STOP mode start instruction.
- Note 1: When the STOP mode is released, the start is made after the prescaler and the divider of the timing generator are cleared to "0".
- Note 2: STOP mode can also be released by inputting low level on the RESET pin, which immediately performs the normal reset operation.
- Note 3: When STOP mode is released with a low hold voltage, the following cautions must be observed.

  The power supply voltage must be at the operating voltage level before releasing STOP mode.

  The RESET pin input must also be "H" level, rising together with the power supply voltage. In this case, if an external time constant circuit has been connected, the RESET pin input voltage will increase at a slower pace than the power supply voltage. At this time, there is a danger that a reset may occur if input voltage level of the RESET pin drops below the non-inverting high-level input voltage (Hysteresis input).

Table 2-2 Warm-up Time Example (at fc = 16.0 MHz, fs ≠ 32.768 kHz)

NA/LIT	Warm-up Time [ms]				
WUT	Return to NORMAL Mode	Return to SLOW Mode			
00	12.288	750			
01	4.096	250			
10	3.072	5.85			
11	1.024	1.95			

Note 1: The warm-up time is obtained by dividing the basic clock by the divider. Therefore, the warm-up time may include a certain amount of error if there is any fluctuation of the oscillation frequency when STOP mode is released. Thus, the warm-up time must be considered as an approximate value.


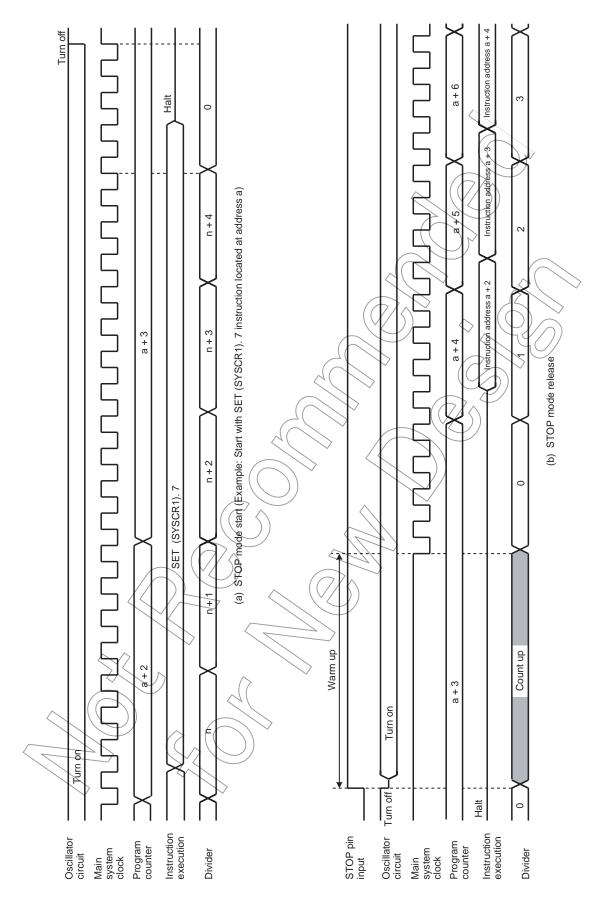


Figure 2-9 STOP Mode Start/Release

#### 2.2.4.2 IDLE1/2 mode and SLEEP1/2 mode

IDLE1/2 and SLEEP1/2 modes are controlled by the system control register 2 (SYSCR2) and maskable interrupts. The following status is maintained during these modes.

- 1. Operation of the CPU and watchdog timer (WDT) is halted. On-chip peripherals continue to operate.
- 2. The data memory, CPU registers, program status word and port output latches are all held in the status in effect before these modes were entered.
- 3. The program counter holds the address 2 ahead of the instruction which starts these modes.

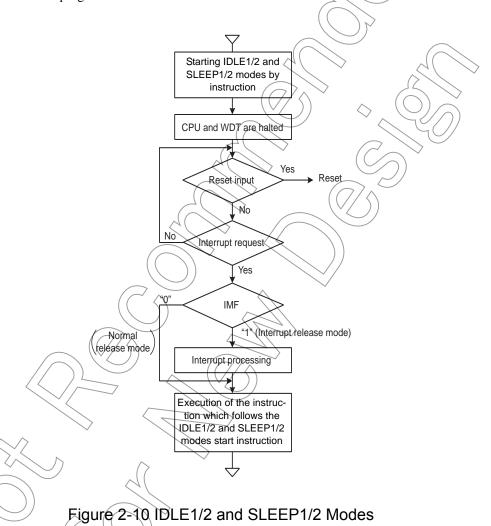

Page 21

TMP86FH92DMG

#### 2.2 System Clock Controller

Start the IDLE1/2 and SLEEP1/2 modes

After IMF is set to "0", set the individual interrupt enable flag (EF) which releases IDLE1/2 and SLEEP1/2 modes. To start IDLE1/2 and SLEEP1/2 modes, set SYSCR2<IDLE> to "1".

• Release the IDLE1/2 and SLEEP1/2 modes

IDLE1/2 and SLEEP1/2 modes include a normal release mode and an interrupt release mode. These modes are selected by interrupt master enable flag (IMF). After releasing IDLE1/2 and SLEEP1/2 modes, the SYSCR2<IDLE> is automatically cleared to "0" and the operation mode is returned to the mode preceding IDLE1/2 and SLEEP1/2 modes.

IDLE1/2 and SLEEP1/2 modes can also be released by inputting low level on the  $\overline{RESET}$  pin. After releasing reset, the operation mode is started from NORMAL1 mode.

(1) Normal release mode (IMF = "0")

IDLE1/2 and SLEEP1/2 modes are released by any interrupt source enabled by the individual interrupt enable flag (EF). After the interrupt is generated, the program operation is resumed from the instruction following the IDLE1/2 and SLEEP1/2 modes start instruction. Normally, the interrupt latches (IL) of the interrupt source used for releasing must be cleared to "0" by load instructions.

(2) Interrupt release mode (IMF = "1")

IDLE1/2 and SLEEP1/2 modes are released by any interrupt source enabled with the individual interrupt enable flag (EF) and the interrupt processing is started. After the interrupt is processed, the program operation is resumed from the instruction following the instruction, which starts IDLE1/2 and SLEEP1/2 modes.

Note: When a watchdog-timer interrupts is generated immediately before IDLE1/2 and SLEEP1/2 modes are started, the watchdog timer interrupt will be processed but IDLE1/2 and SLEEP1/2 modes will not be started.



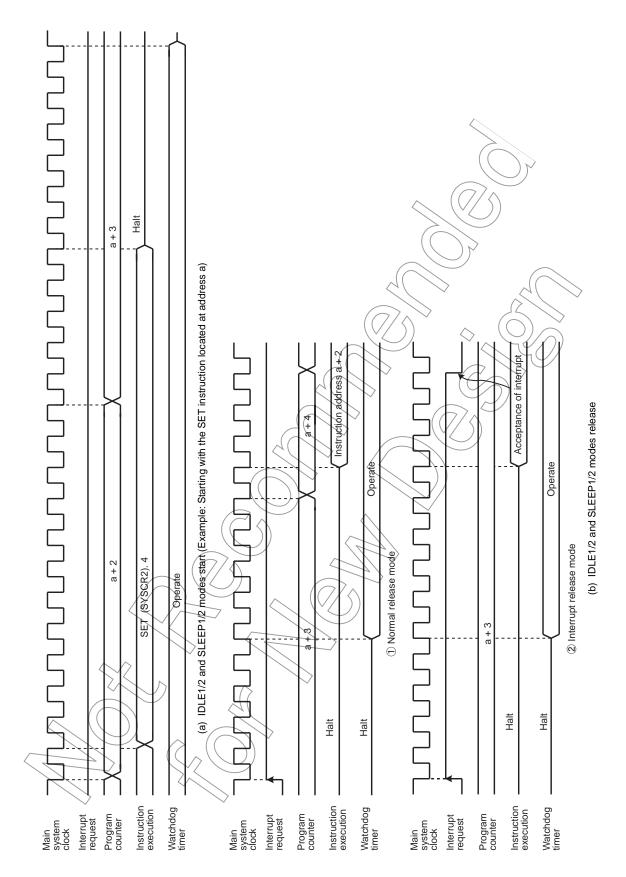


Figure 2-11 IDLE1/2 and SLEEP1/2 Modes Start/Release

2.2 System Clock Controller TMP86FH92DMG

#### 2.2.4.3 IDLE0 and SLEEP0 modes (IDLE0, SLEEP0)

IDLE0 and SLEEP0 modes are controlled by the system control register 2 (SYSCR2) and the time base timer control register (TBTCR). The following status is maintained during IDLE0 and SLEEP0 modes.

- 1. Timing generator stops feeding clock to peripherals except TBT
- 2. The data memory, CPU registers, program status word and port output latches are all held in the status in effect before IDLE0 and SLEEP0 modes were entered.
- 3. The program counter holds the address 2 ahead of the instruction which starts IDLE0 and SLEEP0 modes.

Note: Before starting IDLE0 or SLEEP0 mode, be sure to stop (Disable) peripherals. Stopping peripherals by instruction Starting IDLE0, SLEEP0 modes by instruction CPU and WDT are halted Yes\ Reset input Reset No TBT source clock falling Yèş TBTCR<TBTEN: Yes Nо TBT interrupt enable Yes (Normal release mode) No IMF = "1" Yes (Interrupt release mode) Interrupt processing Execution of the instruction which follows the IDLE0, SLEEP0 modes start instruction

Figure 2-12 IDLE0 and SLEEP0 Modes

· Start the IDLE0 and SLEEP0 mode s

Stop (Disable) peripherals such as a timer counter.

To start IDLE0 and SLEEP0 mode s, set SYSCR2<TGHALT> to "1".

· Release the IDLE0 and SLEEP0 mode s

IDLE0 and SLEEP0 mode s include a normal release mode and an interrupt release mode.

These modes are selected by interrupt master flag (IMF), the individual interrupt enable flag of TBT and TBTCR<TBTEN>.

After releasing IDLE0 and SLEEP0 mode s, the SYSCR2 TGHALT> is automatically cleared to "0" and the operation mode is returned to the mode preceding IDLE0 and SLEEP0 mode s. Before starting the IDLE0 or SLEEP0 mode, when the TBTCR TBTEN> is set to "1", INTTBT interrupt latch is set to "1".

IDLE0 and SLEEP0 mode s can also be released by inputting low level on the RESET pin. After releasing reset, the operation mode is started from NORMAL1 mode.

Note: IDLE0 and SLEEP0 mode s start/release without reference to TBTCR<TBTEN> setting.

(1) Normal release mode (IMF • EF7 • TBTCR < TBTEN > = "0")

IDLE0 and SLEEP0 mode s are released by the source clock falling edge, which is setting by the TBTCR<TBTCK>. After the falling edge is detected, the program operation is resumed from the instruction following the IDLE0 and SLEEP0 mode s-start instruction. Before starting the IDLE0 or SLEEP0 mode, when the TBTCR<TBTEN> is set to "1", INTTBT interrupt latch is set to "1".

(2) Interrupt release mode (IMF - EF7 - TBTCR<TBTEN> = "1")

IDLE0 and SLEEP0 mode's are released by the source clock falling edge, which is setting by the TBTCR<TBTCK> and INPTBT interrupt processing is started.

Note 1: Because returning from IDLE0, SLEEP0 to NORMAL1, SLOW1 is executed by the asynchronous internal clock, the period of IDLE0, SLEEP0 mode might be the shorter than the period setting by TBTCR<TBTCK>.

Note 2: When a watchdog timer interrupt is generated immediately before IDLE0/SLEEP0 mode is started, the watchdog timer interrupt will be processed but IDLE0/SLEEP0 mode will not be started.



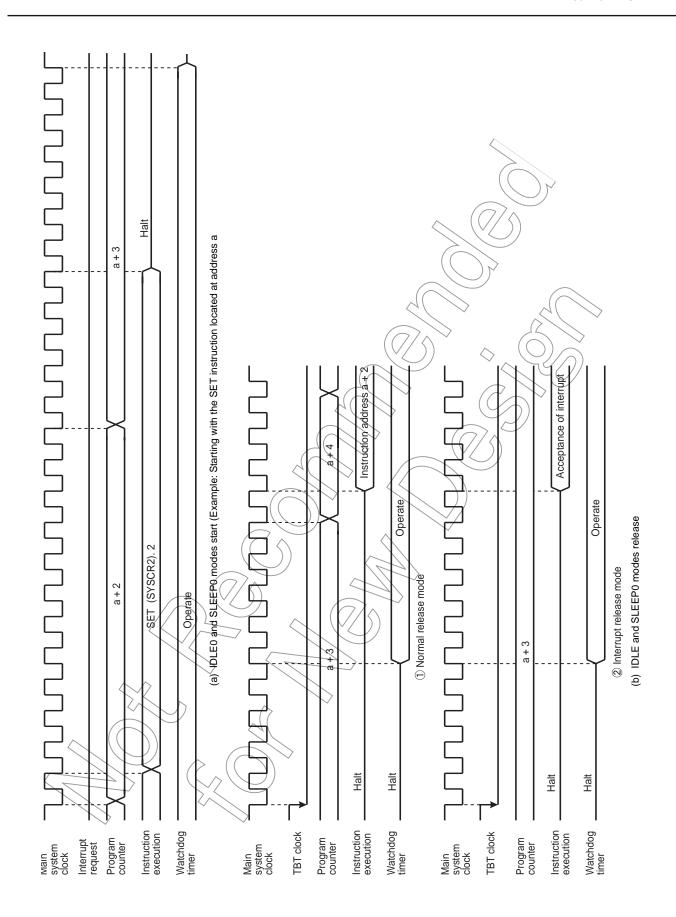


Figure 2-13 IDLE0 and SLEEP0 Modes Start/Release

#### 2.2.4.4 SLOW mode

SLOW mode is controlled by the system control register 2 (SYSCR2).

The following is the methods to switch the mode with the warm-up counter.

#### (1) Switching from NORMAL2 mode to SLOW1 mode

First, set SYSCR2<SYSCK> to switch the main system clock to the low-frequency clock for SLOW2 mode. Next, clear SYSCR2<XEN> to turn off high-frequency oscillation.


Note: The high-frequency clock can be continued oscillation in order to return to NORMAL2 mode from SLOW mode quickly. Always turn off oscillation of high-frequency clock when switching from SLOW mode to stop mode.

When the low-frequency clock oscillation is unstable, wait until oscillation stabilizes before performing the above operations. The timer/counter (TC4,TC3) can conveniently be used to confirm that low-frequency clock oscillation has stabilized.

#### Example 1: Switching from NORMAL2 mode to SLOW1 mode.

SET (SYSCR2). 5 ; SYSCR2<SYSCK>  $\leftarrow$  1 (Switches the main system clock to the low-frequency clock for SLOW2) CLR (SYSCR2). 7 ; SYSCR2<XEN>  $\leftarrow$  0 ; (Turns off high-frequency oscillation)

Example 2 : Switching to the SLOW1 mode after low-frequency clock has stabilized.

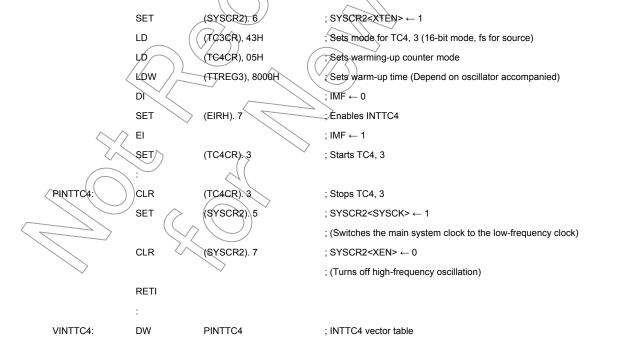

2. Operational Description


2.2 System Clock Controller TMP86FH92DMG

#### (2) Switching from SLOW1 mode to NORMAL2 mode


First, set SYSCR2<XEN> to turn on the high-frequency oscillation. When time for stabilization (Warm up) has been taken by the timer/counter (TC4,TC3), clear SYSCR2<SYSCK> to switch the main system clock to the high-frequency clock.

SLOW mode can also be released by inputting low level on the RESET pin. After releasing reset, the operation mode is started from NORMAL1 mode.

Note: After SYSCR2<SYSCK> is cleared to 0, instructions are executed continuously by the low-frequency clock during synchronization period for high-frequency and low-frequency clocks.



Example: Switching from the SLOW1 mode to the NORMAL2 mode (fc = 16 MHz, warm-up time is 4.0 ms).

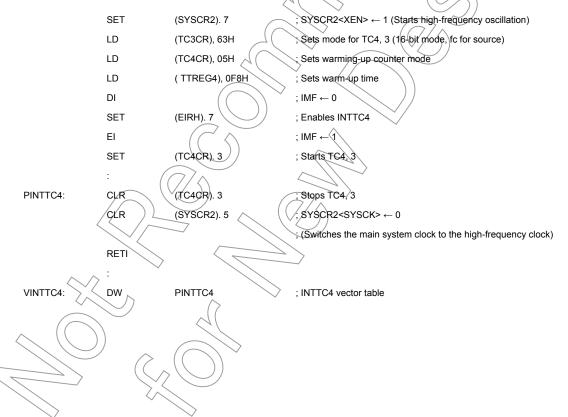

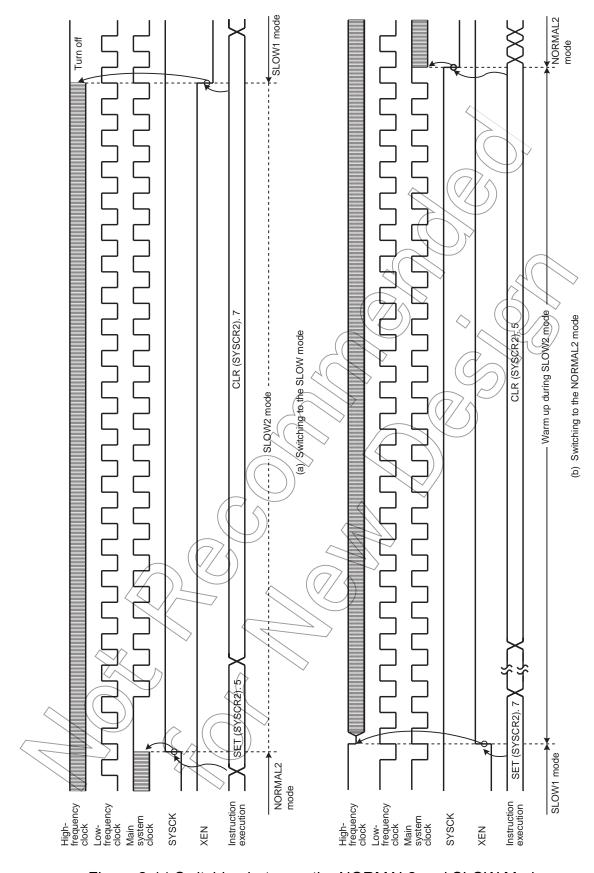


Figure 2-14 Switching between the NORMAL2 and SLOW Modes

2.3 Reset Circuit TMP86FH92DMG

#### 2.3 Reset Circuit

The TMP86FH92DMG has types of reset generation procedures: An external reset input, an address trap reset, a watchdog timer reset and a system clock reset, voltage detect reset 1,voltage detection 2,power on reset, trimming data reset. Of these reset, the address trap reset, the watchdog timer and the system clock reset, voltage detect reset 1,voltage detection 2 are a malfunction reset. When the malfunction reset request is detected, reset occurs during the maximum 24/fc[s].

The power-on reset signal and trimming data reset signal are input to the power-on warming-up reset circuit, which causes the device to enter a reset state. After the power-on warming-up time (tPOWUP) has elapsed, the reset is released. For details, refer to the section on the power-on reset circuit.

Table 2-3 shows on-chip hardware initialization by reset action.

Table 2-3 On-chip hardware Initialization by Reset Action


On-chip Hardware		Initial Value	On-chip Hardware	Initial Value	
Program counter	(PC)	(FFFEH)	Prescaler and divider of timing generator	2	
Stack pointer	(SP)	Not initialized	Prescaler and divides of timing generator	0	
General-purpose registers (W, A, B, C, D, E, H, L, IX, IY)		Not initialized	Watchdog timer	Enable	
Jump status flag	(JF)	Not initialized	voltage detection circuit	Disable	
Zero flag	(ZF)	Not initialized			
Carry flag	(CF)	Not initialized			
Half carry flag	(HF)	Not initialized	Output latches of I/O ports	Refer to I/O port circuitry	
Sign flag	(SF)	Not initialized			
Overflow flag	(VF)	Not initialized			
Interrupt master enable flag	(IMF)	(0)	Control registers	Refer to each of control	
Interrupt individual enable flags	(EF)		Control registers	register	
Interrupt latches	(IL)	( 6)	RAM	Not initialized	

### 2.3.1 External Reset Input

The RESET pin contains a Schmitt trigger (Hysteresis) with an internal pull-up resistor.

When the RESET pin is held at "L" level for at least 3 machine cycles (12/fc [s]) with the power supply voltage within the operating voltage range and oscillation stable, a reset is applied and the internal state is initialized.


When the RESET pin input goes high, the reset operation is released and the program execution starts at the vector address stored at addresses FFFEH to FFFFH.

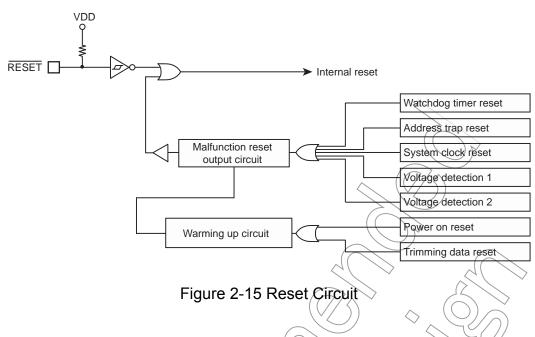

### 2.3.2 Address trap reset

If the CPU should start looping for some cause such as noise and an attempt be made to fetch an instruction from the on-chip RAM (when WDTCR1<ATAS> is set to "1"), DBR or SFR area, address trap reset will be generated. The reset time is maximum 24/fc[s] (1.5µs at 16.0 MHz).

Note: The operating mode under address trapped is alternative of reset or interrupt. The address trap area is alternative.



Note 1: Address "a" is on-chip RAM (WDTCR1<ATAS> = "1") space, DBR or SFR area.

Note 2: During reset release, reset vector "r" is read out, and an instruction at address "r" is fetched and decoded.

Figure 2-16 Address Trap Reset

### 2.3.3 Watchdog timer reset

Refer to Section "Watchdog Timer"

# 2.3.4 System clock reset

If the condition as follows is detected, the system clock reset occurs automatically to prevent dead lock of the CPU. (The oscillation is continued without stopping.)

- In case of clearing SYSCR2<XEN> and SYSCR2<XTEN> simultaneously to "0".
- In case of clearing SYSCR2<XEN> to "0", when the SYSCR2<SYSCK> is "0".
- In case of clearing SYSCR2<XEN>to "1"when the SYSCR2<XTEN> is "0".

The reset time is maximum 24/fc[s] (1.5 µs at 16.0 MHz).

2.3 Reset Circuit TMP86FH92DMG

#### 2.3.5 Power-on Reset

A power-on reset is generated internally when the supply voltage (VDD) is turned on.

Refer to Section "Power on reset".

#### 2.3.6 Voltage detection reset

A voltage detection reset is generated internally when the supply voltage (VDD) falls below the predefined threshold voltage.

Refer to Section "Voltage detection circuit".

#### 2.3.7 Trimming data reset

Trimming data bits are provided for adjusting the ladder resistor used to generate the reference voltages for the power-on reset signal and voltage detecting signal. These bits are read from the flash memory and latched internally during the power-on warming up period (tPOWUP). The trimming data reset is generated if the trimming data is corrupted due to noise or other causes. A supply voltage reset is generated internally when the supply voltage (VDD) falls below the predefined threshold voltage.

TMP86FH92DMG

### 2.4 Internal Reset Detection Flags

After an internal reset is released, the cause of this internal reset can be identified by reading the internal reset detection flag register (IRSCR). IRSCR<SYSRSF> corresponds to system clock reset, IRSCR<ADTRF> to address trap reset, IRSCR<WDTF> to watchdog timer reset, and IRSCR<CLKSF> to clock stop detection reset. Each of these bits is set to "1" when the corresponding reset is generated.

To clear IRSCR<SYSRSF, ADTRF, WDTF, CLKSF> to "0", write "1" in IRSCR<FCLR> or set the RESET pin (external reset) to "L" level Internal Reset Detection Flag Register **IRSTSR** (0019H)**RFCLR TRMRF** LVD2RF LVD1RF **SYSRF** WDTF ADTRF (Initial value: 0\*00 0000) 0: Initial state **RFCLR** Reset flag of initialized 1: Internal request reset flag to "0" write only 0: Initial state Trimming data reset detection flag **TRMRF** 1:Triming data reset detection flag 0: Initial state Voltage detection2 reset LVD2RF 1: Voltage detection2 reset detected 0: Initial state Voltage detection1 reset LVD1RF flag 1: Voltage detection1 reset detected 0: Initial state System clock reset de Read **SYSRF** tection flag 1: System clock reset detected only 0: Initial state Watchdog timer reset WDTF flag 1: Watch dog reset detected 0: Initial state Address latch reset de-ADTRF tection flag 1: Address trap reset detected



TMP86FH92DMG

# 3. Interrupt Control Circuit

The TMP86FH92DMG has a total of 22 interrupt sources excluding reset. Interrupts can be nested with priorities. Four of the internal interrupt sources are non-maskable while the rest are maskable.

Interrupt sources are provided with interrupt latches (IL), which hold interrupt requests, and independent vectors. The interrupt latch is set to "1" by the generation of its interrupt request which requests the CPU to accept its interrupts. Interrupts are enabled or disabled by software using the interrupt master enable flag (IMF) and interrupt enable flag (EF). If more than one interrupts are generated simultaneously, interrupts are accepted in order which is dominated by hardware. However, there are no prioritized interrupt factors among non-maskable interrupts.

	Interrupt Factors	Enable Condition	Interrupt Latch	Vector Ad- dress	Priority
Internal/External	(Reset)	Non-maskable	- /	FFFE	1
Internal	INTSWI (Software interrupt)	Non-maskable	- (	FFFC	2
Internal	INTUNDEF (Executed the undefined instruction interrupt)	Non-maskable		FFFC	2
Internal	INTATRAP (Address trap interrupt)	Non-maskable	(162)	FFFA	3
Internal	INTWDT (Watchdog timer interrupt)	Non-maskable	IL3	/FFF8	4
Internal	INTVLTD	MF • EF4 = 1	14	FFF6	5
External	ĪNTO (	IMF - EF5 = 1, INT0EN =1	145	FFF4	6
External	INT1	IMF • EF6 = 1	/L6	FFF2	7
Internal	INTTBT	IMF • EF7 = 1	\ IL7	FFF0	8
Internal	INTSBI	IMF · EF8=1	/ IL8	FFEE	9
Internal	INTRXD1	IMF • EF9 = 1	IL9	FFEC	10
Internal	INTTXD1	IMF • EF10 = 1	IL10	FFEA	11
Internal	INTTC1	IMF · EF11 = 1	IL11	FFE8	12
Internal	INTRXD2	IMF • EF12 = 1	IL12	FFE6	13
Internal	INTTXD2	IMF - EF13 = 1	IL13	FFE4	14
Internal	INTTC3	IMF • EF14 = 1	IL14	FFE2	15
Internal	INTTC4	IME • EF15 = 1	IL15	FFE0	16
External	INT3	IMF • EF16 = 1	IL16	FFBE	17
Internal	INTADC )	IMF • EF17 = 1	IL17	FFBC	18
Internal	INTSEIØ	IMF • EF18 = 1	IL18	FFBA	19
Internal	INTSEL	IMF • EF19 = 1	IL19	FFB8	20
External	INT4	IMF • EF20 = 1	IL20	FFB6	21
External	INT5	IMF • EF21 = 1	IL21	FFB4	22
- <	Reserved	IMF • EF22 = 1	IL22	FFB2	23
	Reserved	IMF • EF23 = 1	IL23	FFB0	24

Note 1: To use the address trap interrupt (INTATRAP), clear WDTCR1<ATOUT> to "0" (It is set for the "reset request" after reset is cancelled). For details, see "Address Trap".

Note 2: To use the watchdog time interrupt (INTWDT), clear WDTCR1<WDTOUT> to "0" (It is set for the "Reset request" after reset is released). For details, see "Watchdog Timer".

### 3.1 Interrupt latches (IL21 to IL2)

An interrupt latch is provided for each interrupt source, except for a software interrupt and an executed the undefined instruction interrupt. When interrupt request is generated, the latch is set to "1", and the CPU is requested to accept the interrupt if its interrupt is enabled. The interrupt latch is cleared to "0" immediately after accepting interrupt. All interrupt latches are initialized to "0" during reset.


The interrupt latches are located on address 003CH, 003DH, and 003EH in SFR area. Each latch can be cleared to "0" individually by instruction. However, IL2 and IL3 should not be cleared to "0" by software. For clearing the interrupt latch, load instruction should be used and then IL2 and IL3 should be set to "1". If the read-modify-write instructions such as bit manipulation or operation instructions are used, interrupt request would be cleared inadequately if interrupt is requested while such instructions are executed.

Interrupt latches are not set to "1" by an instruction.

Since interrupt latches can be read, the status for interrupt requests can be monitored by software.

Note: In main program, before manipulating the interrupt enable flag (EF) of the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, if using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF="1".



DI ; IMF  $\leftarrow$  0 ; IMF  $\leftarrow$  0 ; IL12,/L10 to IL6 $\leftarrow$  0 EI ; IMF  $\leftarrow$  1

Example 2: Reads interrupt latches

LD WA (ILL) ; W - ILH, A - ILL

Example 3: Tests interrupt latches

TEST (ILL):7 ; if IL7 = 1 then jump

# 3.2 Interrupt enable register (EIR)

The interrupt enable register (EIR) enables and disables the acceptance of interrupts, except for the non-maskable interrupts (Software interrupt, undefined instruction interrupt, address trap interrupt and watchdog interrupt). Non-maskable interrupt is accepted regardless of the contents of the EIR.

The EIR consists of an interrupt master enable flag (IMF) and the individual interrupt enable flags (EF). These registers are located on address 003AH, 003BH, and 0032H in SFR area, and they can be read and written by an instructions (Including read-modify-write instructions such as bit manipulation or operation instructions).

#### 3.2.1 Interrupt master enable flag (IMF)

The interrupt enable register (IMF) enables and disables the acceptance of the whole maskable interrupt. While IMF = "0", all maskable interrupts are not accepted regardless of the status on each individual interrupt enable flag (EF). By setting IMF to "1", the interrupt becomes acceptable if the individuals are enabled. When an interrupt is accepted, IMF is cleared to "0" after the latest status on IMF is stacked. Thus the maskable interrupts which follow are disabled. By executing return interrupt instruction [RETI/RETN], the stacked data, which was the status before interrupt acceptance, is loaded on IMF again.

TOSHIBA TMP86FH92DMG


The IMF is located on bit0 in EIRL (Address: 003AH in SFR), and can be read and written by an instruction. The IMF is normally set and cleared by [EI] and [DI] instruction respectively. During reset, the IMF is initialized to "0".

### 3.2.2 Individual interrupt enable flags (EF21 to EF4)

Each of these flags enables and disables the acceptance of its maskable interrupt. Setting the corresponding bit of an individual interrupt enable flag to "1" enables acceptance of its interrupt, and setting the bit to "0" disables acceptance. During reset, all the individual interrupt enable flags (EF21 to EF4) are initialized to "0" and all maskable interrupts are not accepted until they are set to "1".

Note: In main program, before manipulating the interrupt enable flag (EF) or the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, if using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF="4":

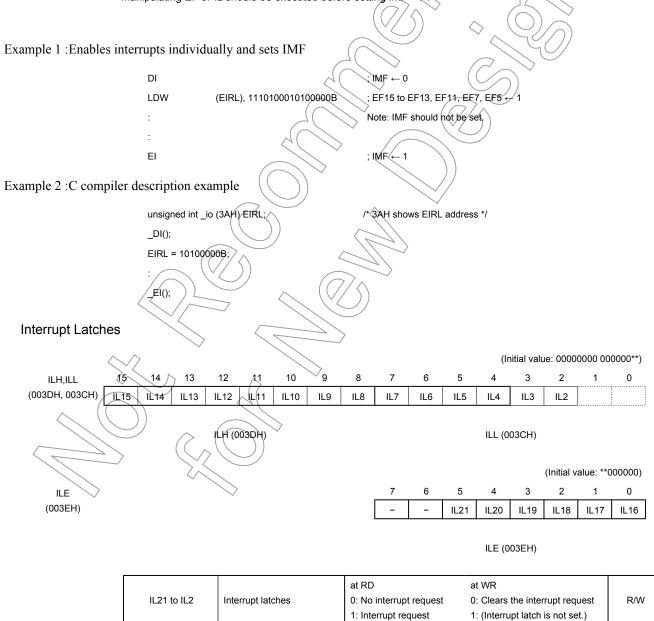


Note 1: To clear any one of bits IL7 to IL4, be sure to write "1" into IL2 and IL3.

TMP86FH92DMG

3.3 Interrupt Sequence

Note 2: In main program, before manipulating the interrupt enable flag (EF) or the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, if using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF="1".

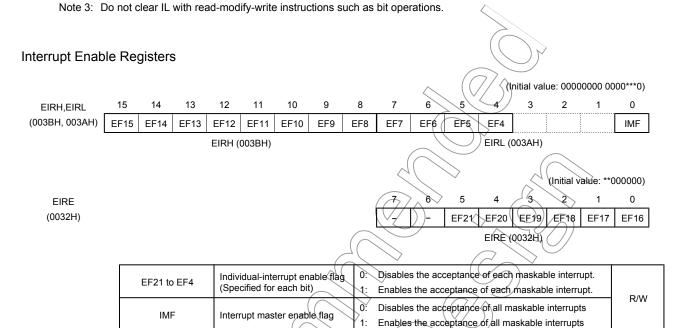

Note 1: \*: Don't care

Note 2: Do not set IMF and the interrupt enable flag (EF15 to EF4) to "1" at the same time.

Note 3: In main program, before manipulating the interrupt enable flag (EF) or the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, it using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF = "1".


## 3.3 Interrupt Sequence

An interrupt request, which raised interrupt latch, is held, until interrupt is accepted or interrupt latch is cleared to "0" by resetting or an instruction. Interrupt acceptance sequence requires 8 machine cycles (2 µs @16 MHz) after the completion of the current instruction. The interrupt service task terminates upon execution of an interrupt return instruction [RETI] (for maskable interrupts) or [RETN] (for non-maskable interrupts). Figure 3-1 shows the timing chart of interrupt acceptance processing.

### 3.3.1 Interrupt acceptance processing is packaged as follows.

- a. The interrupt master enable flag (IMF) is cleared to "0" in order to disable the acceptance of any following interrupt.
- b. The interrupt latch (IL) for the interrupt source accepted is cleared to "0".
- c. The contents of the program counter (PC) and the program status word, including the interrupt master enable flag (IMF), are saved (Pushed) on the stack in sequence of PSW + IMF, PCH, PCL. Meanwhile, the stack pointer (SP) is decremented by 3.
- d. The entry address (Interrupt vector) of the corresponding interrupt service program, loaded on the vector table, is transferred to the program counter.
- e. The instruction stored at the entry address of the interrupt service program is executed.

Note: When the contents of PSW are saved on the stack, the contents of IMF are also saved.

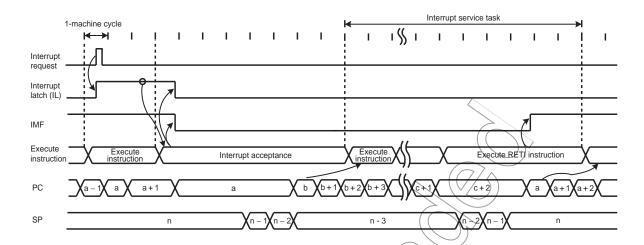

Note 1: a: Return address, b: Entry address, c: Address which RETI instruction is stored

Note 2: On condition that interrupt is enabled, it takes 38/fc [s] or 38/fs [s] at maximum (If the interrupt latch is set at the first machine cycle on 10 cycle instruction) to start interrupt acceptance processing since its interrupt latch is set.

Figure 3-1 Timing Chart of Interrupt Acceptance/Return Interrupt Instruction

Example: Correspondence between vector table address for INTTBT and the entry address of the interrupt service program

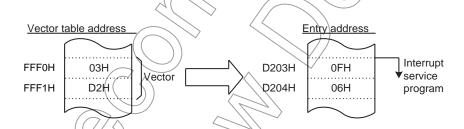


Figure 3-2 Vector Table Address and Entry Address

A maskable interrupt is not accepted until the IMF is set to "1" even if the maskable interrupt higher than the level of current servicing interrupt is requested.

In order to utilize nested interrupt service, the IMF is set to "1" in the interrupt service program. In this case, acceptable interrupt sources are selectively enabled by the individual interrupt enable flags.

To avoid overloaded nesting, clear the individual interrupt enable flag whose interrupt is currently serviced, before setting IMF to "1". As for non-maskable interrupt, keep interrupt service shorten compared with length between interrupt requests; otherwise the status cannot be recovered as non-maskable interrupt would simply nested.

#### 3.3.2 Saving/restoring general-purpose registers

During interrupt acceptance processing, the program counter (PC) and the program status word (PSW, includes IMF) are automatically saved on the stack, but the accumulator and others are not. These registers are saved by software if necessary. When multiple interrupt services are nested, it is also necessary to avoid using the same data memory area for saving registers. The following methods are used to save/restore the general-purpose registers.

3 Interrupt Sequence TMP86FH92DMG

#### 3.3.2.1 Using PUSH and POP instructions

If only a specific register is saved or interrupts of the same source are nested, general-purpose registers can be saved/restored using the PUSH/POP instructions.

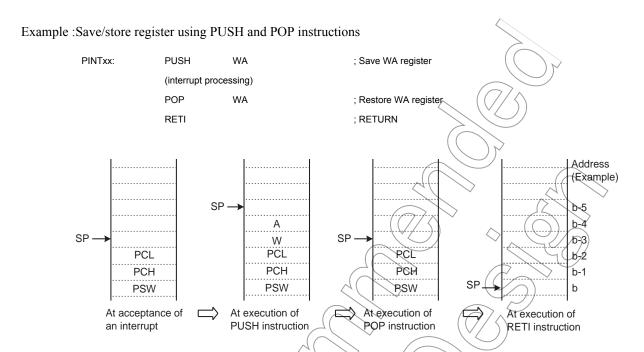
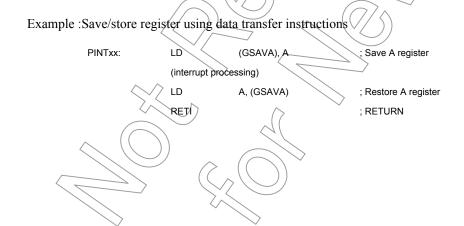


Figure 3-3 Saving/Restoring General-purpose Registers under PUSH and POP instructions

#### 3.3.2.2 Using data transfer instructions

To save only a specific register without nested interrupts, data transfer instructions are available.




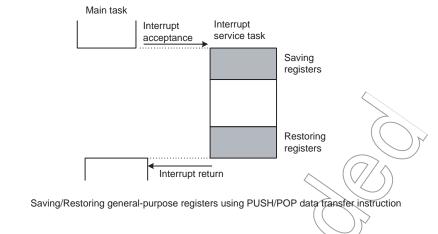


Figure 3-4 Saving/Restoring General-purpose Registers under Interrupt Processing



#### 3.3.3 Interrupt return

Interrupt return instructions [RETI]/[RETN] perform as follows.



As for address trap interrupt (INTATRAP), it is required to alter stacked data for program counter (PC) to restarting address, during interrupt service program.

Note: If [RETN] is executed with the above data unaltered, the program returns to the address trap area and INTATRAP occurs again. When interrupt acceptance processing has completed, stacked data for PCL and PCH are located on address (SP + 1) and (SP + 2) respectively.

#### Example 1 :Returning from address trap interrupt (INTATRAP) service program

PINTxx:

POP WA ; Recover SP by 2

LD WA, Return Address

PUSH WA ; Alter stacked data

(interrupt processing)

RETN ; RETURN

Example 2 :Restarting without returning interrupt

(In this case, PSW (Includes IMF) before interrupt acceptance is discarded.)

PINTxx:

INC

SP

; Recover SP by 3

INC

INC

SP

; (interrupt processing)

LD

EIRL, data

; Set IMF to "1" or clear it to "0"

JP

Restart Address

; Jump into restarting address

Interrupt requests are sampled during the final cycle of the instruction being executed. Thus, the next interrupt can be accepted immediately after the interrupt return instruction is executed.

Note 1: It is recommended that stack pointer be return to rate before INTATRAP (Increment 3 times), if return interrupt instruction [RETN] is not utilized during interrupt service program under INTATRAP (such as Example 2).

Note 2: When the interrupt processing time is longer than the interrupt request generation time, the interrupt service task is performed but not the main task.

# 3.4 Software Interrupt (INTSW)

Executing the SWI instruction generates a software interrupt and immediately starts interrupt processing (INTSW is highest prioritized interrupt).

Use the SWI instruction only for detection of the address error or for debugging.

#### 3.4.1 Address error detection

FFH is read if for some cause such as noise the CPU attempts to fetch an instruction from a non-existent memory address during single chip mode. Code FFH is the SWI instruction, so a software interrupt is generated

and an address error is detected. The address error detection range can be further expanded by writing FFH to unused areas of the program memory. Address trap reset is generated in case that an instruction is fetched from RAM, DBR or SFR areas.

### 3.4.2 Debugging

Debugging efficiency can be increased by placing the SWI instruction at the software break point setting address.

# 3.5 Undefined Instruction Interrupt (INTUNDEF)

Taking code which is not defined as authorized instruction for instruction causes INTUNDEF. INTUNDEF is generated when the CPU fetches such a code and tries to execute it. INTUNDEF is accepted even if non-maskable interrupt is in process. Contemporary process is broken and INTUNDEF interrupt process starts, soon after it is requested.

Note: The undefined instruction interrupt (INTUNDEF) forces CPU to jump into vector address, as software interrupt (SWI) does.

## 3.6 Address Trap Interrupt (INTATRAP)

Fetching instruction from unauthorized area for instructions (Address trapped area) causes reset output or address trap interrupt (INTATRAP). INTATRAP is accepted even if non-maskable interrupt is in process. Contemporary process is broken and INTATRAP interrupt process starts, soon after it is requested.

Note: The operating mode under address trapped, whether to be reset output or interrupt processing, is selected on watchdog timer control register (WDTCR).



3.7 External Interrupts TMP86FH92DMG

### 3.7 External Interrupts

The TMP86FH92DMG has 5 external interrupt inputs. These inputs are equipped with digital noise reject circuits (Pulse inputs of less than a certain time are eliminated as noise).

Edge selection is also possible with INT1,INT3,INT4. The INT0/P10 pin can be configured as either an external interrupt input pin or an input/output port, and is configured as an input port during reset.

Edge selection, noise reject control and INTO/P10 pin function selection are performed by the external interrupt control register (EINTCR).

Source	Pin	Enable Conditions	Release Edge (level)	Digital Noise Reject		
INT0	ĪNT0	IMF × EF5 × INT0EN=1	Falling edge	Pulses of less than 2/fc [s] are eliminated as noise. Pulses of 7/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.		
INT1	INT1	IMF × EF6 = 1	Falling edge or Rising edge	Pulses of less than 15/fc of 63/fc [s] are eliminated as noise. Pulses of 49/fc or 193/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs/[s] or more are considered to be signals.		
INT3	INT3	IMF × EF16 = 1	Falling edge Rising edge Falling and Rising edge or H level	Pulses of less than 7/fc [s] are eliminated as noise. Pulses of 25/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3/5/fs [s] or more are considered to be signals.		
INT4	INT4	IMF × EF20 = 1	Falling edge Rising edge Falling and Rising edge or H level	Pulses of less than 7/fc [s] are eliminated as noise. Pulses of 25/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.		
INT5	ĪNT5	IMF (x (EF2/1 = 1)	Falling edge	Pulses of less than 2/fc [s] are eliminated as noise. Pulses of 7/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.		

- Note 1: In NORMAL1/2 or IDLE1/2 mode, if a signal with no noise is input on an external interrupt pin, it takes a maximum of "signal establishment time + 6/fs[s]" from the input signal's edge to set the interrupt latch.
- Note 2: When INT0EN = "0", IL5 is not set even if a falling edge is detected on the INT0 pin input.
- Note 3: When a pin with more than one function is used as an output and a change occurs in data or input/output status, an interrupt request signal is generated in a pseudo manner. In this case, it is necessary to perform appropriate processing such as disabling the interrupt enable flag.

#### External Interrupt Control Register

EINTCR	7	6	5	4	3	2	1	0	
(0037H)	INT1NC	INT0EN	INT	3ES	INT	4ES	INT1ES		(Initial value: 0000 000*)


INT1NC	Noise reject time select	O: Pulses of less than 63/fc [s] are eliminated as noise  1: Pulses of less than 15/fc [s] are eliminated as noise	R/W
INT0EN	P10/INT0 pin configuration	0: P10 input/output port 1: INTO pin (Port P10 should be set to an input mode)	R/W
INT4 ES	INT4 edge select	00: Rising edge 01: Falling edge 10: Rising edge and Falling edge 11: "H" level	R/W
INT3 ES	INT3 edge select	00: Rising edge 01: Falling edge 10: Rising edge and Falling edge 11: "H" level	R/W
INT1 ES	INT1 edge select	0: Rising edge 1: Falling edge	R/W

Note 1: fc: High-frequency clock [Hz], \*: Don't care

Note 2: When the system clock frequency is switched between high and low or when the external interrupt control register (EINTCR) is overwritten, the noise canceller may not operate normally. It is recommended that external interrupts are disabled using the interrupt enable register (EIR).

Note 3: The maximum time from modifying INT1NC until a noise reject time is shanged is 26/fc.

Note 4: In case RESET pin is released while the state of INT4 pin keeps "H" level, the external interrupt 4 request is not generated even if the INT4 edge select is specified as "H" level. The rising edge is needed after RESET pin is released.

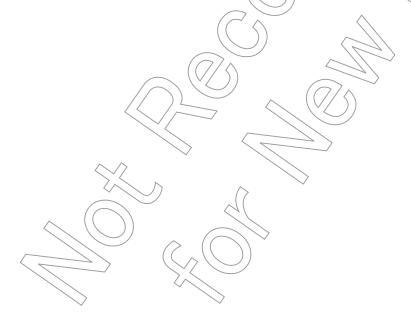

3.7 External Interrupts TMP86FH92DMG



TOSHIBA TMP86FH92DMG

# 4. Special Function Register (SFR)

The TMP86FH92DMG adopts the memory mapped I/O system, and all peripheral control and data transfers are performed through the special function register (SFR) or the data buffer register (DBR). The SFR is mapped on address 0000H to 003FH, DBR is mapped on address 0F80H to 0FFFH.

This chapter shows the arrangement of the special function register (SFR) and data buffer register (DBR) for TMP86FH92DMG.

### 4.1 SFR

Address	Read	Write		
0000H	P.O	DR		
0001H	(	DR		
0002H	P2DR			
0003H	P3DR			
0004H		UCR		
0005H	4	UCR		
0006H	P2P	UCR		
0007H	Rese	erved		
0008H	P30	CR1		
0009H	P101	JTCR		
000AH	R30	CR2		
000BH	Pool	JTCR /		
000CH	POPRD	_		
000DH	P2PRD	-		
000EH	App	CCR1		
000FH	ADO	CCR2		
0010H	TC1DRAL TC1DRAH			
0011H				
0012H	TC1DRBL			
0013H	TC1DRBH			
0014H	TC	1CR		
0015H	SBISRA	SBICRA		
0016H	SBII	DBR		
0017H	-	I2CAR		
0018H	SBISRB	SBICRB		
0019H	IRS	TSR		
001AH	TC	3CR		
001BH	TC4	4CR		
001CH	TTR	EG3		
001DH	TTREG4			
001EH	PWREG3			
001FH	PWREG4			
0020H	ADCDR2 -			
0021H	ADCDR1 - UART2SR UART2CR1			
0022H				
0023H	-	UART2CR2		
0024H	RD2BUF	TD2BUF		
0025H	UART1SR	UART1CR1		

4.1 SFR TMP86FH92DMG


Address	Read	Write
0026H	-	UART1CR2
0027H	RD1BUF	TD1BUF
0028H	SESR	<u> </u>
0029H	SE	DR
002AH	SE	CR
002BH	VDO	CR1
002CH	VDO	CR2
002DH	P1PRD	
002EH	Rese	erved
002FH	Rese	erved
0030H	Rese	erved
0031H	-	STOPCR
0032H	EN	RE
0033H	Rese	erved
0034H	-	WDTCR1
0035H	( )	WDTCR2
0036H	ТВТ	TCR ( )
0037H	EIN	TCR
0038H	sys	CR1 (// \
0039H	SYS	CR2
003AH	EI	RL
003BH	EII	રમ ))
003CH	IL.	L
003DH		H
003EH	IL.	E
003FH	P	SW

Note 1: Do not access reserved areas by the program.

Note 2: -; Cannot be accessed.

Note 3: Write-only registers and interrupt latches cannot use the read-modify-write instructions (Bit manipulation instructions such as SET, CLR, etc. and logical operation instructions such as AND, OR, etc.).

#### 4.2 DBR

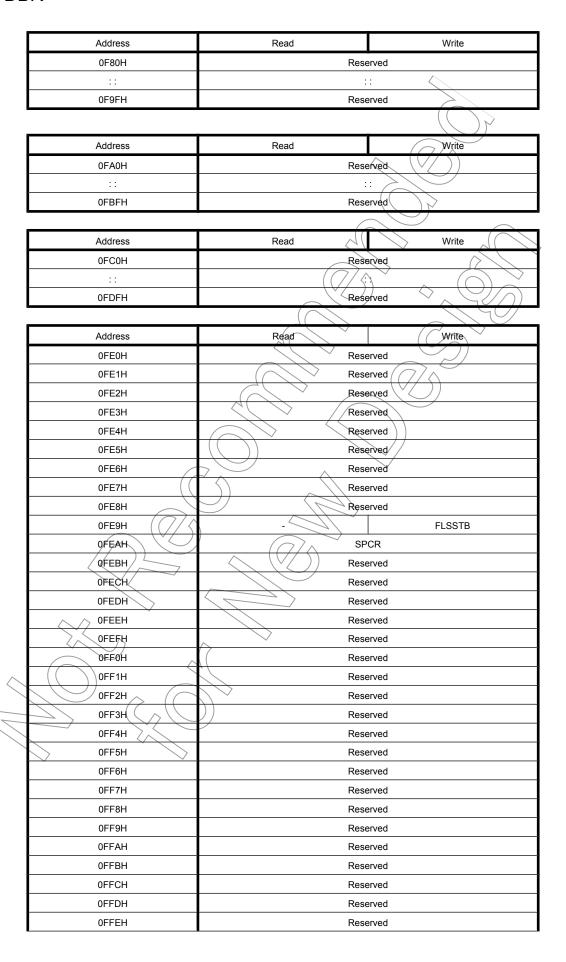

4.2 DBR TMP86FH92DMG

Address	Read	Write	
0FFFH	FLSCR		

Note 1: Do not access reserved areas by the program.

Note 2: -; Cannot be accessed.

Note 3: Write-only registers and interrupt latches cannot use the read-modify-write instructions (Bit manipulation instructions such as SET, CLR, etc. and logical operation instructions such as AND, OR, etc.).



TMP86FH92DMG

### 5. I/O Ports

The TMP86FH92DMG have 4 parallel input/output ports as follows.

	Primary Function	Secondary Functions
Port P0	8-bit I/O port	External interrupt input, Timer/Counter input/output, UART input/output, Serial expansion interface input/output and serial PROM mode control input.
Port P1	5-bit I/O port	External interrupt input, divider output, UART input/output and serial bus interface input/output
Port P2	3-bit I/O port	External interrupt input, STOP mode release signal input and low frequency resonator connection
Port P3	8-bit I/O port	Analog input, STOP mode release signal input and Timer/Counter input/output

Each output port contains a latch, which holds the output data. All input ports do not have latches, so the external input data should be externally held until the input data is read from outside or reading should be performed several timer before processing. Figure 5-1 shows input/output timing examples.

External data is read from an I/O port in the S1 state of the read cycle during execution of the read instruction. This timing cannot be recognized from outside, so that transient input such as chattering must be processed by the program.

Output data changes in the S2 state of the write cycle during execution of the instruction which writes to an I/O port.

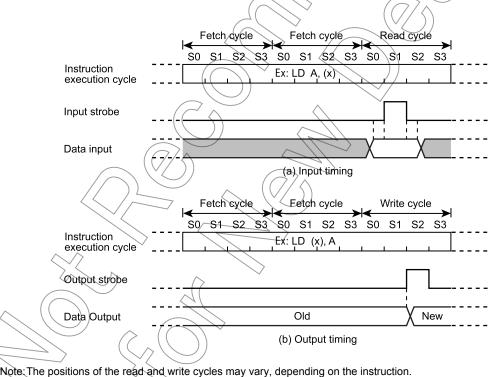


Figure 5-1 Input/Output Timing (Example)

# 5.1 P0 (P07 to P00) Port (High Current)

The P0 port is an 8-bit input/output port shared with external interrupt input, serial expansion interface input/output, UART1 input/output, timer counter input/output and serial PROM mode control input. When using this port as serial expansion interface output or UART1 output, set the output latch to 1. When using this port as a port output, the output latch data (P0DR) is output to the P0 port.


When reset, the output latch (P0DR) and the push-pull control register (P0OUTCR) are initialized to 1 and 0, respectively.


The P0 port allows its output circuit to be selected between N-channel open-drain output or push-pull output by the P0OUTCR register.

The P0 port has programmable internal Pull-up resistance to be controlled by P0PUCR registers.

When using this port as a port input, external interrupt input, serial expansion interface input, UART1 input and timer counter input, set the P0OUTCR register's corresponding bit to 0 after setting the P0DR to 1. The P0 port has independent data input registers. To inspect the output latch status, read the P0DR register. To inspect the pin status, read the P0PRD register.

In the serial PROM mode, P01 pin used as a BOOT/RXD1 pin, P00 pin used as a TXD1 pin For details, see "Serial PROM Mode Setting".

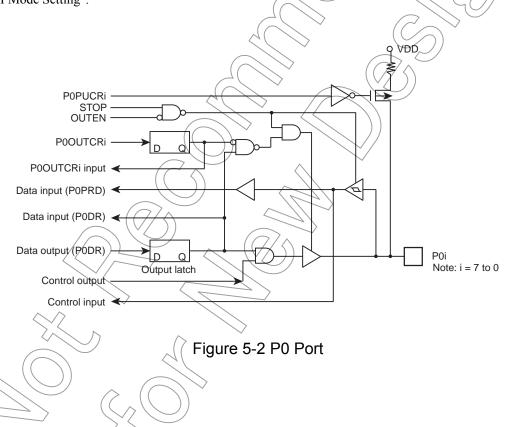

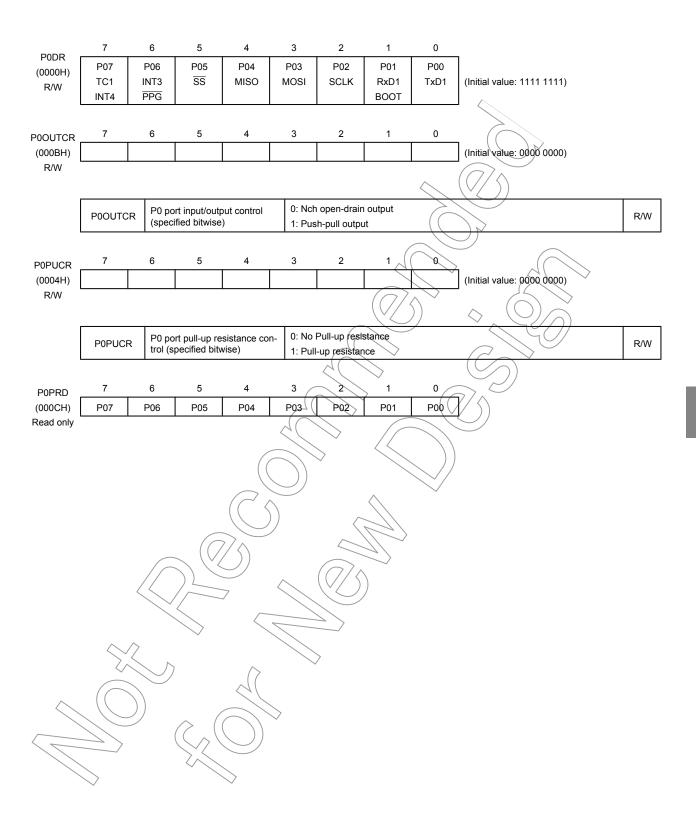

5.2 P1 (P14 to P10) Port TMP86FH92DMG

### 5.2 P1 (P14 to P10) Port

The P1 port is a 5-bit input/output port shared with external interrupt input, divider output, UART2 input/output and serial bus interface input/output. When using this port as divider output, UART2 output and serial bus interface output, set the output latch to 1. When using this port as a port output, the output latch data(P1DR) is output to the P1 port.


When reset, the output latch (P1DR) and the push-pull control register(P1OUTCR) are initialized to 1 and 0,respectively.


The P1 allows its output circuit to be selected between N-channel open-drain or push-pull output by the P1OUTCR register.

The P1 port has programmable internal pull-up resistance to be controlled by P1PUCR.

When using this port as a port input, external interrupt input, UART2 input and serial bus interface input, set the P1OUTCR register's corresponding bit to 0 after setting the P1DR to 1.

The P1 port has independent data input registers. To inspect the output latch status, read the P1DR register. To inspect the pin status, read the P1PRD register.

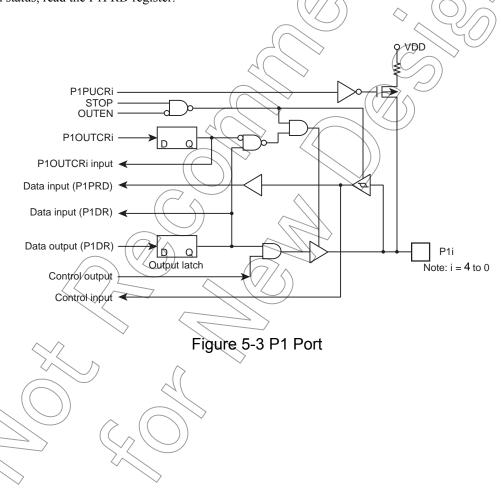

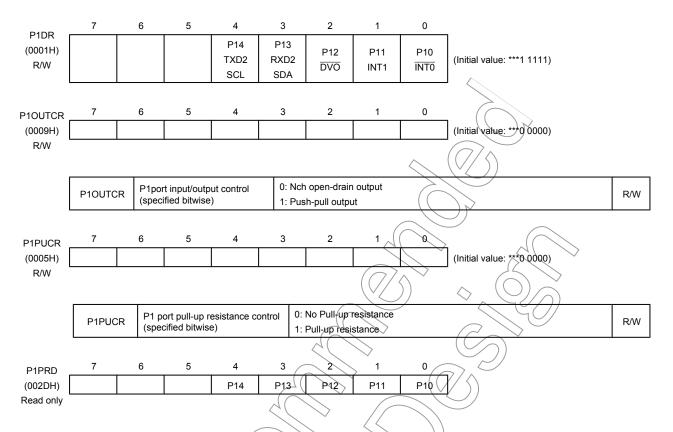

Note: P13 and P14 can be used as the input output for either UART2 or I<sup>2</sup>C bus control signals. Therefore, UART2 and serial bus interface cannot be used at the same time. These functions can be enabled and disabled in their respective function registers. UART2 and I<sup>2</sup>C bus cannot be enabled at the same time.




5.3 P2 (P22 to P20) Port TMP86FH92DMG


### 5.3 P2 (P22 to P20) Port

The P2 port is a 3-bit input/output port shared with external interrupt input, STOP mode release signal input, and low-frequency resonator connecting pin. When using this port as a port input or function pin, set the output latch to 1. The output latch is initialized to 1 when reset. When operating in dual-clock mode, connect a low-frequency resonator (32.768 kHz) to the P21 (XTIN) and P22 (XTOUT) pins. When operating in single-clock mode, the P21 and P22 pins can be used as ordinary input/output ports. We recommend using the P20 pin for external interrupt input or STOP mode release signal input or as a port input. (When used as a port output, the interrupt latch is set by a falling edge.)

The P2 port has independent data input registers. To inspect the output latch status, read the P2DR register. To inspect the pin status, read the P2PRD register. When the P2DR or P2PRD read instruction is executed for the P2 port, the values read from bits 7 to 3 are indeterminate.

The P20 port has programmable internal Pull-up resistance to be controlled by P2PUCR.

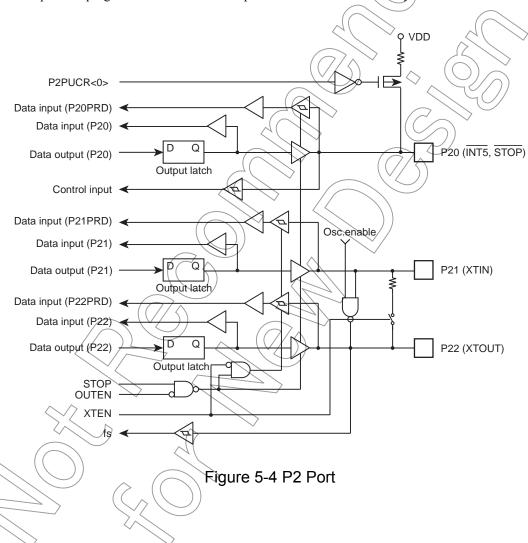

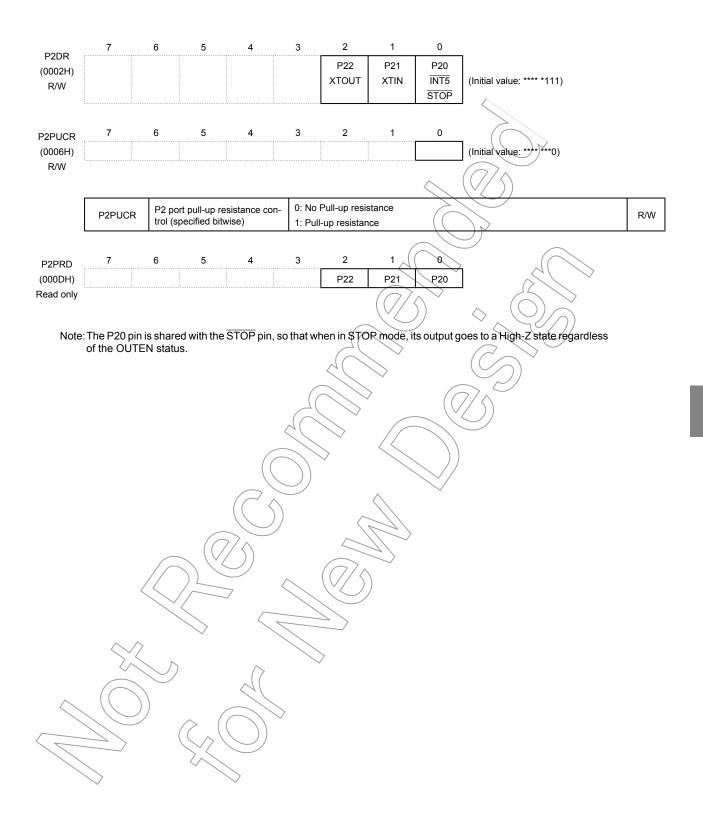

5. I/O Ports

5.4 P3 (P37 to P30) Port TMP86FH92DMG

### 5.4 P3 (P37 to P30) Port

The P3 port is an 8-bit input/output port that can be specified for input or output bitwise, and is shared with analog input and key-on wakeup input (KWI).

The P3 port input/output control registers P3CR1 and P3CR2 are used to specify the function of each pin. After reset, the P3CR1 and P3CR2 are initialized to 0 and 1, respectively, so the P3 port is configured for input mode. The P3 port output latches are initialized to 0.

To use each pin as a port output, set the corresponding bit in the P3CR1 to 1.

To use each pin as a port input, set the corresponding bit in the P3CR1 to 0 and then set the corresponding bit in the P3CR2 to 1.

To use each pin as a key-on wakeup input, set the corresponding bit in the P3CR1 to 0 and then set the corresponding bit in the STOPCR to 1.

To use each pin as an analog input, set the corresponding bit in the P3CR1 to 0 and then set the corresponding bit in the P3CR2 to 0.

When P3CR1=1, reading the P3DR returns the values of the respective output/latches.


Any pins of the P3 port which are not used for analog input can be used as input/output ports. During AD conversion, however, avoid executing output instructions on these pins to ensure the accuracy of conversion. Also note that, during AD conversion, rapidly changing signals should not be input on any pins near analog input pins.

Table 5-1 Setting of register according to each function value

Function	Set value				
Function	P3DR	P3CR1	P3CR2	STOPCR	
Port input	)-)	0	1//	-	
Key-on wakeup input	<u>).</u>	0_	·	1	
Analog input	-	0	0	-	
Port 0 output	0	1	> -	-	
Port 1 output	1		-	-	

Table 5-2 Setting of register according to each function value

Ī	Cond	lition	Destination of PPP	
	P3CR1 P3CR2		Reading value of P3DR	
	0 🔿	0	0	
	0 <	1	State of terminal	
		O Contrata of a	Contants of autout lately	
١	((1))	1	Contents of output latch	

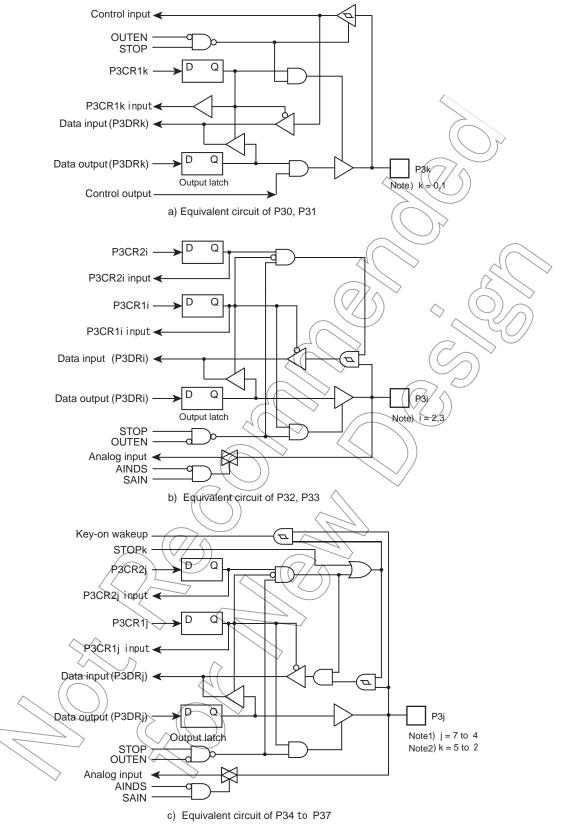

Note 1) STOP = bit 7 of SYSCR1
Note 2) SAIN = AD input select signal
Note 3) STOPk = bit 7 to bit 4 of STOPCR

Figure 5-5 P3 Port

	7	6	5	4	3	2	1	0	_	
P3DR	P37	P36	P35	P34	P33	P32	P31	P30		
(0003H)	AIN5	AIN4	AIN3	AIN2	AIN1	AIN0	TC4	TC3		
R/W	STOP5	STOP4	STOP3	STOP2			PDO4	PDO3	(Initial value: 0000 0000)	
							PWM4	PWM3		
							PPG4			
P3CR1	7	6	5	4	3	2	1	0		
(H8000)									(Initial value: 0000 0000)	
	P3CR1		ols P3 port i	nput/output	- 1	ut mode (po put mode	rt input, or a	analog input	t or key on wake up input)	R/W
		1 , ,		,	11.000	parmodo			)}	
P3CR2	7	6	5	4	3	2	1 (	0		
(000AH)							4		(Initial value: 1111 (1**)	
	P3CR2		•	nput (specifi		log input		))	$\Diamond$ (O) $\check{\Diamond}$	R/W
		bitwis	e)		1: Por	t Input		/		

- Note 1: The port placed in input mode reads the pin input state. Therefore, when the input and output modes are used together, the output latch contents for the port in input mode might be changed by executing a bit manipulation instruction.
- Note 2: As for the analog input pin because of penetration electric current measure, please be sure to clear the bit to which P3CR2 corresponds in "0".
- Note 3: Do not set the output mode (P3CR1="1") for the pin used as an analog input, due to avoid external short-circuits.
- Note 4: Pins not used for analog input can be used as I/O ports. During AD conversion, output instructions should not be executed to keep a precision. In addition, a variable signal should not be input to a port adjacent to the analog input during AD conversion.

TOSHIBA TMP86FH92DMG

# 6. Power-on reset circuit

### 6.1 Power-on reset circuit

The power-on reset circuit generates a reset when the TMP86FH92DMG is powered on. It also generates a power-on reset signal if the supply voltage drops below the threshold voltage of the power-on reset circuit.

Note: The power-on reset circuit cannot be emulated with the TMP86C993XB (Emulation Chip). Therefore, when using the development tool for debugging, ensure that operation is performed within the operating voltage range of the TMP86FH92DMG. For the operating voltage range, refer to the chapter on electrical characteristics.

### 6.1.1 Configuration

The power-on reset circuit is comprised of a reference voltage generator and a comparator.

The comparator compares the supply voltage divided by a resistor ladder with the reference voltage generated by the reference voltage generator.

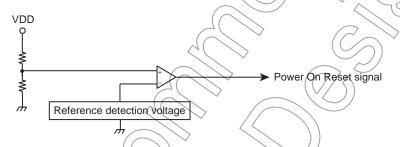


Figure 6-1 Power-on reset circuit


### 6.1.2 function

When the TMP86FH92DMG is powered on, the power-on reset circuit generates a power-on reset signal while the supply voltage is below the power-on reset release voltage. The power-on reset signal is released when the supply voltage rises above the power-on reset release voltage.

When the TMP86FH92DMG is shut off, the power-on reset circuit generates a power-on reset signal when the supply voltage drops below the power-on reset threshold voltage. While the power-on reset signal is generated, the warm-up counter circuit, CPU and peripheral circuits are reset.

Upon release of the power-on reset signal, the warm-up counter circuit starts operating. After the warm-up time has elapsed, the CPU and peripheral circuits are released from the reset state.

After the supply voltage reaches the power-on reset release voltage level, it must be raised to the operating range before the power-on warm-up time expires. If the supply voltage is not in the operating range at the completion of the power-on warm-up time, the TMP86FH92DMG cannot operate properly.

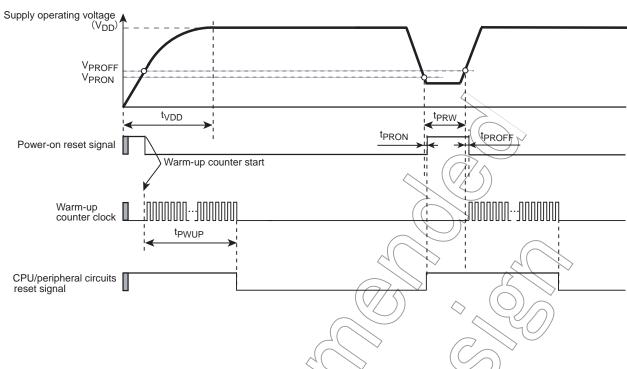

- Note 1: The power-on reset circuit may not operate properly depending on transitions in supply voltage (VDD). When designing your application system, careful consideration must be given to ensure proper operation of the power-on reset circuit by referring to the device's electrical characteristics.
- Note 2: The input clock to the warm-up counter is derived from the oscillation circuit. Because the oscillation frequency is unstable until the oscillation circuit stabilizes, the warm-up time includes error.
- Note 3: The supply voltage must be raised to satisfy the condition  $t_{VDD} < t_{RWMP}$ .

Figure 6-2 Operation of the power on reset circuit



TOSHIBA TMP86FH92DMG

# Voltage detection circuit (VLTD)

The voltage detecting circuit monitors the supply voltage level and generates an interrupt or reset upon detection of a low-voltage condition.

Note: The voltage detecting circuit may not operate properly depending on transitions in supply voltage (VDD). When designing your application system, careful consideration must be given to ensure proper operation of the voltage detecting circuit by referring to the device's electrical characteristics.

# 7.1 Configuration

The voltage detecting circuit is comprised of a reference voltage generator, two detection voltage select circuits, two comparators and control registers.

The supply voltage (VDD) is divided by the ladder resistor and input to the detection voltage select circuit. The detection voltage select circuit selects a voltage according to the specified detection voltage (VDxLVL) (x = 1 or 2), and the comparator compares it with the reference voltage. When the comparator detects the selected voltage, a voltage detection reset signal or an INTVLTD interrupt request signal can be generated.

Whether to generate a voltage detection reset signal or an INTVLTD interrupt request signal can be programmed by software. In the former case, a voltage detection reset signal is generated when the supply voltage (VDD) becomes lower than the detection voltage (VDxLVL). In the latter case, an INTVLTD interrupt request signal is generated when the supply voltage (VDD) falls to the detection voltage level.

Note: Since the comparators used for voltage detection do not have a hysteresis structure, INTVLTD interrupt request signals may be generated frequently if the supply voltage (VDD) is close to the detection voltage (VDxLVL). INTVLTD interrupt request signals may be generated not only when the supply voltage falls to the detection voltage but also when it rises to the detection voltage.

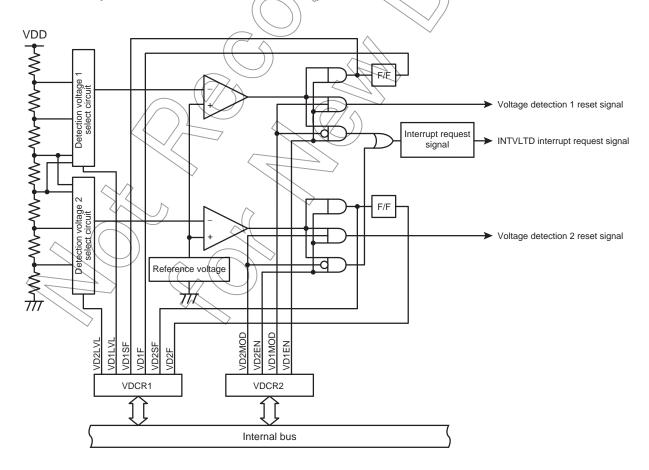


Figure 7-1 Voltage detection circuit diagram

7.2 Control TMP86FH92DMG

### 7.2 Control

The voltage detection circuit is controlled by the Voltage Detection Control Register 1 (VDCR1) and Voltage Detection Control Register 2 (VDCR2).

The functions of the VDCR1 and VDCR2 vary between the TMP86FH92DMG and the emulation chip TMP86C993XB. For details, refer to the register descriptions below.

The TMP86C993XB does not allow an interrupt or a reset to be generated by voltage detection. Instead, the VD1S and VD2S bits are provided in the VDCR2 to support the emulation of voltage detection operation. Setting VDCR2<VDxS> to 0 while VDCR2<VDxEN> is set to 1 generates an interrupt or a reset depending on the VDCR2<VDxMOD> setting (x = 1, 2). In debugging the voltage detection circuit with the TMP86C993XB (development tool), this function can be used to emulate interrupt/reset generation by inserting a write instruction to the VDCR2 in a software program.

Please ensure that the final verification of software operation is conducted with the TMP86FH92DMG.

1 10	case crisure	mai me m	.iiai veiii	ilcation (	or sortwar	c opc	ration is conducted wit	ii tiic	TWI 60FH52DWG.	
Voltage o	detection c	ontrol re	gister1				4			
VDCR1	7	6	5	4	3		2 0			
	VD2F	-		2LVL		1		(Institute	value: 0010 0000)	
(002BH)	VD2F	VD2SF	VD2	2LVL	VD1F	VL	VD1LVL	(Initial	value: 0010 0000)	
										l
1		1				4	TMR86FH92DMG	$\subseteq$	TMP86C993XB	
							Read		Read	
	VD2F		etection 2 fl he state wh	lag nen VDD <	VD2LVL)	0; 1:	VDD ≥ VD2LVL VDD < VD2LVL	0)	- Writing a 0 to VDCR2 <vd2s> sets this bit to 1.</vd2s>	R/W
		(Note 2)				>	Write		Write	
					$\bigcirc)$	0: 1:	Clearing the flag - (Note 4)	0: 1:	Clear the flag - (Note 4)	
	VD2SF	(Indicates	etection 2 s the relation when read.)	hetween	DD and	0: 1:	VDB & VD2LVL VDD < VD2LVL	ately 0 is v	bit is only read as 1 immedi- (for 3 machine cycles) after a written to VDCR2 <vd2s>. At r times, it is always read as 0.</vd2s>	Read Only
	VD2LVL	Voltage de (Note 3)	etection 2 le	evel select		00: 01: 10: 11:	Reserved 2.9 to 3.3V Reserved Reserved	dete	bit has no meaning as voltage ction is performed based on /DCR2 <vd2s> setting.</vd2s>	R/W
	^ /	$\sim$					Read		Read	
						0:	VDD ≥ VD1LVL	0:	-	
	VD1F	_	etection 1 fl	lag nen VDD <	VD1LVL.)	1:	VDD < VD1LVL	1:	Writing a 0 to VDCR2 <vd1s> sets this bit to 1.</vd1s>	R/W
		(Note 2)	/				Write		Write	
			> ((		~	0:	Clearing the flag	0:	Clear the flag	
						1:	- (Note 4)	1:	- (Note 4)	
	VD1SF	(Indicates	etection 1 s the relation when read.)	n between \	/DD and	0: 1:	VDD ≥ VD1LVL VDD < VD1LVL	ately 0 is v	bit is only read as 1 immedi- (for 3 machine cycles) after a written to VDCR2 <vd1s>. At r times, it is always read as 0.</vd1s>	Read only
	VD1LVL	Voltage de	etection 1 le	evel select		00: 01: 10: 11:	4.0 to 4.7V Reserved Reserved 2.9 to 3.3V	dete	bit has no meaning as voltage ction is performed based on /DCR2 <vd1s> setting.</vd1s>	R/W

Note 1: The VDCR1 is initialized by a power-on reset or an external reset input.

Note 2: If VDCR1<VD2F> or VDCR1<VD1F> is cleared by software simultaneously as it is set by detection of a low-voltage condition, the setting operation overrides the clearing operation so that the bit is set to 1.

 $Note \ 3: \ To \ enable \ voltage \ detection \ 2 \ operation \ by \ setting \ VDCR2 < VD2EN > \ to \ 1, \ VDCR1 < VD2LVL > \ must \ be \ set \ to \ 01.$ 

Note 4: Each flag cannot be set to 1 by writing a 1 to it.

### Voltage detection control register 2

VDCR2	7	6	5	4	3	2	1	0	
(002CH)		VD2S	VD1S		VD2MOD	VD2EN	VD1MOD	VD1EN	(Initial value: **** 0000)

	l	ТМР86ГН92DMG ТМР86С993ХВ	
VD2S	Voltage detection 2 set	No function  O: Generate a reset or an interrupt by VD2	Write Only
VD1S	Voltage detection 1 set	No function  O: Generate a reset or an interrupt by VD1  1: -	Write Only
VD2MOD	Voltage detection 2 operation mode select	INTVLTD interrupt     Voltage detection 2 reset signal occurrence	R/W
VD2EN	Voltage detection 2 operation enable/disable	Voltage detection 2 disable     Voltage detection 2 enable	R/W
VD1MOD	Voltage detection 1 operation mode select	INTVLTD interrupt     Voltage detection 1 reset signal occurrence.	R/W
VD1EN	Voltage detection 1 operation enable/disable	0: Voltage detection 1 disable 1: Voltage detection 1 enable	R/W

Note 1: The VDCR2 is only initialized by a power-on reset or an external reset input

Note 2: In the TMP86FH92DMG, the VD2S and VD1S bits are not available. Setting a value to these bits has no effect.



### 7.3 Function

The voltage detecting circuit allows two detection voltage levels (VDxLVL, x = 1, 2) to be specified. For each detection voltage, whether to enable or disable voltage detect operation and the action to be taken when the supply voltage (VDD) falls to or below the detection voltage (VDxLVL) can be programmed by software.

### 7.3.1 Enabling/Disabling Voltage Detection Operation

Setting the VDCR2<VDxEN> bit to 1 enables voltage detect operation and clearing this bit to 0 disables it. Immediately after release of a power-on reset, VDCR2<VDxEN>, is cleared to 0

Note: Setting VDCR2<VDxEN> to 1 while the supply voltage is below the detection voltage (VDD<VDxLVL) immediately causes an INTVLTD interrupt or a voltage detect x reset signal to be generated.

### 7.3.2 Selecting the Voltage Detect Operating Mode

When VDCR2<VDxMOD> is set to "0", the voltage detection operation mode is set to generate INTVLTD interrupt request signals. When VDCR2<VDxMOD> is set to "1", the operation mode is set to generate voltage detection reset signals.

• When the operation mode is set to generate INTVLTD interrupt signals (VDCR2<VDxMOD>="0")

When VDCR2<VDxEN>="1", an INTVLTD interrupt request signal is generated when the supply voltage (VDD) falls to the detection voltage (VDxLVL).

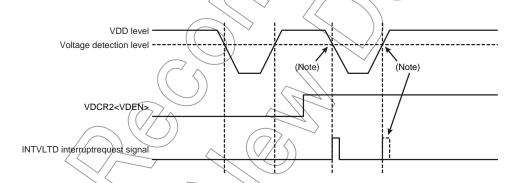


Figure 7-2 Voltage Detection Interrupt Request

Note: Since the comparators used for voltage detection do not have a hysteresis structure, INTVLTD interrupt request signals may be generated frequently when the supply voltage (VDD) is close to the detection voltage (VDxLVL). INTVLTD interrupt request signals may be generated not only when the supply voltage falls to the detection voltage but also when it rises to the detection voltage.

When the operation mode is set to generate voltage detection reset signals (VDCR2<VDxMOD>="1")

When VDCR2 < VDxEN > = "1", a voltage detection reset signal is generated when the supply voltage (VDD) becomes lower than the detection voltage (VDxLVL).

VDCR1 and VDCR2 are initialized by a power-on reset or an external reset input only. A voltage detection reset signal is generated continuously as long as the supply voltage (VDD) is lower than the detection voltage (VDxLVL).

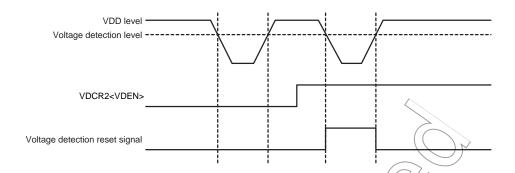


Figure 7-3 Voltage Detection Reset Signal

## 7.3.3 Detection voltage level section

The detection voltage level is selected by programming the VDCR1<VDxLVL> bits.

## 7.3.4 Voltage detection flag and voltage detection status flag

The voltage detect flag (VDCR1<VDxF>) and voltage detect status flag (VDCR1<VDxSF>) indicate the relation between the supply voltage (VDD) and the detection voltage (VDxLVL), i.e, whether VDD is above or equal to VDxLVL or VDD is below VDxLVL.

When VDCR2<VDxEN>=1, a drop of the supply voltage (VDD) below the detection voltage (VDxLVL) causes the VDCR1<VDxF> flag to be set. This flag remains set until it is cleared by software. VDCR1<VDxF> is not cleared to 0 when the supply voltage (VDD) becomes equal to or higher than the detection voltage (VDxLVL).

Once VDCR1<VDxF> has been set to 1, this state is retained even if VDCR2<VDxEN> is cleared to 0. VDCR1<VDxF> can only be cleared by writing a 0.

When VDCR2<VDxEN>=1, a drop of the supply voltage (VDD) below the detection voltage (VDxLVL) also causes the VDCR1<VDxSF> flag to be set to 1. When VDD rises above VDxLVL, the VDCR1<VDxSF> flag is cleared to 0.

Unlike the VDCR1<VDxF> flag, the VDCR1<VDxSF> flag does not remain set and changes its state according to the relation between VDD and VDxLVL.

Note: Depending on the voltage detect timing, the voltage detect status flag (VDCR1<VDxSF>) may be set one machine cycle before the voltage detect flag (VDCR1<VDxF>) is set.

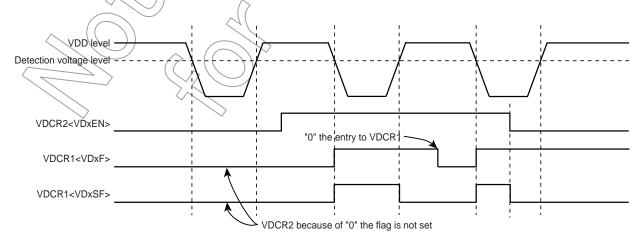


Figure 7-4 Change of voltage detection flag and voltage detection status flag

7.4 Setting of register TMP86FH92DMG

# 7.4 Setting of register

### 7.4.1 Setting Procedure for Generate an interrupt

The following shows the setting procedure for generating an INTVLTD interrupt upon detection of a low-voltage condition.

- 1. Clear the INTVLTD interrupt enable flag <EF4> to 0.
- 2. Select the detection voltage by programming the VDCR1<VDx $\not$ LVL>(x=1, 2) bits.
- 3. Clear the VDCR2<VDxMOD> bit to 0 to generate an INTVLTD interrupt upon detection of a low-voltage condition.
- 4. Set the VDCR2<VDxEN> bit to 1 to enable voltage detect operation.
- 5. Wait for 5 μs until the voltage detecting circuit stabilizes.
- 6. Ensure that the VDCR1<VDxSF> is 0.
- 7. Clear VDCR1<VDxF> to 0.
- 8. Clear the INTVLTD interrupt latch <IL4> to 0 and set the interrupt enable flag <EF4> to 1 to enable interrupts.

Note: When the supply voltage (VDD) is close to the detection voltage (VDxLVL), voltage detection request signals may be generated frequently. If this may pose any problem, execute appropriate wait processing depending on fluctuations in the system power supply and clear the interrupt latch before returning from the INTVLTD interrupt service routine.

To disable the voltage detection circuit while it is enabled with the voltage detection interrupt request, make the following setting:

- 1. Clear the INTVLTD interrupt enable flag <EF4> to 0.
- 2. Clear VDCR2<VDxEN>to 0 to disable the voltage detection operation.

Note: If the voltage detection circuit is disabled without clearing interrupt enable flag, unexpected interrupt request may occur.

### 7.4.2 Setting procedure to generate a reset

The following shows the setting procedure for generating a voltage detect x reset signal upon detection of a low-voltage condition.

- 1. Clear the INTVLTD interrupt enable flag <EF4> to 0.
- 2. Select the detection voltage by programming the VDCR1<VDxLVL>(x=1, 2) bits.
- 3. Clear the VDCR2<VDxMOD> bit to 0 to generate an INTVLTD interrupt upon detection of a low-voltage condition.
- 4. Set the VDCR2<VDxEN> bit to 1 to enable voltage detect operation.
- 5. Wait for 5 μs until the voltage detecting circuit stabilizes.
- 6. Ensure that the VDCR1<VDxSF> bit is 0.
- 7. Clear VDCR1<VDxF> to 0.
- 8. Set the VDCR2<VDxMOD> bit to 1 to generate a voltage detect x reset signal upon detection of a low-voltage condition.
- Note 1: The VDCR1 and VDCR2 are only initialized by a power-on reset or an external reset input. Therefore, at the time when a low-voltage detect reset is released, if the supply voltage (VDD) is found to be below the detection voltage (VDxLVL) before VDCR2<VDxEN> is cleared to 0, a voltage detect reset will immediately be generated
- Note 2: The voltage detect reset signal remains asserted while the supply voltage (VDD) is below the detection voltage (LDxLVL).

To disable the voltage detection circuit while it is enabled with the voltage detection reset, make the following setting:

- 1. Clear the INTVLTD interrupt enable flag <EF4> to 0.
- 2. Clear VDCR2<VDxMOD to 0 to set the operation mode to generate voltage detection interrupt request signals.
- 3. Clear VDCR2<VDxEN>to 0 to disable the voltage detection operation.

Note: If the voltage detection circuit is disabled without clearing interrupt enable flag, unexpected interrupt request may occur.

7.4 Setting of register TMP86FH92DMG



TOSHIBA TMP86FH92DMG


# 8. Watchdog Timer (WDT)

The watchdog timer is a fail-safe system to detect rapidly the CPU malfunctions such as endless loops due to spurious noises or the deadlock conditions, and return the CPU to a system recovery routine.

The watchdog timer signal for detecting malfunctions can be programmed only once as "reset request" or "interrupt request". Upon the reset release, this signal is initialized to "reset request".

When the watchdog timer is not used to detect malfunctions, it can be used as the timer to provide a periodic interrupt.

Note: Care must be taken in system design since the watchdog timer functions are not be operated completely due to effect of disturbing noise.

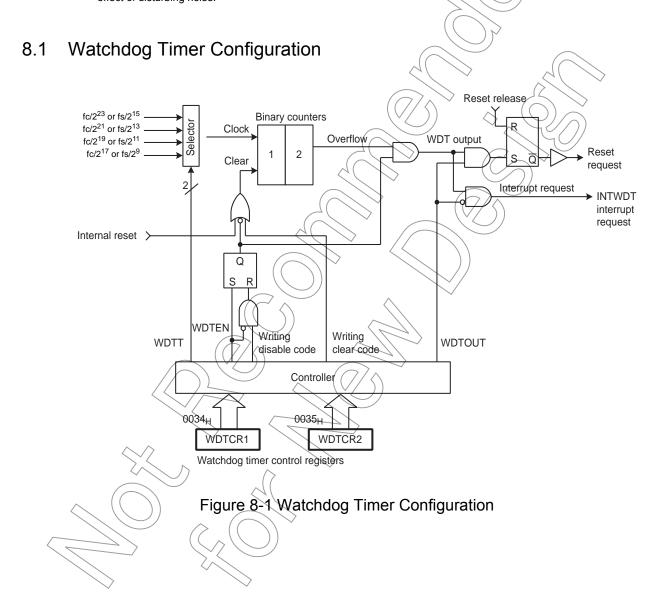

# 8.2 Watchdog Timer Control

The watchdog timer is controlled by the watchdog timer control registers (WDTCR1 and WDTCR2). The watchdog timer is automatically enabled after the reset release.

## 8.2.1 Malfunction Detection Methods Using the Watchdog Timer

The CPU malfunction is detected, as shown below.


- 1. Set the detection time, select the output, and clear the binary counter.
- 2. Clear the binary counter repeatedly within the specified detection time.

If the CPU malfunctions such as endless loops or the deadlock conditions occur for some reason, the watchdog timer output is activated by the binary-counter overflow unless the binary counters are cleared. When WDTCR1<WDTOUT> is set to "1" at this time, the reset request is generated and then internal hardware is initialized. When WDTCR1<WDTOUT> is set to "0", a watchdog timer interrupt (INTWDT) is generated.

The watchdog timer temporarily stops counting in the STOP mode including the warm-up or IDLE/SLEEP mode, and automatically restarts (continues counting) when the STOP/IDLE/SLEEP mode is inactivated.

Note: The watchdog timer consists of an internal divider and a two-stage binary counter. When the clear code 4EH is written, only the binary counter is cleared, but not the internal divider. The minimum binary-counter overflow time, that depends on the timing at which the clear code (4EH) is written to the WDTCR2 register, may be 3/4 of the time set in WDTCR1<WDTT>. Therefore, write the clear code using a cycle shorter than 3/4 of the time set to WDTCR1<WDTT>.

Example :Setting the watchdog timer detection time to 22 fc [s], and resetting the CPU malfunction detection

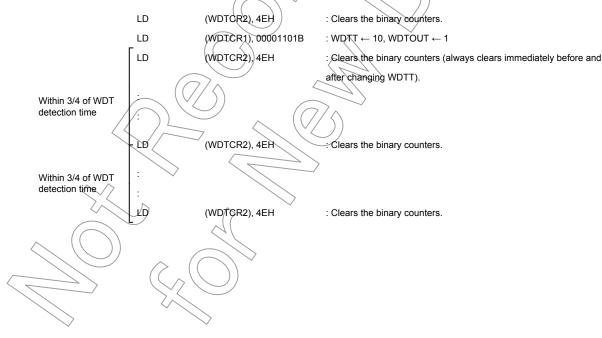

### Watchdog Timer Control Register 1

WDTCR1	7	6	5	4	3	2	1	0	
(0034H)			(ATAS)	(ATOUT)	WDTEN	WD	TT	WDTOUT	(Initial value: **11 1001)

	WDTEN	Watchdog timer enable/disable	0: Disab 1: Enabl	`	e code to WDTCR2 is	required.)	Write only
				NORMAL	1/2 mode	SLOW1/2	
	WDTT	Watchdog timer detection time [s]		DV7CK = 0	DV7CK = 1	mode	
			00	2 <sup>25</sup> /fc	2 <sup>17</sup> /fs	2 <sup>17</sup> /fs	Write
	VVDII		01	2 <sup>23</sup> /fc	2 <sup>15</sup> /fs	2 <sup>15</sup> fs	only
			10	2 <sup>21</sup> fc	2 <sup>13</sup> /fs	2 <sup>13</sup> fs	
			11	2 <sup>19</sup> /fc	2 <sup>11</sup> /fs	2 <sup>11</sup> /fs	
	WDTOUT	IT Watchdoo times output coloct		upt request	> ,		Write
	WDIOOI	Watchdog timer output select	1: Reset	request	$\Diamond$		only

- Note 1: After clearing WDTOUT to "0", the program cannot set it to "1"
- Note 2: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz], \*: Don't care
- Note 3: WDTCR1 is a write-only register and must not be used with any of read-modify-write instructions. If WDTCR1 is read, a don't care is read.
- Note 4: To activate the STOP mode, disable the watchdog timer or clear the counter immediately before entering the STOP mode. After clearing the counter, clear the counter again immediately after the STOP mode is inactivated.
- Note 5: To clear WDTEN, set the register in accordance with the procedures shown in 1823 Watchdog Timer Disable".

## Watchdog Timer Control Register 2

WDTCR2	7	6 5 4	3) 2 1 0	
(0035H)			(Initial value: **** ****)	
•				
			4EH: Clear the watchdog timer binary counter (Clear code)	
	WDTCR2	Write ((// <	B1H: Disable the watchdog timer (Disable code)	Write
	WDTCRZ	Watchdog timer control code	D2H: Enable assigning address trap area	only
			Others: Invalid	

- Note 1: The disable code is valid only when WDTCR1<WDTEN> = 0.
- Note 2: \*: Don't care
- Note 3: The binary counter of the watchdog timer must not be cleared by the interrupt task.
- Note 4: Write the clear code 4EH using a cycle shorter than 3/4 of the time set in WDTCR1<WDTT>.

# 8.2.2 Watchdog Timer Enable

Setting WDTCR1 WDTEN to "1" enables the watchdog timer. Since WDTCR1<WDTEN is initialized to "1" during reset, the watchdog timer is enabled automatically after the reset release.

#### 8.2 Watchdog Timer Control

### 8.2.3 Watchdog Timer Disable

To disable the watchdog timer, set the register in accordance with the following procedures. Setting the register in other procedures causes a malfunction of the micro controller.

- 1. Set the interrupt master flag (IMF) to "0".
- 2. Set WDTCR2 to the clear code (4EH).
- 3. Set WDTCR1<WDTEN> to "0".
- 4. Set WDTCR2 to the disable code (B1H).

Note: While the watchdog timer is disabled, the binary counters of the watchdog timer are cleared.

Example :Disabling the watchdog timer

DI : IMF  $\leftarrow$  0

LD (WDTCR2), 04EH : Clears the binary counter

LDW (WDTCR1), 0B101H : WDTEN ← 0, WØTCR2 ← Disable code

Table 8-1 Watchdog Timer Detection Time (Example: fc = 16.0 MHz, fs = 32.768 kHz)

	Watcho	log Timer Detection Time[s]	
WDTT	NORMAL	1/2 mode	SLOW
	DV7CK = 0	DV7CK = 1	mode
00	2.097	4	4
01	524.288 m		)) 1
10	131.072 m (	250 m	// 250 m
11	32.768 m	62.5 m	62.5 m

# 8.2.4 Watchdog Timer Interrupt (INTWDT)

When WDTCR1<WDTOUT> is cleared to "0" a watchdog timer interrupt request (INTWDT) is generated by the binary-counter overflow.

A watchdog timer interrupt is the non-maskable interrupt which can be accepted regardless of the interrupt master flag (IMF).

When a watchdog timer interrupt is generated while the other interrupt including a watchdog timer interrupt is already accepted, the new watchdog timer interrupt is processed immediately and the previous interrupt is held pending. Therefore, if watchdog timer interrupts are generated continuously without execution of the RETN instruction, too many levels of nesting may cause a malfunction of the microcontroller.

To generate a watchdog timer interrupt, set the stack pointer before setting WDTCR1<WDTOUT>.

Example :Setting watchdog timer interrupt

LD SP, 023FH : Sets the stack pointer

LD (WDTCR1), 00001000B : WDTOUT  $\leftarrow$  0

## 8.2.5 Watchdog Timer Reset

When a binary-counter overflow occurs while WDTCR1<WDTOUT> is set to "1", a watchdog timer reset request is generated. When a watchdog timer reset request is generated, the internal hardware is reset. The reset time is maximum 24/fc [s] (1.5  $\mu$ s @ fc = 16.0 MHz).

Note: When a watchdog timer reset is generated in the SLOW1 mode, the reset time is maximum 24/fc (high-frequency clock) since the high-frequency clock oscillator is restarted. However, when crystals have inaccuracies upon start of the high-frequency clock oscillator, the reset time should be considered as an approximate value because it has slight errors.


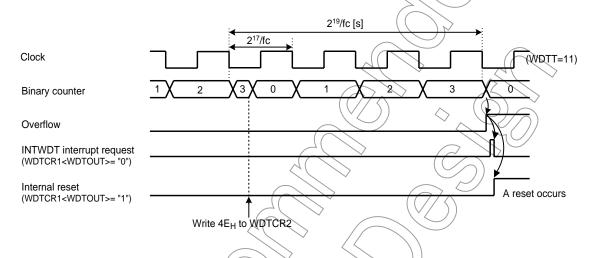



Figure 8-2 Watchdog Timer Interrupt

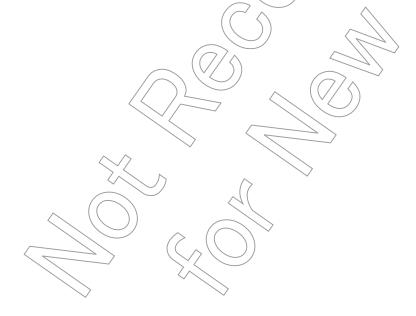

8.3 Address Trap TMP86FH92DMG

## 8.3 Address Trap

The Watchdog Timer Control Register 1 and 2 share the addresses with the control registers to generate address traps.

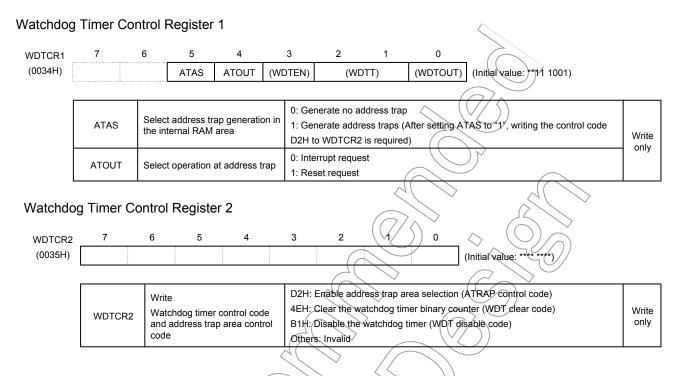

# 8.3.1 Selection of Address Trap in Internal RAM (ATAS)

WDTCR1<ATAS> specifies (whether or not to generate address traps in the internal RAM area. To execute an instruction in the internal RAM area, clear WDTCR1<ATAS> to "0". To enable the WDTCR1<ATAS> setting, set WDTCR1<ATAS> and then write D2H to WDTCR2.

Executing an instruction in the SFR or DBR area generates an address trap unconditionally regardless of the setting in WDTCR1</a>ATAS>

# 8.3.2 Selection of Operation at Address Trap (ATOUT)

When an address trap is generated, either the interrupt request or the reset request can be selected by WDTCRI ATOUT>.

# 8.3.3 Address Trap Interrupt (INTATRAP)

While WDTCR1<ATOÙT> is "0", if the CPU should start looping for some cause such as noise and an attempt be made to fetch an instruction from the on-chip RAM (while WDTCR1<ATAS> is "1"), DBR or the SFR area, address trap interrupt (INTATRAP) will be generated.

An address trap interrupt is a non-maskable interrupt which can be accepted regardless of the interrupt master flag (IMF).

When an address trap interrupt is generated while the other interrupt including an address trap interrupt is already accepted, the new address trap is processed immediately and the previous interrupt is held pending. Therefore, if address trap interrupts are generated continuously without execution of the RETN instruction, too many levels of nesting may cause a malfunction of the microcontroller.

To generate address trap interrupts, set the stack pointer beforehand.

### 8.3.4 Address Trap Reset

While WDTCR1<ATOUT> is "1", if the CPU should start looping for some cause such as noise and an attempt be made to fetch an instruction from the on-chip RAM (while WDTCR1<ATAS> is "1"), DBR or the SFR area, address trap reset will be generated.

When an address trap reset request is generated, the internal hardware is reset. The reset time is maximum 24/ fc [s] (1.5  $\mu$ s @ fc = 16.0 MHz).

Note: When an address trap reset is generated in the SLOW1 mode, the reset time is maximum 24/fc (high-frequency clock) since the high-frequency clock oscillator is restarted. However, when crystals have inaccuracies upon start of the high-frequency clock oscillator, the reset time should be considered as an approximate value because it has slight errors.


8.3 Address Trap TMP86FH92DMG



TOSHIBA TMP86FH92DMG

# 9. Time Base Timer (TBT)

The time base timer generates time base for key scanning, dynamic displaying, etc. It also provides a time base timer interrupt (INTTBT).

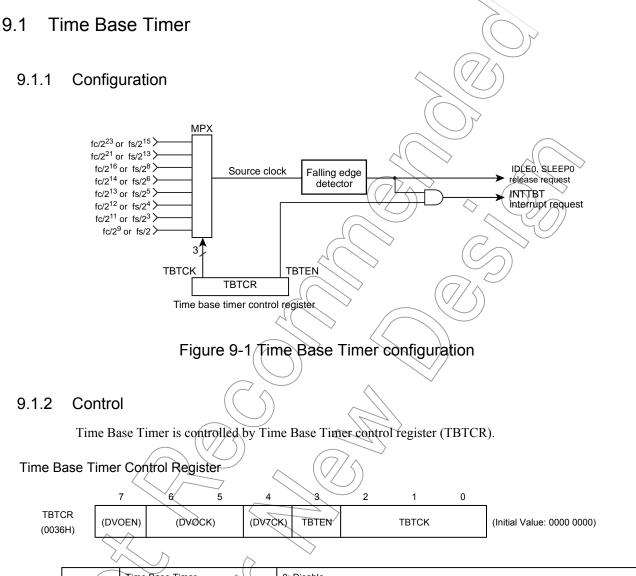

Time Base Timer 0: Disable TBTEN enable / disable 1: Enable NORMAL1/2, IDLE1/2 Mode SLOW1/2 SLEEP1/2 DV7CK = 0 DV7CK = 1 Mode fc/223 fs/215 fs/215 000 fc/2<sup>21</sup> fs/213 001 fs/213 Time Base Timer interrupt fs/28 010 fc/216 TBTCK R/W Frequency select : [Hz] fc/214 011 fs/26 100 fc/213 fs/25 101 fc/212 fs/24 fc/211 fs/23

Note 1: fc; High-frequency clock [Hz], fs; Low-frequency clock [Hz], \*; Don't care

1 Time Base Timer TMP86FH92DMG

Note 2: The interrupt frequency (TBTCK) must be selected with the time base timer disabled (TBTEN = "0"). (The interrupt frequency must not be changed with the disable from the enable state.) Both frequency selection and enabling can be performed simultaneously.

Example :Set the time base timer frequency to fc/216 [Hz] and enable an INTTBT interrupt.

LD (TBTCR), 00000010B ; TBTCK ← 010

LD (TBTCR), 00001010B ; TBTEN ← 1

DI ; IMF ← 0

SET (EIRL). 7

Table 9-1 Time Base Timer Interrupt Frequency (Example: 16/0 MHz, fs = 32.768 kHz)

твтск	Time Base Timer Interrupt Frequency [Hz]						
IBICK	NORMAL1/2, IDLE1/2 Mode	NORMAL1/2, IDLE1/2 Mode	SLOW1/2, SLEEP1/2 Mode				
	DV7CK = 0	DV70K = 1					
000	1.91						
001	7.63	4	4				
010	244.14	128					
011	976.56	512	<u> </u>				
100	1953.13	1024	7/\ -				
101	3906.25	2048	<u>.</u>				
110	7812.5	4096	-				
111	31250	16384	-				
			/				

### 9.1.3 Function

An INTTBT (Time Base Timer Interrupt) is generated on the first falling edge of source clock (The divider output of the timing generator which is selected by TBTCK.) after time base timer has been enabled.

The divider is not cleared by the program; therefore, only the first interrupt may be generated ahead of the set interrupt period (Figure 9-2).


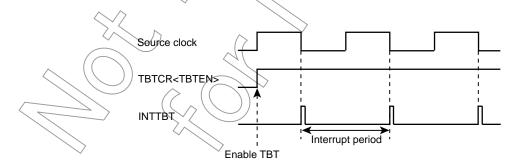


Figure 9-2 Time Base Timer Interrupt

TMP86FH92DMG

# 9.2 Divider Output (DVO)

Approximately 50% duty pulse can be output using the divider output circuit, which is useful for piezoelectric buzzer drive. Divider output is from  $\overline{DVO}$  pin.

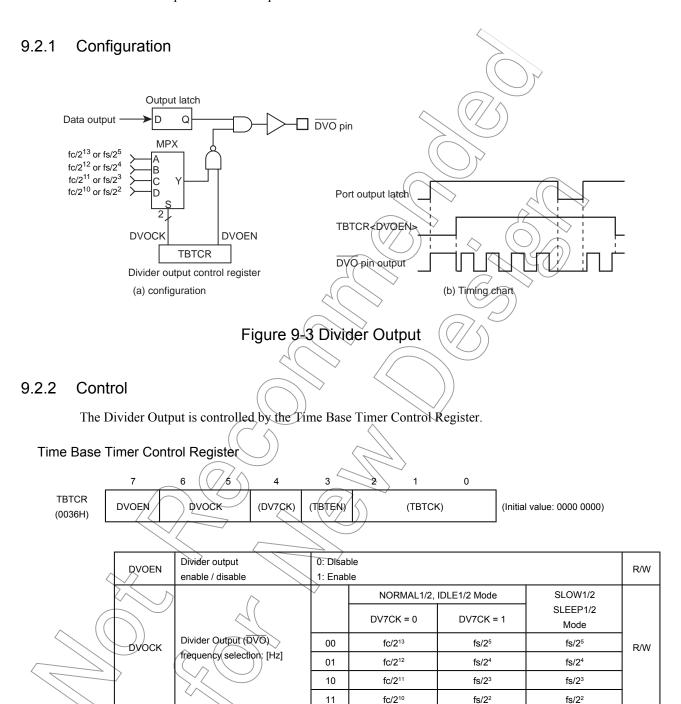

Note: Selection of divider output frequency (DVOCK) must be made while divider output is disabled (DVOEN="0"). Also, in other words, when changing the state of the divider output frequency from enabled (DVOEN="1") to disable(DVOEN="0"), do not change the setting of the divider output frequency.

9. Time Base Timer (TBT)9.2 Divider Output (DVO)

TMP86FH92DMG

Example :1.95 kHz pulse output (fc = 16.0 MHz)

### Setting port

LD (TBTCR) , 00000000B ; DVOCK  $\leftarrow$  "00"

LD (TBTCR) , 10000000B ; DVOEN  $\leftarrow$  "1"

Table 9-2 Divider Output Frequency (Example : fc = 16.0 MHz, fs = 32.768 kHz)

L	Di	ivider Output Frequency [H	z  (V/ ))
DVOCK	NORMAL1/2,	IDLE1/2 Mode	SLOW1/2, SLEEP1/2
	DV7CK = 0	DV7CK = 1	Mode
00	1.953 k	1.024 k	1.024 k
01	3.906 k	2.048 k	2.048 k
10	7.813 k	4.096 k	4.096 k
11	15.625 k	8.192 k	8.192 k

TOSHIBA TMP86FH92DMG

# 10. 16-Bit Timer/Counter 1 (TC1)

# 10.1 Configuration


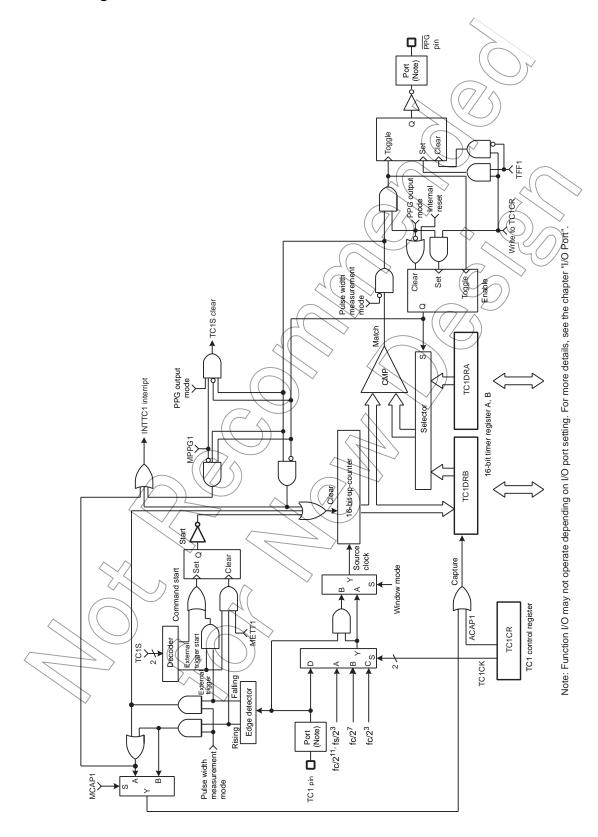


Figure 10-1 TimerCounter 1 (TC1)

10.2 Timer/Counter Control TMP86FH92DMG

### 10.2 Timer/Counter Control

The TimerCounter 1 is controlled by the TimerCounter 1 control register (TC1CR) and two 16-bit timer registers (TC1DRA and TC1DRB).

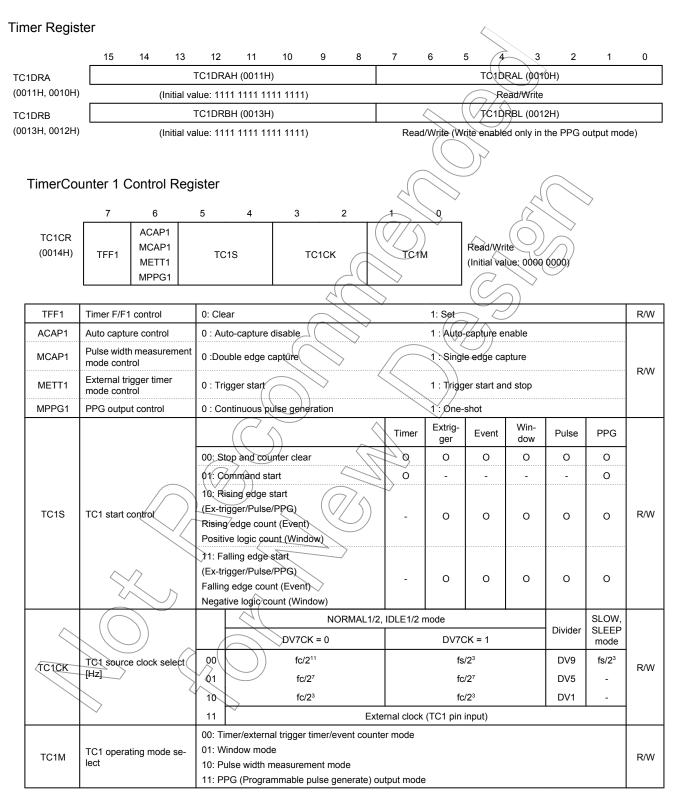

Note 1: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz]

Note 2: The timer register consists of two shift registers. A value set in the timer register becomes valid at the rising edge of the first source clock pulse that occurs after the upper byte (TC1DRAH and TC1DRBH) is written. Therefore, write the lower byte and the upper byte in this order (it is recommended to write the register with a 16-bit access instruction). Writing only the lower byte (TC1DRAL and TC1DRBL) does not enable the setting of the timer register.

- Note 3: To set the mode, source clock, PPG output control and timer F/F control, write to TC1CR during TC1S=00. Set the timer F/F1 control until the first timer start after setting the PPG mode.
- Note 4: Auto-capture can be used only in the timer, event counter, and window modes.
- Note 5: To set the timer registers, the following relationship must be satisfied.

  TC1DRA > TC1DRB > 1 (PPG output mode), TC1DRA > 1 (other modes)
- Note 6: Set TFF1 to "0" in the mode except PPG output mode.
- Note 7: Set TC1DRB after setting TC1M to the PPG output mode.
- Note 8: When the STOP mode is entered, the start control (TC1S) is cleared to "00" automatically, and the timer stops. After the STOP mode is exited, set the TC1S to use the timer counter again.
- Note 9: Use the auto-capture function in the operative condition of TC1. A captured value may not be fixed if it's read after the execution of the timer stop or auto-capture disable. Read the capture value in a capture enabled condition.
- Note 10: Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1". Therefore, to read the captured value, wait at least one cycle of the internal source clock before reading TC1DRB for the first time.



### 10.3 Function

TimerCounter 1 has six types of operating modes: timer, external trigger timer, event counter, window, pulse width measurement, programmable pulse generator output modes.


### 10.3.1 Timer mode

In the timer mode, the up-counter counts up using the internal clock. When a match between the up-counter and the timer register 1A (TC1DRA) value is detected, an INTTC1 interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting. Setting TC1CRACAP1> to "1" captures the up-counter value into the timer register 1B (TC1DRB) with the auto-capture function. Use the auto-capture function in the operative condition of TC1. A captured value may not be fixed if it's read after the execution of the timer stop or auto-capture disable. Read the capture value in a capture enabled condition. Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1". Therefore, to read the captured value, wait at least one cycle of the internal source clock before reading TC1DRB for the first time.


Table 10-1 Internal Source Clock for TimerCounter 1 (Example) fc = 16 MHz, fs = 32 768 kHz)

T040K		NORMAL1/2,	IDLE1/2 mode		SLOWSI	EEP mode
TC1CK	DV70	CK = 0	DV70	SLOW, SL	EEP IIIode	
	Resolution [µs]	Maximum Time Setting [s]	Resolution [µs]	Maximum Time Setting	Resolution [µs]	Maximum Time Setting [s]
00	128	8.39	244.14	16.0	244.14	16.0
01	8.0	0.524	8.0	0.524	-	-
10	0.5	32.77 m	0.5	32.77 m	-	-

Example 1 :Setting the timer mode with source clock fc/211 [Hz] and generating an interrupt 1 second later

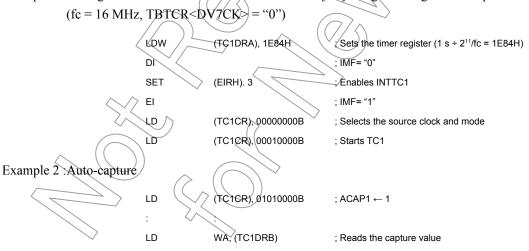

Note: Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1". Therefore, to read the captured value, wait at least one cycle of the internal source clock before reading TC1DRB for the first time.

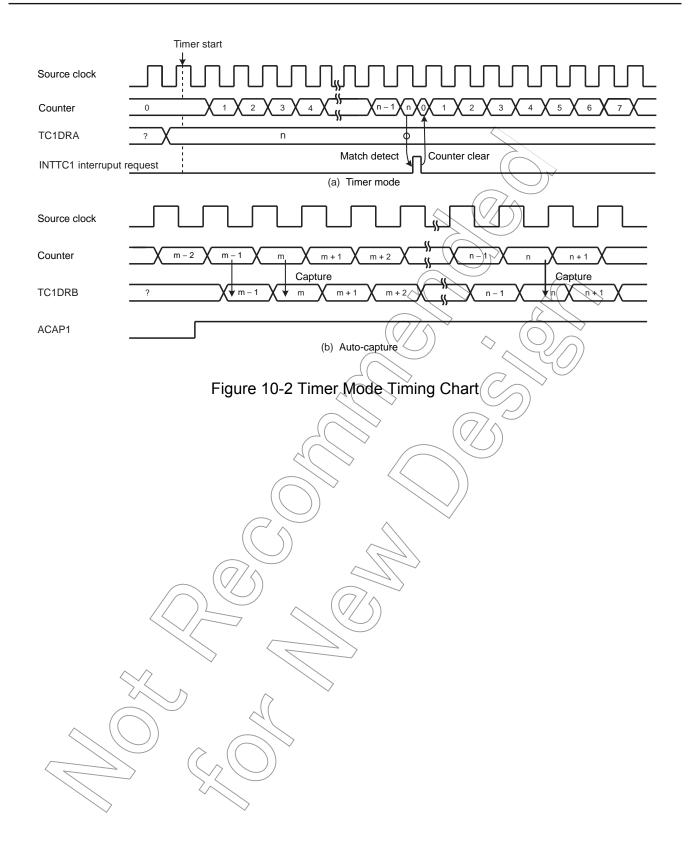

### 10.3.2 External Trigger Timer Mode

In the external trigger timer mode, the up-counter starts counting by the input pulse triggering of the TC1 pin, and counts up at the edge of the internal clock. For the trigger edge used to start counting, either the rising or falling edge is defined in TC1CR<TC1S>.

• When TC1CR<METT1> is set to "1" (trigger start and stop)

When a match between the up-counter and the TC1DRA value is detected after the timer starts, the up-counter is cleared and halted and an INTTC1 interrupt request is generated.

If the edge opposite to trigger edge is detected before detecting a match between the up-counter and the TC1DRA, the up-counter is cleared and halted without generating an interrupt request. Therefore, this mode can be used to detect exceeding the specified pulse by interrupt.

After being halted, the up-counter restarts counting when the trigger edge is detected.

• When TC1CR<METT1> is set to "0" (trigger start)

When a match between the up-counter and the TCLDRA value is detected after the timer starts, the up-counter is cleared and halted and an INTTC1 interrupt request is generated.

The edge opposite to the trigger edge has no effect in count up. The trigger edge for the next counting is ignored if detecting it before detecting a match between the up-counter and the TC1DRA.

Since the TC1 pin input has the noise rejection, pulses of 4/fc [s] or less are rejected as noise. A pulse width of 12/fc [s] or more is required to ensure edge detection. The rejection circuit is turned off in the SLOW1/2 or SLEEP1/2 mode, but a pulse width of one machine cycle or more is required.

Example 1: Generating an interrupt 1 ms after the rising edge of the input pulse to the TC1 pin

(TC1DRA), 01F4H

(fc = 16 MHz)

(TC1DRA), 007DH LDW 1ms ÷ 2 /fc = 7DH ;/IMF≠\"0" Ø Enables INTTC1 interrupt **SET** (EIRH). 3 IMF= "1" ΕI (TC1CR), 00000100B LD Selects the source clock and mode LD (TC1CR), 00100100B ; Starts TC1 external trigger, METT1= 0

Example 2 :Generating an interrupt when the low-level pulse with 4 ms or more width is input to the TC1 pin

(fc = 16 MHz)

LDW

; IMF= "0"


SET (EIRH). 3 ; Enables INTTC1 interrupt

EI ; IMF= "1"

LD (TC1CR), 00000100B ; Selects the source clock and mode

LD (TC1CR), 01110100B ; Starts TC1 external trigger, METT1= 1

; 4 ms ÷ 27/fc = 1F4H

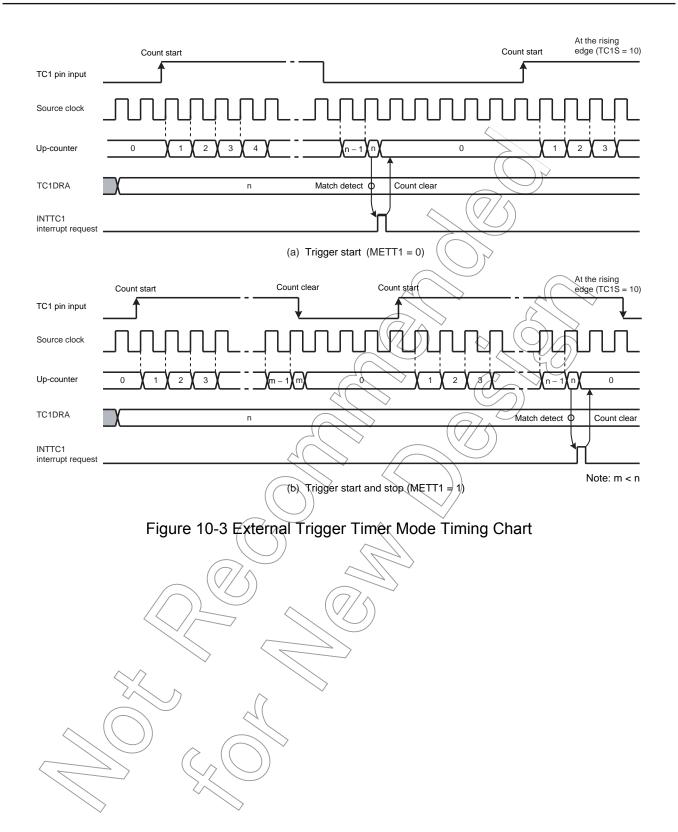

#### 10.3.3 Event Counter Mode

In the event counter mode, the up-counter counts up at the edge of the input pulse to the TC1 pin. Either the rising or falling edge of the input pulse is selected as the count up edge in TC1CR<TC1S>.

When a match between the up-counter and the TC1DRA value is detected, an INTTC1 interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting at each edge of the input pulse to the TC1 pin. Since a match between the up-counter and the value set to TC1DRA is detected at the edge opposite to the selected edge, an INTTC1 interrupt request is generated after a match of the value at the edge opposite to the selected edge.

Two or more machine cycles are required for the low-or high-level pulse input to the TC1 pin.

Setting TC1CR<ACAP1> to "1" captures the up-counter value into TC1DRB with the auto capture function. Use the auto-capture function in the operative condition of TC1 A captured value may not be fixed if it's read after the execution of the timer stop or auto-capture disable. Read the capture value in a capture enabled condition. Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1". Therefore, to read the captured value) wait at least one cycle of the internal source clock before reading TC1DRB for the first time.

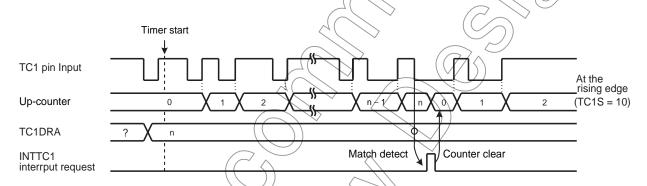


Figure 10-4 Event Counter Mode Timing Chart

Table 10-2 Input Pulse Width to TC1 Pin


	Minimum Pu	lse Width [s]
$\checkmark$	NORMAL1/2, IDLE1/2 Mode	SLOW1/2, SLEEP1/2 Mode
High-going	23/fc	2³/fs
Low-going	2³/fc	2³/fs

### 10.3.4 Window Mode

In the window mode, the up-counter counts up at the rising edge of the pulse that is logical ANDed product of the input pulse to the TC1 pin (window pulse) and the internal source clock. Either the positive logic (count up during high-going pulse) or negative logic (count up during low-going pulse) can be selected.

When a match between the up-counter and the TC1DRA value is detected, an INT1C1 interrupt is generated and the up-counter is cleared.

Define the window pulse to the frequency which is sufficiently lower than the internal source clock programmed with TC1CR<TC1CK>.

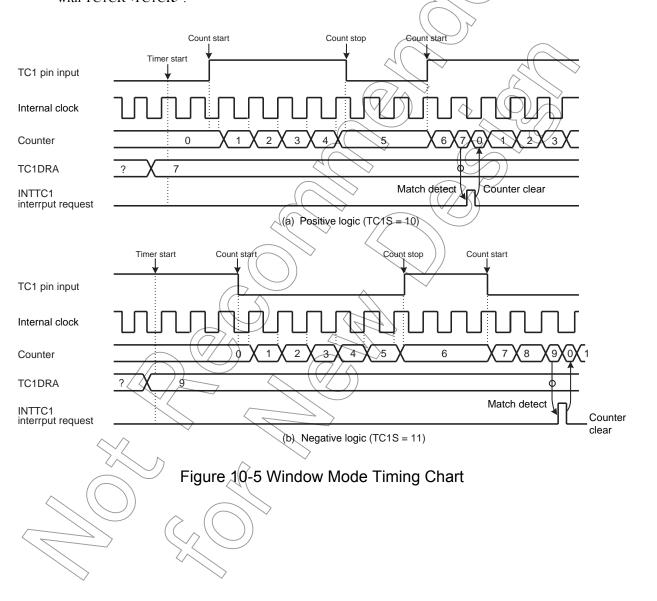

#### 10.3.5 Pulse Width Measurement Mode

In the pulse width measurement mode, the up-counter starts counting by the input pulse triggering of the TC1 pin, and counts up at the edge of the internal clock. Either the rising or falling edge of the internal clock is selected as the trigger edge in TC1CR<TC1S>. Either the single- or double-edge capture is selected as the trigger edge in TC1CR<MCAP1>.

• When TC1CR<MCAP1> is set to "1" (single-edge capture)

Either high- or low-level input pulse width can be measured. To measure the high-level input pulse width, set the rising edge to TC1CR<TC1S>. To measure the low-level input pulse width, set the falling edge to TC1CR<TC1S>.

When detecting the edge opposite to the trigger edge used to start counting after the timer starts, the up-counter captures the up-counter value into TC1DRB and generates an INTTC1 interrupt request. The up-counter is cleared at this time, and then restarts counting when detecting the trigger edge used to start counting.

When TC1CR<MCAP1> is set to "0" (double-edge capture)

The cycle starting with either the high- or low-going input pulse can be measured. To measure the cycle starting with the high-going pulse, set the rising edge to TC1CR<TC1S>. To measure the cycle starting with the low-going pulse, set the falling edge to TC1CR<TC1S>.


When detecting the edge opposite to the trigger edge used to start counting after the timer starts, the up-counter captures the up-counter value into TC1DRB and generates an INTTC1 interrupt request. The up-counter continues counting up, and captures the up-counter value into TC1DRB and generates an INTTC1 interrupt request when detecting the trigger edge used to start counting. The up-counter is cleared at this time, and then continues counting.

- Note 1: The captured value must be read from TC1DRB until the next trigger edge is detected. If not read, the captured value becomes a don't care. It is recommended to use a 16-bit access instruction to read the captured value from TC1DRB.
- Note 2: For the single-edge capture, the counter after capturing the value stops at "1" until detecting the next edge.

  Therefore, the second captured value is "1" larger than the captured value immediately after counting starts.
- Note 3: The first captured value after the timer starts may be read incorrectively, therefore, ignore the first period captured values.

Example :Duty measurement (resolution fc/2<sup>7</sup> [Hz])

	CLR	(INTTC1SW). 0	; INTTC1 service switch initial setting Address set to convert INTTC1SW at each INTTC1
	LD	(TC1CR), 00000110B	; Sets the TC1 mode and source clock
	DI		; IMF= "0"
	SET	(EIRH). 3	; Enables INTTC1
	EI		; IMF= "1"
	LD	(TC1CR), 00100110B	; Starts TC1 with an external trigger at MCAP1 = 0
	:		(7)
PINTTC1:	CPL	(INTTC1SW). 0	; INTTC1 interrupt, inverts and tests INTTC1 service switch
	JRS	F, SINTTC1	
	LD	A, (TC1DRBL)	; Reads TC1DRB (High-level pulse width)
	LD	W,(TC1DRBH)	
	LD	(HPULSE), WA	; Stores high-level pulse width in RAM
	RETI		
SINTTC1:	LD	A, (TC1DRBL)	; Reads TC1DRB (Cycle)
	LD	W,(TC1DRBH)	
	LD	(WIDTH), WA	, Stores cycle in RAM
	:	4	
	RETI		; Duty calculation
	:		$\langle \rangle$
VINTTC1:	DW	PINTTC1	INTTC1 Interrupt vector
			))
			WIDTH
HPULSE			•
TC1 pin			
INITICA interrupt requests			
INTTC1 interrupt request			
INTTC1\$W			
	7		
		$\searrow$	

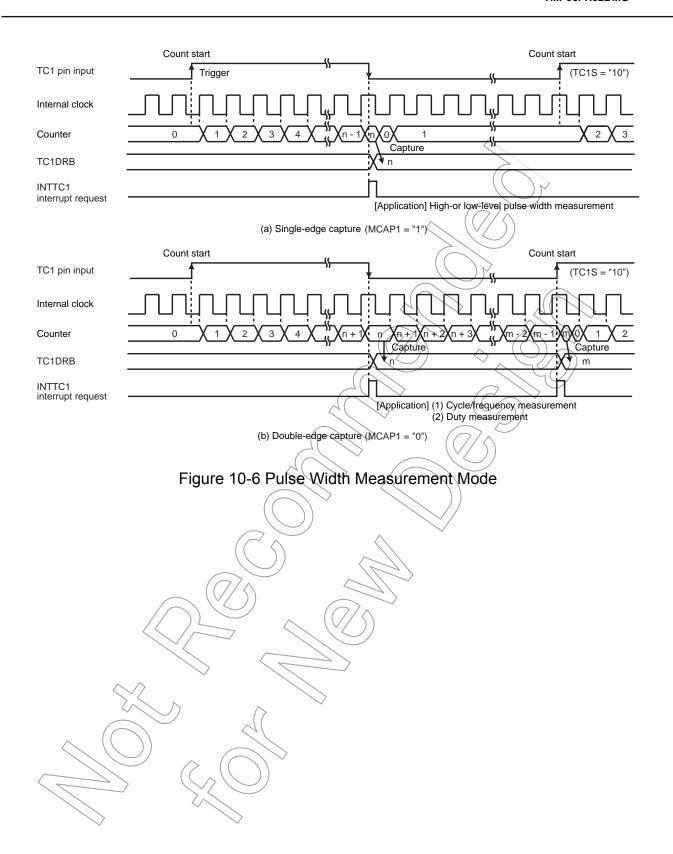

#### 10.3.6 Programmable Pulse Generate (PPG) Output Mode

In the programmable pulse generation (PPG) mode, an arbitrary duty pulse is generated by counting performed in the internal clock. To start the timer, TC1CR<TC1S> specifies either the edge of the input pulse to the TC1 pin or the command start. TC1CR<MPPG1> specifies whether a duty pulse is produced continuously or not (one-shot pulse).

• When TC1CR<MPPG1> is set to "0" (Continuous pulse generation)

When a match between the up-counter and the TC1DRB value is detected after the timer starts, the level of the PPG pin is inverted and an INTTC1 interrupt request is generated. The up-counter continues counting. When a match between the up-counter and the TC1DRA value is detected, the level of the PPG pin is inverted and an INTTC1 interrupt request is generated. The up-counter is cleared at this time, and then continues counting and pulse generation.

When TC1S is cleared to "00" during PPG output, the PPG pin retains the level immediately before the counter stops.

• When TC1CR<MPPG1> is set to "1" (One-shot pulse generation)

When a match between the up-counter and the TC1DRB value is detected after the timer starts, the level of the  $\overline{PPG}$  pin is inverted and an INTTC1 interrupt request is generated. The up-counter continues counting. When a match between the up-counter and the TC1DRA value is detected, the level of the  $\overline{PPG}$  pin is inverted and an INTTC1 interrupt request is generated. TC1CR<TC1S> is cleared to "00" automatically at this time, and the timer stops. The pulse generated by PPG retains the same level as that when the timer stops.

Since the output level of the  $\overline{PPG}$  pin can be set with TC1CR<TFF1> when the timer starts, a positive or negative pulse can be generated. Since the inverted level of the timer F/F1 output level is output to the  $\overline{PPG}$  pin, specify TC1CR<TFF1> to "0" to set the high level to the  $\overline{PPG}$  pin, and "1" to set the low level to the  $\overline{PPG}$  pin. Upon reset, the timer F/F1 is initialized to "0".

- Note 1: To change TC1DRA or TC1DRB during a run of the timer, set a value sufficiently larger than the count value of the counter. Setting a value smaller than the count value of the counter during a run of the timer may generate a pulse different from that specified.
- Note 2: Do not change TC1CR<TFF1> during a run of the timer. TC1CR<TFF1> can be set correctly only at initialization (after reset). When the timer stops during PPG, TC1CR<TFF1> can not be set correctly from this point onward if the PPG output has the level which is inverted of the level when the timer starts. (Setting TC1CR<TFF1> specifies the timer F/F1 to the level inverted of the programmed value.) Therefore, the timer F/F1 needs to be initialized to ensure an arbitrary level of the PPG output. To initialize the timer F/F1, change TC1CR<TC1M> to the timer mode (it is not required to start the timer mode), and then set the PPG mode. Set TC1CR<TFF1> at this time.

Note 3: In the PPG mode, the following relationship must be satisfied.

TC1DRA > TC1DRB

Note 4: Set TC1DRB after changing the mode of TC1M to the PPG mode.

Example :Generating a pulse which is high-going for 800  $\mu$ s and low-going for 200  $\mu$ s (fc = 16 MHz)


Setting port


LD (TC1CR), 10000111B ; Sets the PPG mode, selects the source clock LDW (TC1DRA), 007DH ; Sets the cycle (1 ms  $\div$  2<sup>7</sup>/fc  $\mu$ s = 007DH)

LDW (TC1DRB), 0019H ; Sets the low-level pulse width (200  $\mu$ s ÷ 27/fc = 0019H)

LD (TC1CR), 10010111B ; Starts the timer

Example : After stopping PPG, setting the PPG pin to a high-level to restart PPG (fc = 16 MHz)

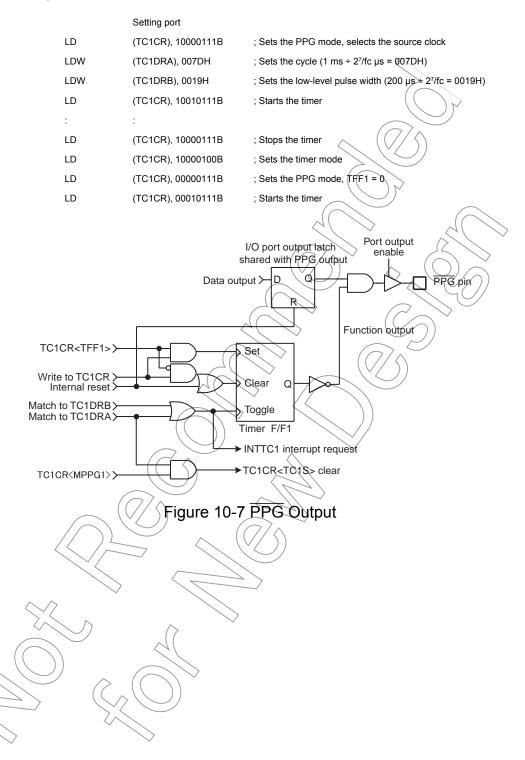

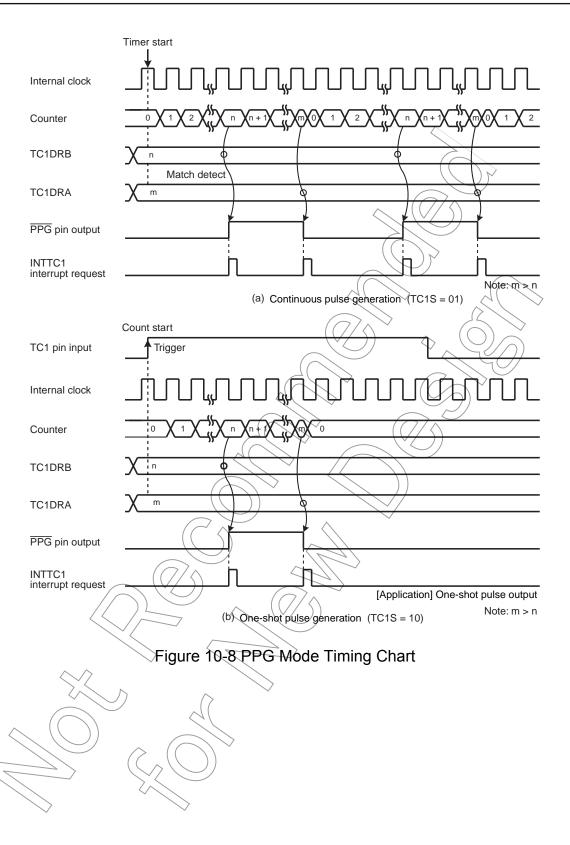




TOSHIBA TMP86FH92DMG

## 11. 8-Bit TimerCounter (TC3, TC4)


## 11.1 Configuration

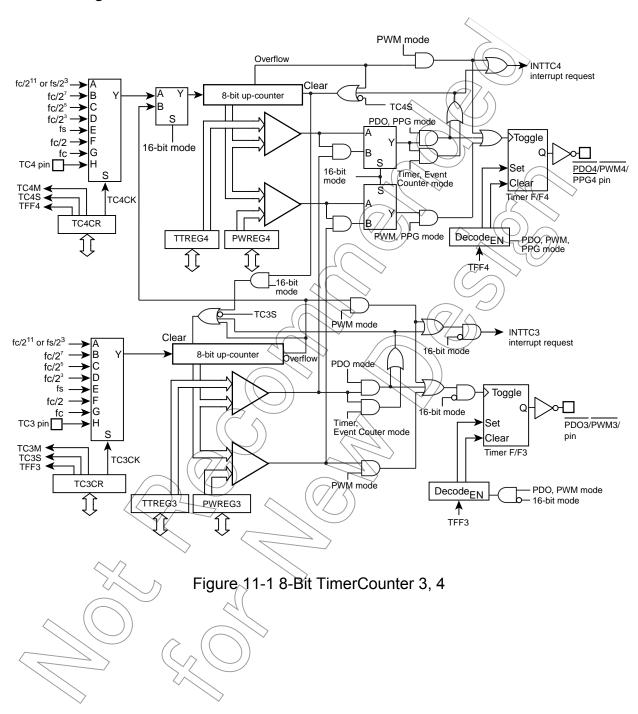

11.2 TimerCounter Control TMP86FH92DMG

#### 11.2 TimerCounter Control

The TimerCounter 3 is controlled by the TimerCounter 3 control register (TC3CR) and two 8-bit timer registers (TTREG3, PWREG3).

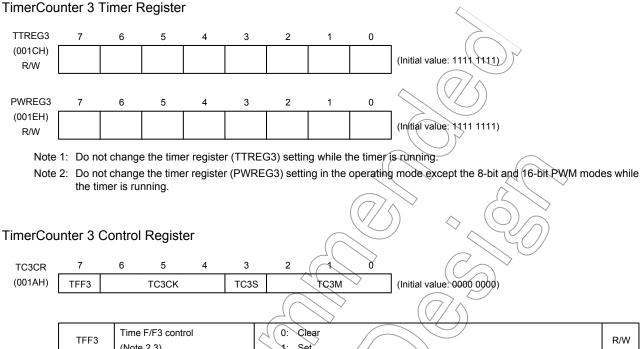

TFF3	Time F/F3 control (Note 2,3)	0: Clear 1: Set				R/W
			NORMAL1/2, DV7CK = 0	DLE1/2 mode DV7CK = 1	SLOW1/2 SLEEP1/2 mode	
		000	fc/2 <sup>11</sup>	fs/2 <sup>3</sup>	fs/2 <sup>3</sup>	
		001	fc/2 <sup>7</sup>	fc/27	-	
TC3CK	Operating clock selection [Hz]	010	fc/2 <sup>5</sup>	fc/2 <sup>5</sup>	-	R/W
	(Note 2,3,6)	011	fc/2 <sup>3</sup>	fc/2 <sup>3</sup>	-	
		100	)) fs	fs	fs	
		101	fc/2	fc/2	-	
		110	fc (Note 8)	fc (Note 8)	fc (Note 8)	
^ ^		111		TC3 pin input		
TC3S	TC3 start control (Note 3)	0: Operation	on stop and counter cle on start	ear		R/W
			er/event counter mode			
	TC3M operating mode select	>	se width modulation (F			
TC3M	(Note 2,3,7)	· ·	ode (Note 4,5)	, , ,		R/W
		(Each m	node is selectable with	TC4M.)		
	~ \	1**: Reserve	ed			

- Note 1: fc: High-frequency clock [Hz] fs: Low-frequency clock[Hz]
- Note 2: Do not change the TC3M, TC3CK and TFF3 settings while the timer is running.
- Note 3: To stop the timer operation (TC3S=  $1 \rightarrow 0$ ), do not change the TC3M, TC3CK and TFF3 settings. To start the timer operation (TC3S=  $0 \rightarrow 1$ ), TC3M, TC3CK and TFF3 can be programmed.
- Note 4: To use the TimerCounter in the 16-bit mode, set the operating mode by programming TC4CR<TC4M>, where TC3M must be fixed to 011.
- Note 5: To use the TimerCounter in the 16-bit mode, select the source clock by programming TC3CK. Set the timer start control and timer F/F control by programming TC4CR<TC4S> and TC4CR<TFF4>, respectively.
- Note 6: The operating clock settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 11-1 and Table 11-2.
- Note 7: The timer register settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 11-3.

Note 8: The clock "fc" can be selected as the source clock only in 8/16 bit PWM mode and in warming-up counter mode in SLOW or SLEEP mode.



11.2 TimerCounter Control TMP86FH92DMG

The TimerCounter 4 is controlled by the TimerCounter 4 control register (TC4CR) and two 8-bit timer registers (TTREG4 and PWREG4).

#### TimerCounter 4 Timer Register

TTREG4	7	6	5	4	3	2	1	0	
(001DH) R/W									(Initial value: 1111 1111)
PWREG4	7	6	5	4	3	2	1	0	(7/4
(001FH)									(Initial value: 1111 1111)
R/W									(Illinai value. 1412 1711)

Note 1: Do not change the timer register (TTREG4) setting while the timer is running.

Note 2: Do not change the timer register (PWREG4) setting in the operating mode except the 8-bit and 16-bit PWM modes while the timer is running.

#### TimerCounter 4 Control Register

(001BH) TFF4 TC4CK TC4S		
(00 IBH) 1040K 1043	TC4M	(Initial value: 0000 0000)

	<u> </u>		$\rightarrow$	$\overline{}$		1
TFF4	Timer F/F4 control	0: Clear	, (			R/W
	(Note 2,3)	1: Set		$\langle \mathcal{O} \rangle$		
			NORMAL1/2,	DLE1/2 mode	SLOW1/2	
			DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	
		000	fc/2 <sup>11</sup>	fs/2 <sup>3</sup>	fs/2 <sup>3</sup>	
		001	fc/2 <sup>7</sup>	fc/2 <sup>7</sup>	-	
TC4CK	Operating clock selection [Hz]	010	fc/25	fc/2 <sup>5</sup>	-	R/W
	(Note 2,3,7)	011	fc/2 <sup>3</sup>	fc/2 <sup>3</sup>	-	
		100	fs	fs	fs	
		101	fc/2	fc/2	-	
		110	fc (Note 9)	fc (Note 9)	-	
		111		TC4 pin input		
TC40	TC4 start control	0: Operation	on stop and counter cle	ear		R/W
TC4S	(Note 3)	1: Operation	on start			F/VV
\\\\		000: 8-bit time	er/event counter mode	9		
		001: 8-bit pro	grammable divider ou	tput (PDO) mode		
		010: 8-bit pul:	se width modulation (F	PWM) output mode		
TC4M	TC4M operating mode select	011: Reserve	d			R/W
I C#IVI	(Note 2,3,8)	100: 16-bit tin	ner/event counter mod	de		F/VV
		101: Warm-u	p counter mode			
		110: 16-bit pu	lse width modulation	(PWM) output mode		
		111: 16-bit Pf	PG mode			

- Note 1: fc: High-frequency clock [Hz] fs: Low-frequency clock [Hz]
- Note 2: Do not change the TC4M, TC4CK and TFF4 settings while the timer is running.
- Note 3: To stop the timer operation (TC4S=  $1 \rightarrow 0$ ), do not change the TC4M, TC4CK and TFF4 settings. To start the timer operation (TC4S=  $0 \rightarrow 1$ ), TC4M, TC4CK and TFF4 can be programmed.
- Note 4: When TC4M= 1\*\* (upper byte in the 16-bit mode), the source clock becomes the TC3 overflow signal regardless of the TC4CK setting.
- Note 5: To use the TimerCounter in the 16-bit mode, select the operating mode by programming TC4M, where TC3CR<TC3M> must be set to 011.
- Note 6: To the TimerCounter in the 16-bit mode, select the source clock by programming TC3CR<TC3CK>. Set the timer start control and timer F/F control by programming TC4S and TFF4, respectively.

- Note 7: The operating clock settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 11-1 and Table 11-2.
- Note 8: The timer register settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 11-3.
- Note 9: The clock "fc" can be selected as the source clock only in 8 bit PWM mode.

Table 11-1 Operating Mode and Selectable Source Clock (NORMAL1/2 and JDLE1/2 Modes)

Operating mode	fc/2 <sup>11</sup> or fs/2 <sup>3</sup>	fc/2 <sup>7</sup>	fc/2 <sup>5</sup>	fc/2³	fs	fc/2	fc	TC3 pin input	TC4 pin input
8-bit timer	0	0	0	0	-	<u> </u>	<u>)</u>	-	-
8-bit event counter	-	-	-	-	-	((-))	> -	0	0
8-bit PDO	0	0	0	0	-(	)	-		-
8-bit PWM	0	0	0	0	<ol> <li></li> </ol>	9	0	\(\(-\)	-
16-bit timer	0	0	0	0	(	-	- 0	1	-
16-bit event counter	-	-	-	- (	$\bigcirc$	\ -	-(	$\langle \rangle$	-
Warm-up counter	-	-	-			-	7 -	(/ <sub>f</sub> )	-
16-bit PWM	0	0	0	(6)	0	0	0	76/	-
16-bit PPG	0	0	0	(0)	-	- ((		0	-

Note 1: For 16-bit operations (16-bit timer/event counter, warm-up counter, 16-bit PWM and 16-bit PPG), set its source clock on lower bit (TC3CK).

Note 2: O: Available source clock

Table 11-2 Operating Mode and Selectable Source Clock (SLQW1/2 and SLEEP1/2 Modes)


Operating mode	fc/2 <sup>11</sup> or fs/2 <sup>3</sup>	fc/2 <sup>7</sup>	fc/2 <sup>5</sup>	fc/2 <sup>3</sup>	fs	fc/2	fc	TC3 pin input	TC4 pin input
8-bit timer	(07/	<u> </u>	-	(i)	\ <u>-</u>	-	-	-	-
8-bit event counter		<i>IJ</i> -	- (	77/^	-	-	-	0	0
8-bit PDO	0	- <	\- (\	$(\langle \cdot \rangle)$	-	-	-	-	-
8-bit PWM	0	- (		)	0	-	-	-	-
16-bit timer	<b>&gt;</b> 0	- <		- /	-	-	-	-	-
16-bit event counter	-	-		-	-	-	-	0	-
Warm-up counter	-	>-		-	-	-	0	-	-
16-bit PWM	0	AF	-	-	0	-	-	0	-
16-bit PPG	0	-//	-	-	-	-	-	0	-

Note 1: For 16-bit operations (16-bit timer/event counter, warm-up counter, 16-bit PWM and 16-bit PPG), set its source clock on

lower bit (TC3CK). Note 2: O : Available source clock 11.2 TimerCounter Control TMP86FH92DMG

Table 11-3 Constraints on Register Values Being Compared

Operating mode	Register Value
8-bit timer/event counter	1≤ (TTREGn) ≤255
8-bit PDO	1≤ (TTREGn) ≤255
8-bit PWM	2≤ (PWREGn) ≤254
16-bit timer/event counter	1≤ (TTREG4, 3) ≤65535
Warm-up counter	256≤ (TTREG4, 3) ≤65535
16-bit PWM	2≤ (PWREG4, 3) ≤65534
	1≤ (PWREG4, 3) < (TTREG4, 3) ≤65535
16-bit PPG	and
	(PWREG4, 3) + 1 < (TTREG4, 3)

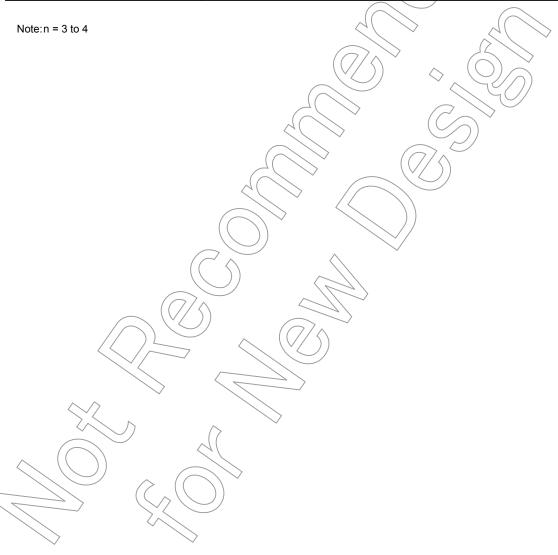

TMP86FH92DMG

#### 11.3 Function

The TimerCounter 3 and 4 have the 8-bit timer, 8-bit event counter, 8-bit programmable divider output (PDO), 8-bit pulse width modulation (PWM) output modes. The TimerCounter 3 and 4 (TC3, 4) are cascadable to form a 16-bit timer. The 16-bit timer has the operating modes such as the 16-bit timer, 16-bit event counter, warm-up counter, 16-bit pulse width modulation (PWM) output and 16-bit programmable pulse generation (PPG) modes.

## 11.3.1 8-Bit Timer Mode (TC3 and 4)

In the timer mode, the up-counter counts up using the internal clock. When a match between the up-counter and the timer register j (TTREGj) value is detected, an INTTCj interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting.

Note 1: In the timer mode, fix TCjCR<TFFj> to 0. If not fixed, the PDOj, PWNj and PFGj pins may output pulses.

Note 2: In the timer mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the timer mode, the new value programmed in TTREGj is in effect immediately after the programming. Therefore, if TTREGj is changed while the timer is running, an expected operation may not be obtained.

Note 3: j = 3, 4

Table 11-4 Source Clock for Timer Counter 3, 4 (Internal Clock)

	Source Clock (Note)		Resc	olution	Maximum S	etting Time
NORMAL1/2,	IDLE1/2 mode	SLOW1/2,				
DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	fc = 16 MHz	fs = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz
fc/2 <sup>11</sup> [Hz]	fs/23 [Hz]	fs/2³ [Hz]	128 µs	244.14 µs	32.6 ms	62.3 ms
fc/2 <sup>7</sup>	fc/2 <sup>7</sup>	-	8 µs	- ))	2.0 ms	-
fc/2 <sup>5</sup>	fc/2 <sup>5</sup>	- ((	) ) 2 μs		510 µs	-
fc/2 <sup>3</sup>	fc/2 <sup>3</sup>		500 ns		127.5 µs	-

Note: In the timer mode, do not select a source clock other than those shown above.

Example :Setting the timer mode with source clock fc/2<sup>7</sup> Hz and generating an interrupt 80 μs later

(TimerCounter4, fc = 16.0 MHz)

LD (TTREG4), 0AH

; Sets the timer register (80  $\mu$ s ÷ 2 $^{7}$ /fc = 0AH).

\DI/)

SET (EIRH). 7

; Enables INTTC4 interrupt.

ΕI

LD (TC4CR), 00010000B

; Sets the operating clock to fc/27, and 8-bit timer mode.

LD (T

(TC4CR), 00011000B

; Starts TC4.

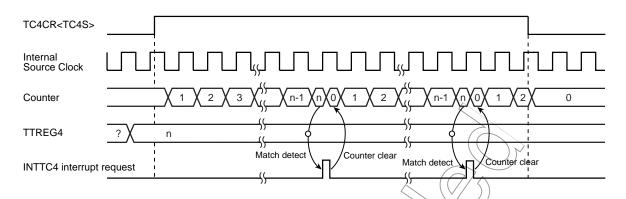


Figure 11-2 8-Bit Timer Mode Timing Chart (TC4)

## 11.3.2 8-Bit Event Counter Mode (TC3, 4)

In the 8-bit event counter mode, the up-counter counts up at the falling edge of the input pulse to the TCj pin. When a match between the up-counter and the TTREGj value is detected, an INTTCj interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting at the falling edge of the input pulse to the TCj pin. Two machine cycles are required for the low- or high-tevel pulse input to the TCj pin. Therefore, a maximum frequency to be supplied is fc/2<sup>4</sup> Hz in the NORMAL1/2 or IDLE1/2 mode, and fs/2<sup>4</sup> Hz in the SLOW1/2 or SLEEP1/2 mode.

Note 1: In the event counter mode, fix TCjCR<TFj> to 0. If not fixed, the PDOj, PWMj and PPGj pins may output pulses

Note 2: In the event counter mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the event counter mode, the new value programmed in TTREGj is in effect immediately after the programming. Therefore, if TTREGj is changed while the timer is running, an expected operation may not be obtained.



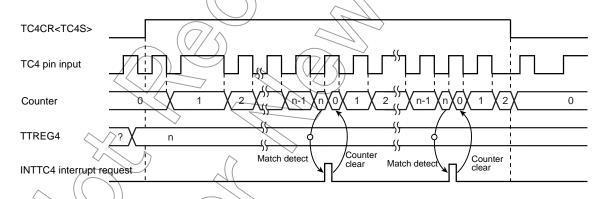


Figure 11-3 8 Bit Event Counter Mode Timing Chart (TC4)

## 11.3.3 8-Bit Programmable Divider Output (PDO) Mode (TC3, 4)

This mode is used to generate a pulse with a 50% duty cycle from the PDOi pin.

In the PDO mode, the up-counter counts up using the internal  $\underline{clock}$ . When a match between the up-counter and the TTREGj value is detected, the logic level output from the  $\overline{PDOj}$  pin is switched to the opposite state and the up-counter is cleared. The INTTCj interrupt request is generated at the time. The logic state opposite to the timer F/Fj logic level is output from the  $\overline{PDOj}$  pin. An arbitrary value can be set to the timer F/Fj by TCjCR<TFFj>. Upon reset, the timer F/Fj value is initialized to 0.

To use the programmable divider output, set the output latch of the I/O port to 1.

Example :Generating 1024 Hz pulse using TC4 (fc = 16.0 MHz)

Setting port

LD (TTREG4), 3DH ;  $1/1024 \div 2^{7}/\text{fc} \div 2 = 3DH$ 

LD (TC4CR), 00010001B ; Sets the operating clock to fc/2<sup>7</sup>, and 8-bit PDO mode.

LD (TC4CR), 00011001B ; Starts TC4.

Note 1: In the programmable divider output mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the programmable divider output mode, the new value programmed in TTREGj is in effect immediately after programming. Therefore, if TTREGj is changed while the timer is running, an expected operation may not be obtained.

Note 2: When the timer is stopped during PDO output, the PDOj pin holds the output status when the timer is stopped. To change the output status, program TCjCR<TFFj> after the timer is stopped. Do not change the TCjCR<TFFj> setting upon stopping of the timer.

Example: Fixing the PDOj pin to the high level when the TimerCounter is stopped

CLR (TCjCR).3; Stops the timer.



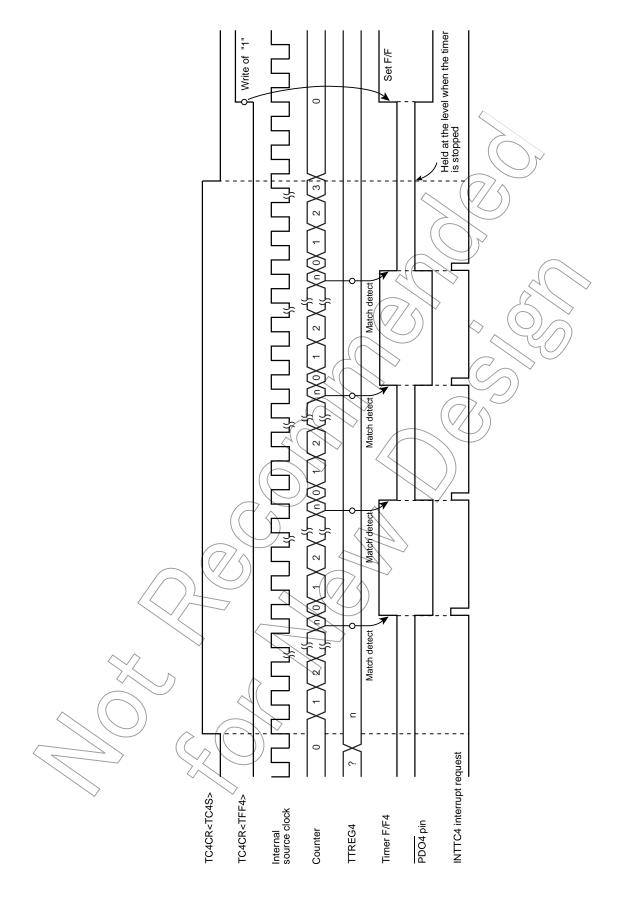


Figure 11-4 8-Bit PDO Mode Timing Chart (TC4)

#### 11.3.4 8-Bit Pulse Width Modulation (PWM) Output Mode (TC3, 4)

This mode is used to generate a pulse-width modulated (PWM) signals with up to 8 bits of resolution. The upcounter counts up using the internal clock.

When a match between the up-counter and the PWREGj value is detected, the logic level output from the timer F/Fj is switched to the opposite state. The counter continues counting. The logic level output from the timer F/Fj is switched to the opposite state again by the up-counter overflow, and the counter is cleared. The INTTCj interrupt request is generated at this time.

Since the initial value can be set to the timer F/Fj by TCjCR<TFFj>, positive and negative pulses can be generated. Upon reset, the timer F/Fj is cleared to 0.

(The logic level output from the PWMj pin is the opposite to the timer F/Fj logic level.)

Since PWREGj in the PWM mode is serially connected to the shift register, the value set to PWREGj can be changed while the timer is running. The value set to PWREGj during a run of the timer is shifted by the INTTCj interrupt request and loaded into PWREGj. While the timer is stopped, the value is shifted immediately after the programming of PWREGj. If executing the read instruction to PWREGj during PWM output, the value in the shift register is read, but not the value set in PWREGj. Therefore, after writing to PWREGj, the reading data of PWREGj is previous value until INTTCj is generated.

For the pin used for PWM output, the output latch of the I/O port must be set to 1/2

Note 1: In the PWM mode, program the timer register PWREGj immediately after the INTTCj interrupt request is generated (normally in the INTTCj interrupt service routine.) If the programming of PWREGj and the interrupt request occur at the same time, an unstable value is shifted, that may result in generation of the pulse different from the programmed value until the next INTTCj interrupt request is generated.

Note 2: When the timer is stopped during PWM output, the PWMj pin holds the output status when the timer is stopped. To change the output status program TCjCR<TFFj> after the timer is stopped. Do not change the TCjCR<TFFj> upon stopping of the timer.

Example: Fixing the PWMj pin to the high level when the TimerCounter is stopped

CLR (TCjCR).3; Stops the timer.

CLR (TCjCR).7; Sets the PWMj pin to the high level.

Note 3: To enter the STOP mode during PWM output, stop the timer and then enter the STOP mode. If the STOP mode is entered without stopping the timer when ic, fc/2 or fs is selected as the source clock, a pulse is output from the PWMI pin during the warm-up period/time after exiting the STOP mode.

Note 4: j = 3, 4

Table 11-5 PWM Output Mode

	Source Clock			lution	Repeated Cycle	
NORMAL1/2, DV7CK = 0	IDLE1/2 mode  DV7CK = 1	SLOW1/2, SLEEP1/2 mode	fc = 16 MHz	fs = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz
fc/2 <sup>11</sup> [Hz]	fs/2³ [Hz]	(fs/2³ [Hz]	128 µs	244.14 µs	32.8 ms	62.5 ms
fc/2 <sup>7</sup>	fc/2 <sup>7</sup>		8 µs	-	2.05 ms	-
fc/2 <sup>5</sup>	fc/2 <sup>5</sup>	-	2 μs	-	512 μs	-
fc/2 <sup>3</sup>	fc/2³	_	500 ns	-	128 µs	-
fs	fs	fs	30.5 μs	30.5 μs	7.81 ms	7.81 ms
fc/2	fc/2	-	125 ns	-	32 µs	-
fc	fc	-	62.5 ns	-	16 µs	-

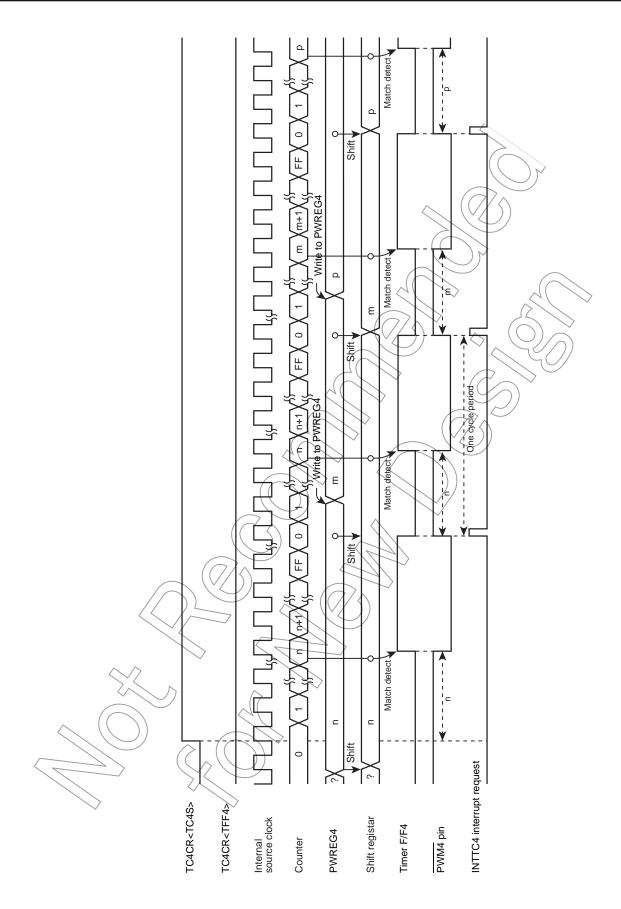


Figure 11-5 8-Bit PWM Mode Timing Chart (TC4)

## 11.3.5 16-Bit Timer Mode (TC3 and 4)

In the timer mode, the up-counter counts up using the internal clock. The TimerCounter 3 and 4 are cascadable to form a 16-bit timer.

When a match between the up-counter and the timer register (TTREG3, TTREG4) value is detected after the timer is started by setting TC4CR<TC4S> to 1, an INTTC4 interrupt is generated and the up-counter is cleared. After being cleared, the up-counter continues counting. Program the lower byte and upper byte in this order in the timer register. (Programming only the upper or lower byte should not be attempted.)

Note 1: In the timer mode, fix TCjCR<TFFj> to 0. If not fixed, the PDOj, PWMj, and PPGj pins may output a pulse.


Note 2: In the timer mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the timer mode, the new value programmed in TTREGj is in effect immediately after programming of TTREGj. Therefore, if TTREGj is changed while the timer is running, an expected operation may not be obtained.

Note 3: i = 3, 4

Table 11-6 Source Clock for 16-Bit Timer Mode

	Source Clock		Resc	plution	Maximum S	etting Time
NORMAL1/2,	IDLE1/2 mode	SLOW1/2,		$\rightarrow$		
DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	fc = 16 MHz	s = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz
fc/2 <sup>11</sup>	fs/2 <sup>3</sup>	fs/2 <sup>3</sup>	128 µs	244.14 μs	8.39 s	16 s
fc/2 <sup>7</sup>	fc/2 <sup>7</sup>		8 µs		524.3 ms	-
fc/2 <sup>5</sup>	fc/2 <sup>5</sup>	-	2 µs	<< - \	131.1 ms	-
fc/2 <sup>3</sup>	fc/2 <sup>3</sup>	- (	500 ns	- ))	32.8 ms	-

Example : Setting the timer mode with source clock fc/27 [Hz], and generating an interrupt 300 ms later

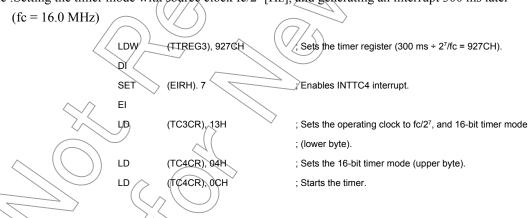

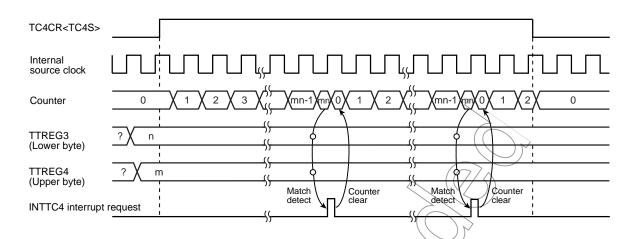


Figure 11-6 16-Bit Timer Mode Timing Chart (TC3 and TC4)

## 11.3.6 16-Bit Event Counter Mode (TC3 and 4)

In the event counter mode, the up-counter counts up at the falling edge to the TC3 pin. The TimerCounter 3 and 4 are cascadable to form a 16-bit event counter.

When a match between the up-counter and the timer register (TTREG3, TTREG4) value is detected after the timer is started by setting TC4CR<TC4S> to 1, an INTTC4 interrupt is generated and the up-counter is cleared.

After being cleared, the up-counter restarts counting at the falling edge of the input pulse to the TC3 pin. Two machine cycles are required for the low- or high-level pulse input to the TC3 pin.

Therefore, a maximum frequency to be supplied is fc/2<sup>4</sup> Hz in the NORMAL1/2 or IDLE1/2 mode, and fs/2<sup>4</sup> in the SLOW1/2 or SLEEP1/2 mode. Program the lower byte (TTREG3), and upper byte (TTREG4) in this order in the timer register. (Programming only the upper or lower byte should not be attempted.)

Note 1: In the event counter mode, fix TCjQR<TFFj> to 0. If not fixed, the PDOj, PWMj and PPGj pins may output pulses.

Note 2: In the event counter mode, do not change the TTREG setting while the timer is running. Since TTREG is not in the shift register configuration in the event counter mode, the new value programmed in TTREG is in effect immediately after the programming. Therefore, if TTREG is changed while the timer is running, an expected operation may not be obtained.

Note 3: j = 3, 4

## 11.3.7 16-Bit Pulse Width Modulation (PWM) Output Mode (TC3 and 4)

This mode is used to generate a pulse-width modulated (PWM) signals with up to 16 bits of resolution. The Timer Counter 3 and 4 are cascadable to form the 16-bit PWM signal generator.

The counter counts up using the internal clock or external clock.

When a match between the up-counter and the timer register (PWREG3, PWREG4) value is detected, the logic level output from the timer F/F4 is switched to the opposite state. The counter continues counting. The logic level output from the timer F/F4 is switched to the opposite state again by the counter overflow, and the counter is cleared. The INTTC4 interrupt is generated at this time.

Two machine cycles are required for the high- or low-level pulse input to the TC3 pin. Therefore, a maximum frequency to be supplied is  $fc/2^4$  Hz in the NORMAL1/2 or IDLE1/2 mode, and  $fs/2^4$  to in the SLOW1/2 or SLEEP1/2 mode.

Since the initial value can be set to the timer F/F4 by TC4CR<TFF4>, positive and negative pulses can be generated. Upon reset, the timer F/F4 is cleared to 0.

(The logic level output from the PWM4 pin is the opposite to the timer F/F4 logic level.)

Since PWREG4 and 3 in the PWM mode are serially connected to the shift register, the values set to PWREG4 and 3 can be changed while the timer is running. The values set to PWREG4 and 3 during a run of the timer are shifted by the INTTCj interrupt request and loaded into PWREG4 and 3. While the timer is stopped, the values are shifted immediately after the programming of PWREG4 and 3. Set the lower byte (PWREG3) and upper byte (PWREG4) in this order to program PWREG4 and 3. (Programming only the lower or upper byte of the register should not be attempted.)

If executing the read instruction to PWREG4 and 3 during PWM output, the values set in the shift register is read, but not the values set in PWREG4 and 3. Therefore, after writing to the PWREG4 and 3, reading data of PWREG4 and 3 is previous value until INTTC4 is generated.

For the pin used for PWM output, the output latch of the I/O port must be set to/1.

Note 1: In the PWM mode, program the timer register PWREG4 and 3 immediately after the INTTC4 interrupt request is generated (normally in the INTTC4 interrupt service routine.) If the programming of PWREGj and the interrupt request occur at the same time, an unstable value is shifted, that may result in generation of pulse different from the programmed value until the next INTTC4 interrupt request is generated.

Note 2: When the timer is stopped during PWM output, the PWM4 pin holds the output status when the timer is stopped. To change the output status, program TC4CR<TFE4> after the timer is stopped. Do not program TC4CR<TFF4> upon stopping of the timer.

Example: Fixing the PWM4 pin to the high level when the Timer Counter is stopped

CLR (TC4CR).3; Stops the timer.

CLR (TC4CR).7; Sets the PWM4 pin to the high level.

Note 3: To enter the STOP mode, stop the timer and then enter the STOP mode. If the STOP mode is entered without stopping of the timer when fc, fc/2 or fs is selected as the source clock, a pulse is output from the PWM4 pin during the warm-up period time after exiting the STOP mode.

Table 11-7 16-Bit PWM Output Mode

	Source Clock		Reso	lution	Repeate	ed Cycle
NORMAL1/2,	IDLE1/2 mode	SLOW1/2,				
DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	fc = 16 MHz	fs = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz
fc/2 <sup>11</sup>	fs/23 [Hz]	fs/2³ [Hz]	128 µs	244.14 µs	8.39 s	16 s
fc/2 <sup>7</sup>	fc/2 <sup>7</sup>	(7/4	8 µs	-	524.3 ms	-
fc/2 <sup>5</sup>	fc/2 <sup>5</sup>	<u>( )-</u> )	2 jus	<b>→</b> -	131.1 ms	-
fc/2 <sup>3</sup>	/fc/2 <sup>3</sup>	<u> </u>	500/ns	-	32.8 ms	-
fs	fs	fs	30.5 μs	30.5 μs	2 s	2 s
fc/2	fc/2	- <	125 ns	-	8.2 ms	-
fc	fc	-	62.5 ns	-	4.1 ms	-

Example: Generating a pulse with 1-ms high-level width and a period of 32.768 ms (fc = 16.0 MHz)

Setting ports

LDW (RWREG3), 07D0H ; Sets the pulse width.

LD (TC3CR), 33H ; Sets the operating clock to fc/2³, and 16-bit PWM output mode

; (lower byte).

LD (TC4CR), 056H ; Sets TFF4 to the initial value 0, and 16-bit PWM signal

; generation mode (upper byte).

LD (TC4CR), 05EH ; Starts the timer.

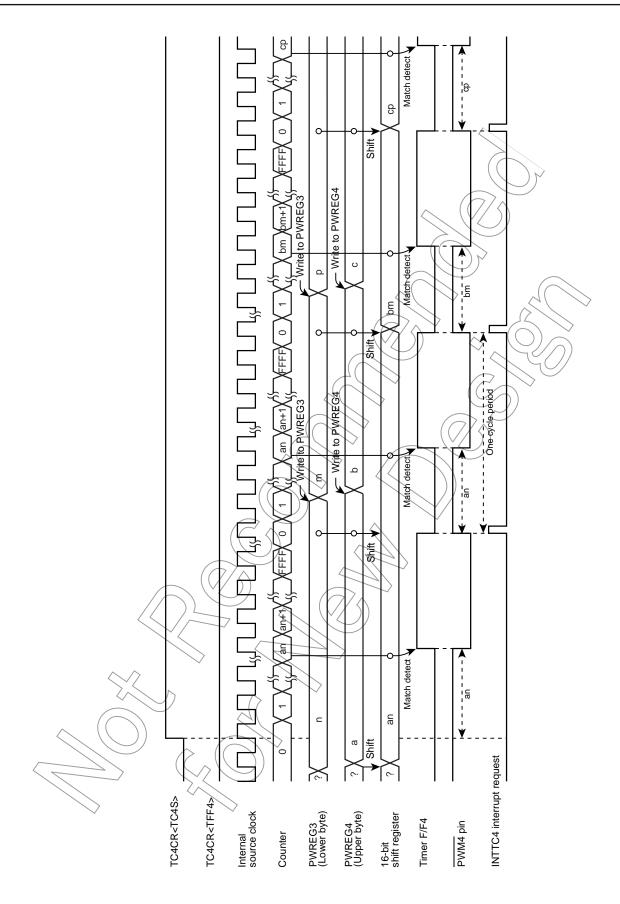


Figure 11-7 16-Bit PWM Mode Timing Chart (TC3 and TC4)

TMP86FH92DMG

### 11.3.8 16-Bit Programmable Pulse Generate (PPG) Output Mode (TC3 and 4)

This mode is used to generate pulses with up to 16-bits of resolution. The timer counter 3 and 4 are cascadable to enter the 16-bit PPG mode.

The counter counts up using the internal clock or external clock. When a match between the up-counter and the timer register (PWREG3, PWREG4) value is detected, the logic level output from the timer F/F4 is switched to the opposite state. The counter continues counting. The logic level output from the timer F/F4 is switched to the opposite state again when a match between the up-counter and the timer register (TTREG3, TTREG4) value is detected, and the counter is cleared. The INTTC4 interrupt is generated at this time.

Two machine cycles are required for the high- or low-level pulse input to the TC3 pin. Therefore, a maximum frequency to be supplied is fc/2<sup>4</sup> Hz in the NORMAL1/2 or IDLE1/2 mode, and fs/2<sup>4</sup> to in the SLOW1/2 or SLEEP1/2 mode.

Since the initial value can be set to the timer F/F4 by TC4CR<TFF4>, positive and negative pulses can be generated. Upon reset, the timer F/F4 is cleared to 0.

(The logic level output from the  $\overline{PPG4}$  pin is the opposite to the timer F/F4.)

Set the lower byte and upper byte in this order to program the timer register (TTREG3 → TTREG4, PWREG3 → PWREG4) (Programming only the upper or lower byte should not be attempted.)

For PPG output, set the output latch of the I/O port to 1.

Example :Generating a pulse with 1-ms high-level width and a period of 16.385 ms (fc = 16.0 MHz)

Setting ports

LDW (PWREG3), 07D0H; Sets the pulse width.

LDW (TTREG3), 8002H; Sets the cycle period.

LD (TC3CR), 33H; Sets the operating clock to fc/2³, and 16-bit PPG mode

(flower byte).

Sets TFF4 to the initial value 0, and 16-bit

; PPG mode (upper byte).
LD (TC4CR), 05FH ; Starts the timer.

Note 1: In the PPG mode, do not change the RWREGi and TTREGi settings while the timer is running. Since PWREGi and TTREGi are not in the shift register configuration in the PPG mode, the new values programmed in PWREGi and TTREGI are in effect immediately after programming PWREGi and TTREGi. Therefore, if PWREGi and TTREGi are changed while the timer is running, an expected operation may not be obtained.

Note 2: When the timer is stopped during PPG output, the PPG4 pin holds the output status when the timer is stopped. To change the output status, program TC4CR<TFF4> after the timer is stopped. Do not change TC4CR<TFF4> upon stopping of the timer.

Example: Fixing the PPG4 pin to the high level when the TimerCounter is stopped

CLR (TC4CR).3; Stops the timer

CLR (TC4CR).7; Sets the PPG4 pin to the high level

Note 3: i = 3, 4

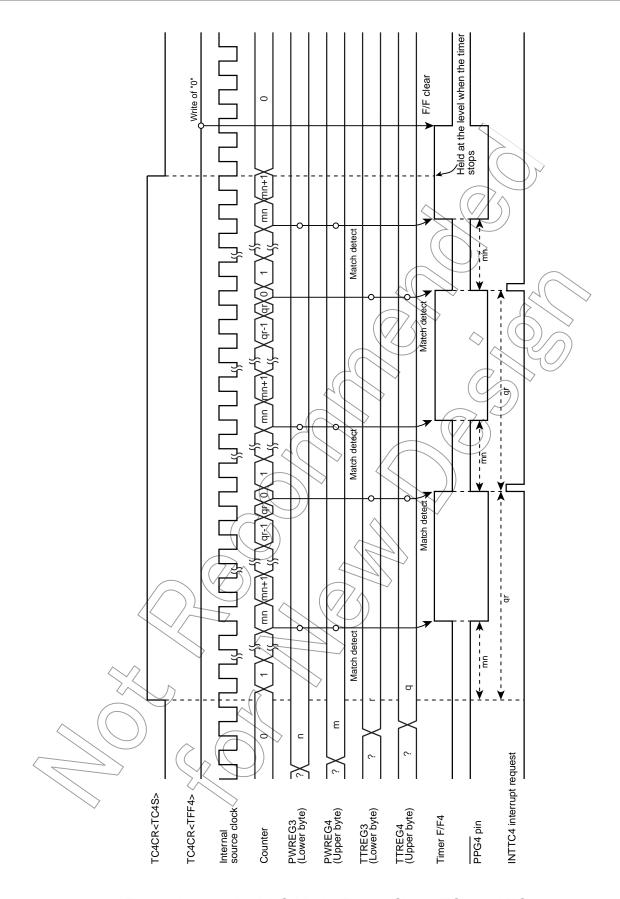


Figure 11-8 16-Bit PPG Mode Timing Chart (TC3 and TC4)

#### 11.3.9 Warm-Up Counter Mode

In this mode, the warm-up period time is obtained to assure oscillation stability when the system clocking is switched between the high-frequency and low-frequency. The timer counter 3 and 4 are cascadable to form a 16-bit TimerCounter. The warm-up counter mode has two types of mode; switching from the high-frequency to low-frequency, and vice-versa.

- Note 1: In the warm-up counter mode, fix TCiCR<TFFi> to 0. If not fixed, the PDOi, PWMi and PPGi pins may output pulses.
- Note 2: In the warm-up counter mode, only upper 8 bits of the timer register TTREG4 and 3 are used for match detection and lower 8 bits are not used.

Note 3: i = 3, 4


# 11.3.9.1 Low-Frequency Warm-up Counter Mode (NORMAL1 → NORMAL2 → SLOW2 → SLOW1)

In this mode, the warm-up period time from a stop of the low-frequency clock is to oscillation stability is obtained. Before starting the timer, set SYSCR2<XTEN> to 1 to oscillate the low-frequency clock. When a match between the up-counter and the timer register (TTREG4, 3) value is detected after the timer is started by setting TC4CR<TC4S> to 1, the counter is cleared by generating the INTTC4 interrupt request. After stopping the timer in the INTTC4 interrupt service routine, set SYSCR2<SYSCK> to 1 to switch the system clock from the high-frequency to low-frequency, and then clear of SYSCR2<XEN> to 0 to stop the high-frequency clock.

Table 11-8 Setting Time of Low-Frequency Warm-Up Counter Mode (fs = 32.768 kHz)

Minimum Time Setting (TTREG4, 3 = 0100H)	Maximum Time Setting (TTREG4, 3 = FF00H)
7.81 ms	1.99 s

Example: After checking low-frequency clock oscillation stability with TC4 and 3, switching to the SLOW1 mode

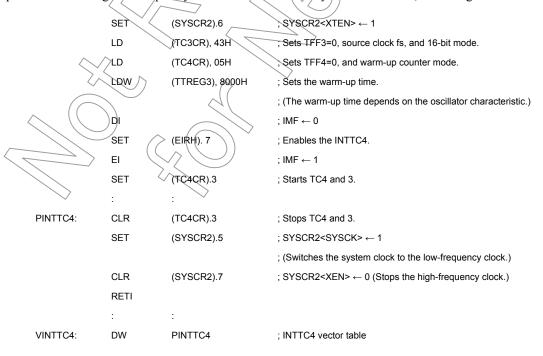


# 11.3.9.2 High-Frequency Warm-Up Counter Mode (SLOW1 → SLOW2 → NORMAL2 → NORMAL1)

In this mode, the warm-up period time from a stop of the high-frequency clock fc to the oscillation stability is obtained. Before starting the timer, set SYSCR2<XEN> to 1 to oscillate the high-frequency clock. When a match between the up-counter and the timer register (TTREG4, 3) value is detected after the timer is started by setting TC4CR<TC4S> to 1, the counter is cleared by generating the INTTC4 interrupt request. After stopping the timer in the INTTC4 interrupt service routine, clear SYSCR2<SYSCK> to 0 to switch the system clock from the low-frequency to high-frequency, and then SYSCR2<XTEN to 0 to stop the low-frequency clock.

Table 11-9 Setting Time in High-Frequency Warm-Up Counter Mode

Minimum time Setting	Maximum time Setting
(TTREG4, 3 = 0100H)	(TTREG4, 3 = FF00H)
16 µs	4:08 ms


Example: After checking high-frequency clock oscillation stability with TC4 and 3, switching to the NORMAL1 mode

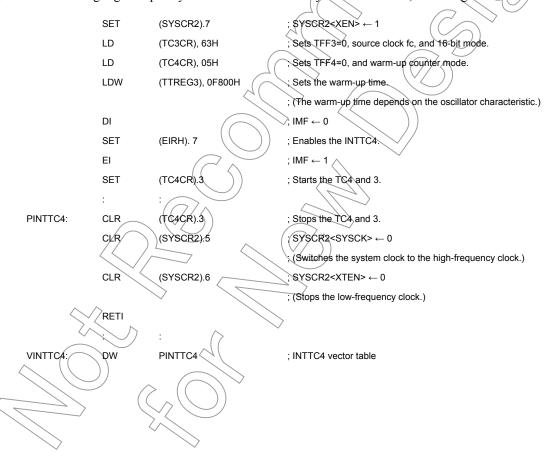

TOSHIBA TMP86FH92DMG

## 12. Asynchronous Serial interface (UART1)

## 12.1 Configuration

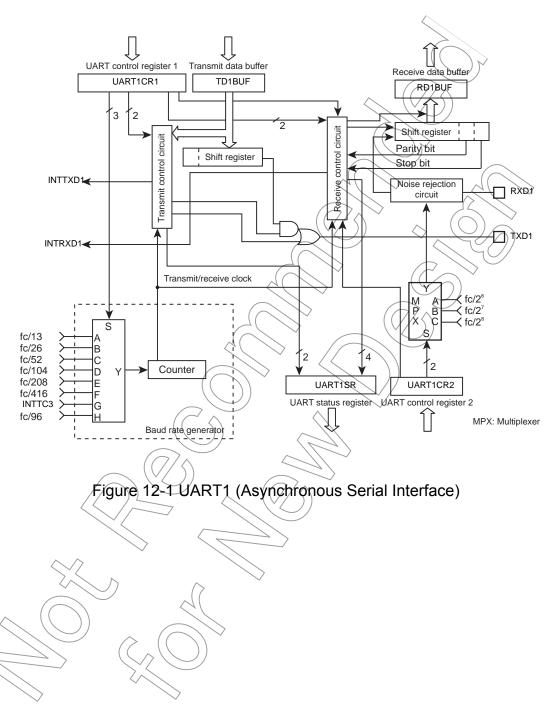

12.2 Control TMP86FH92DMG

## 12.2 Control


UART1 is controlled by the UART1 Control Registers (UART1CR1, UART1CR2). The operating status can be monitored using the UART status register (UART1SR).

UART1 Co	ntrol Re	egiste	r1						
UART1CR1	7	6	5	4	3	2	1	0	
(0025H)	TXE	RXE	STBT	EVEN	PE		BRG	(Initial value: 0000 0000)	
	TXE		ransfer ope	ration			: Disa		
							: Ena	ble	
	l DVE	.   _					: Disa	able	
	RXE	.   ^	eceive ope	ration			: Ena	ble	
	0.770					(	: 1 bit		
	STB	1	Transmit stop bit length		1	-	: 2 bit	is \\	
	EVEN	, ,	Even-numbered parity			(	: Odd	I-numbered parity	
	EVE	\					: Eve	n-numbered parity	
	PE		ority additio				: No j	parity Write	
	PE		arity additio	on			: Rari	only	
						000	: (fc/4;	3[Hz]	
						00			
						010	: fc/52	2	
	BRG	,   _	ranamit ala	alcaalaat		(01	: fc/10	Ď4 ( ( // Ś )	
	BRG	'   ''	Transmit clock select			100	: fc/20	08	
						10	:> fc/4	16 //	
						710	: TC3	3 (Input INTTC3)	
						11º	: fc/96	3	

Note 1: When operations are disabled by setting TXE and RXE bit to "0", the setting becomes valid when data transmit or receive complete. When the transmit data is stored in the transmit data buffer, the data are not transmitted. Even if data transmit is enabled, until new data are written to the transmit data buffer, the current data are not transmitted.

Note 2: The transmit clock and the parity are common to transmit and receive.

Note 3: UART1CR1<RXE> and UART1CR1<TXE> should be set to "0" before UART1CR1<BRG> is changed.

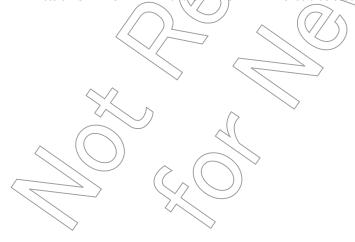

#### UART1 Control Register2

UART1CR2	7	6	5	4	3	2	1	0	
(0026H)						RXE	NC	STOPBR	(Initial value: **** *000)

RXDNC	Selection of RXD input noise rejection time	00: No noise rejection (Hysteresis input) 01: Rejects pulses shorter than 31/fc [s] as noise 10: Rejects pulses shorter than 63/fc [s] as noise 11: Rejects pulses shorter than 12/1/fc [s] as noise	Write
STOPBR	Receive stop bit length	0: 1 bit 1: 2 bits	

Note: Settings of RXDNC are limited depending on the transfer clock specified by BRG. The combination "O" is available but please do not select the combination "-". The transfer clock is calculated by the following equation:

Transfer clock [Hz] = Timer/counter source clock [Hz] + TTREG3 set value

		RXDNC setting						
BRG setting	Transfer clock [Hz]	00 (No noise rejection) 〈	(Reject pulses shorter than 31/fc[s] as noise)	(Reject pulses shorter than 63/fc[s] as noise)	11 (Reject pulses shorter than 127/fc[s] as noise)			
000	fc/13	0	0	(7)0	-			
110	fc/8	0	-	$(\vee/)$	-			
(When the transfer clock gen-	fc/16	04	9/	<u>.</u>	-			
erated by INTTC3 is the same as the right side column)	fc/32	0	\(\sqrt{\sqrt{\chi}}\)	0	-			
The setting except the	above	((0))	0	// 0	0			

#### **UART1 Status Register**

 UART1SR (0025H)
 7
 6
 5
 4
 3
 2
 1
 0
 (Initial value: 0000 11\*\*)

	PERR	Parity error flag	0: No parity error 1: Parity error	
	FERR	Framing error flag	0: No framing error 1: Framing error	
^	ØERR	Overrun error flag	O: No overrun error Overrun error	Read
	RBFL	Receive data buffer full flag	Receive data buffer empty     Receive data buffer full	only
	TEND	Transmit end flag	On transmitting Transmit end	
	TBEP	Transmit data buffer empty flag	O: Transmit data buffer full (Transmit data writing is finished) Transmit data buffer empty	

Note: When an INTTXD is generated, TBEP flag is set to "1" automatically.

#### **UART1** Receive Data Buffer

RD1BUF	7	6	5	4	3	2	1	0	Read only
(0027H)									(Initial value: 0000 0000)

12.2 Control TMP86FH92DMG

## UART1 Transmit Data Buffer



TMP86FH92DMG

## 12.3 Transfer Data Format

In UART1, an one-bit start bit (Low level), stop bit (Bit length selectable at high level, by UART1CR1<STBT>), and parity (Select parity in UART1CR1<PE>; even- or odd-numbered parity by UART1CR1<EVEN>) are added to the transfer data. The transfer data formats are shown as follows.

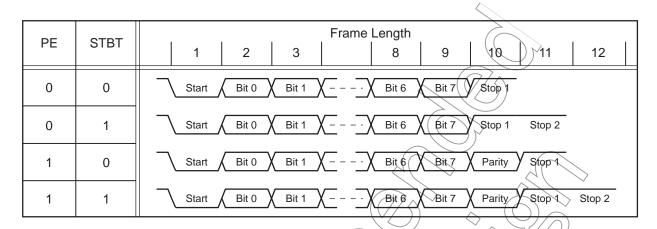


Figure 12-2 Transfer Data Format

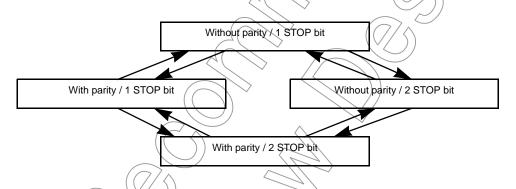


Figure 12-3 Caution on Changing Transfer Data Format

Note: In order to switch the transfer data format, perform transmit operations in the above Figure 12-3 sequence except for the initial setting.

2.4 Transfer Rate TMP86FH92DMG

#### 12.4 Transfer Rate

The baud rate of UART1 is set of UART1CR1<BRG>. The example of the baud rate are shown as follows.

Table 12-1 Transfer Rate (Example)

BRG		Source Clock	
BRG	16 MHz	8 MHz	4 MHz
000	76800 [baud]	38400 [baud]	19200 [baud]
001	38400	19200	9600
010	19200	9600	4800
011	9600	4800	2400
100	4800	2400	1200
101	2400	1200	600

When TC3 is used as the UART1 transfer rate (when UART1 CR1×BRG> = "110"), the transfer clock and transfer rate are determined as follows:

Transfer clock [Hz] = TC3 source clock [Hz] / TTREG3 setting value

Transfer Rate [baud] = Transfer clock [Hz] / 16

## 12.5 Data Sampling Method

The UART1 receiver keeps sampling input using the clock selected by UART1CR1<BRG> until a start bit is detected in RXD1 pin input. RT clock starts detecting "L" level of the RXD1 pin. Once a start bit is detected, the start bit, data bits, stop bit(s), and parity bit are sampled at three times of RT7, RT8, and RT9 during one receiver clock interval (RT clock). (RT0 is the position where the bit supposedly starts.) Bit is determined according to majority rule (The data are the same twice or more out of three samplings).

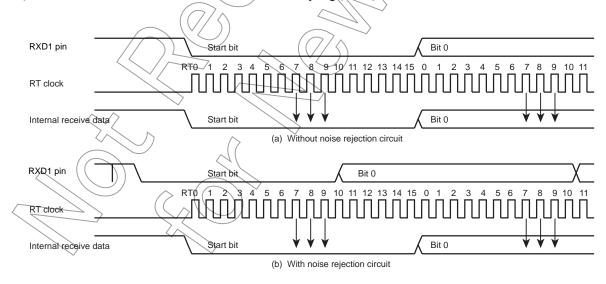


Figure 12-4 Data Sampling Method

TMP86FH92DMG

## 12.6 STOP Bit Length

Select a transmit stop bit length (1 bit or 2 bits) by UART1CR1<STBT>.

## 12.7 Parity

Set parity / no parity by UART1CR1<PE> and set parity type (Odd- or Even-numbered) by UART1CR1<EVEN>.

## 12.8 Transmit/Receive Operation

## 12.8.1 Data Transmit Operation

Set UARTICR1<TXE> to "1". Read UARTISR to check UARTISR<TBEP> = "1", then write data in TD1BUF (Transmit data buffer). Writing data in TD1BUF zero-clears UARTISR<TBEP> transfers the data to the transmit shift register and the data are sequentially output from the TXD1 pin. The data output include a one-bit start bit, stop bits whose number is specified in UARTICR1<STBT> and a parity bit if parity addition is specified. Select the data transfer baud rate using UARTICR1<BRG>. When data transmit starts, transmit buffer empty flag UARTISR<TBEP> is set to "1" and an INTTXD1 interrupt is generated.

While UART1CR1<TXE> = "0" and from when "1" is written to UART1CR1<TXE> to when send data are written to TD1BUF, the TXD1 pin is fixed at high level. When transmitting data, first read UART1SR, then write data in TD1BUF. Otherwise, UART1SR<TBEP> is not zero-cleared and transmit does not start.

#### 12.8.2 Data Receive Operation

Set UART1CR1<RXE> to "1". When data are received via the RXD1 pin, the receive data are transferred to RD1BUF (Receive data buffer). At this time, the data transmitted includes a start bit and stop bit(s) and a parity bit if parity addition is specified. When stop bit(s) are received, data only are extracted and transferred to RD1BUF (Receive data buffer). Then the receive buffer full flag UART1SR<RBFL> is set and an INTRXD1 interrupt is generated. Select the data transfer baud rate using UART1CR1<BRG>.

If an overrun error (OERR) occurs when data are received, the data are not transferred to RD1BUF (Receive data buffer) but discarded; data in the RD1BUF are not affected.

Note: When a receive operation is disabled by setting UART1CR1<RXE> bit to "0", the setting becomes valid when data receive is completed. However, if a framing error occurs in data receive, the receive-disabling setting may not become valid. If a framing error occurs, be sure to perform a re-receive operation.

12.9 Status Flag TMP86FH92DMG

## 12.9 Status Flag

#### 12.9.1 Parity Error

When parity determined using the receive data bits differs from the received parity bit, the parity error flag UART1SR<PERR> is set to "1". The UART1SR<PERR> is cleared to "0" when the RD1BUF is read after reading the UART1SR.

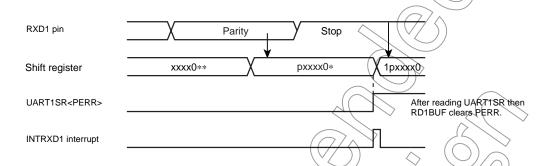


Figure 12-5 Generation of Parity Error

## 12.9.2 Framing Error

When "0" is sampled as the stop bit in the receive data, framing error flag UART1SR<FERR> is set to "1". The UART1SR<FERR> is cleared to "0" when the RD1BUF is read after reading the UART1SR.

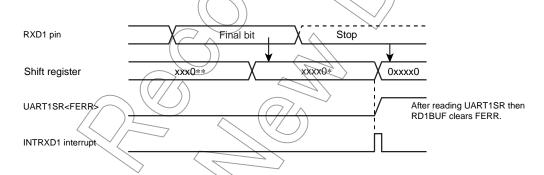


Figure 12-6 Generation of Framing Error

#### 12.9.3 Overrun Error

When all bits in the next data are received while unread data are still in RD1BUF, overrun error flag UART1SR<OERR> is set to "1". In this case, the receive data is discarded; data in RD1BUF are not affected. The UART1SR<OERR> is cleared to "0" when the RD1BUF is read after reading the UART1SR.

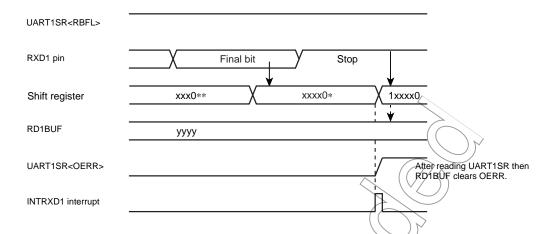


Figure 12-7 Generation of Overrun Error

Note: Receive operations are disabled until the overrun error flag UARTISR COERR is cleared.

#### 12.9.4 Receive Data Buffer Full

Loading the received data in RD1BUF sets receive data buffer full flag UART1SR<RBFL> to "1". The UART1SR<RBFL> is cleared to "0" when the RD1BUF is read after reading the UART1SR.

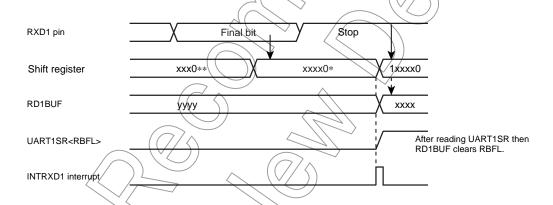


Figure 12-8 Generation of Receive Data Buffer Full

Note: If the overrun error flag UART1SR<OERR> is set during the period between reading the UART1SR and reading the RD1BUF, it cannot be cleared by only reading the RD1BUF. Therefore, after reading the RD1BUF, read the UART1SR again to check whether or not the overrun error flag which should have been cleared still remains set.

## 12.9.5 Transmit Data Buffer Empty

When no data is in the transmit buffer TD1BUF, that is, when data in TD1BUF are transferred to the transmit shift register and data transmit starts, transmit data buffer empty flag UART1SR<TBEP> is set to "1". The UART1SR<TBEP> is cleared to "0" when the TD1BUF is written after reading the UART1SR.

12.9 Status Flag TMP86FH92DMG

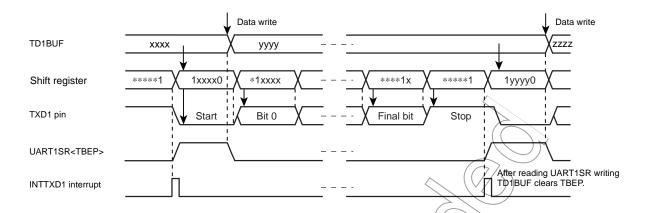


Figure 12-9 Generation of Transmit Data Buffer Empty

## 12.9.6 Transmit End Flag

When data are transmitted and no data is in TD1BUF (UART1SR<TBEP) = "V"), transmit end flag UART1SR<TEND> is set to "1". The UART1SR<TEND is cleared to "0" when the data transmit is started after writing the TD1BUF.

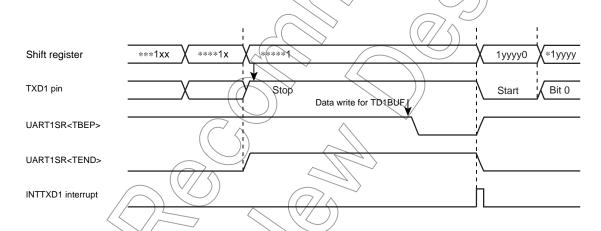



Figure 12-10 Generation of Transmit End Flag and Transmit Data Buffer Empty



TOSHIBA TMP86FH92DMG

## 13. Asynchronous Serial interface (UART2)

## 13.1 Configuration

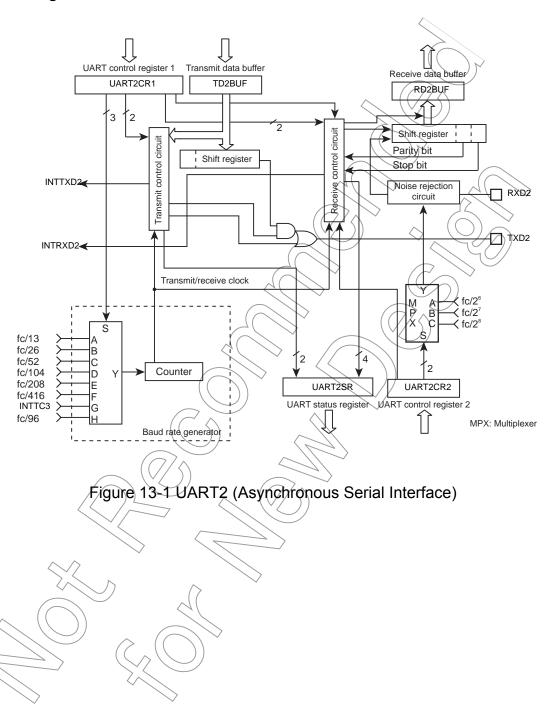

13.2 Control TMP86FH92DMG

## 13.2 Control


UART2 is controlled by the UART2 Control Registers (UART2CR1, UART2CR2). The operating status can be monitored using the UART status register (UART2SR).

UART2 Co	ntrol Re	giste	r1							
UART2CR1	7	6	5	4	3	2	1	0		
(0022H)	TXE	RXE	STBT	EVEN	PE		BRG	(Initial value: 0000 0000)		
	TXE	Tr	ansfer ope	ration			: Disa			
							: Enat	ble		
	DVE						: Disa	able		
	RXE	Re	eceive ope	ration			: Enat	ble		
	0.7.0.7	.   _	Transmit stop bit length						: 1 bit	
	STBT	l lr			ו		1: 2 bits			
	EVEN		Even-numbered parity			(	: Odd	-numbered parity		
	EVEN	'   E	en-numbe	red parity			: Ever	n-numbered parity		
	PE		with a calculation				: No p	Darity Write		
	PE	Pa	rity additio	on			: Parit	ty		
						000	: fc/43	3[Hz]		
						00	fc/26			
						010	: fc/52			
	BRG		Transmit clock select			(01	fc/10	04 ((// \)		
	BRG	-   ''				100	: fc/20	08		
						10	:> fc/41			
						710	: TC3	(Input INTTC3)		
					( (	11	: fc/96	3 //		

Note 1: When operations are disabled by setting TXE and RXE bit to "0", the setting becomes valid when data transmit or receive complete. When the transmit data is stored in the transmit data buffer, the data are not transmitted. Even if data transmit is enabled, until new data are written to the transmit data buffer, the current data are not transmitted.

Note 2: The transmit clock and the parity are common to transmit and receive.

Note 3: UART2CR1<RXE> and UART2CR1<TXE> should be set to "0" before UART2CR1<BRG> is changed.

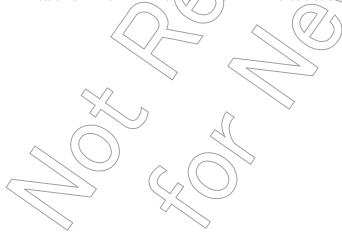

### UART2 Control Register2

UART2CR2	7	6	5	4	3	2	1	0	
(0023H)						RXI	ONC	STOPBR	(Initial value: **** *000)

RXDNC	Selection of RXD input noise rejection time	00: No noise rejection (Hysteresis input) 01: Rejects pulses shorter than 31/fc [s] as noise 10: Rejects pulses shorter than 63/fc [s] as noise 11: Rejects pulses shorter than 127/fc [s] as noise	Write only
STOPBR	Receive stop bit length	0: 1 bit 1: 2 bits	

Note: Settings of RXDNC are limited depending on the transfer clock specified by BRG. The combination "O" is available but please do not select the combination "-". The transfer clock is calculated by the following equation:

Transfer clock [Hz] = Timer/counter source clock [Hz] + TTREG3 set value

		RXDNC setting				
BRG setting	Transfer clock [Hz]	00 (No noise rejection) 〈	01 (Reject pulses shorter than 31/fc[s] as noise)	10 (Reject pulses shorter than 63/fc[s] as noise)	11 (Reject pulses shorter than 127/fc[s] as noise)	
000	fc/13	0	0		-	
110	fc/8	0	· .	$(\vee/)$	-	
(When the transfer clock gen-	fc/16	04(	9/	<u>.</u>	-	
erated by INTTC3 is the same as the right side column)	fc/32	0	Q<	0	-	
The setting except the	above	(0)	0	// 0	0	

### **UART2 Status Register**

UART2SR 7 6 5 4 3 2 1 0 (Initial value: 0000 11\*\*)

	PERR	Parity error flag	(S; 1:	No parity error Parity error	
	FERR	Framing error flag	< >	No framing error Framing error	
^	ØERR	Overrun error flag		No overrun error Overrun error	Read
_	RBFL	Receive data buffer full flag		Receive data buffer empty Receive data buffer full	only
	TEND	Transmit end flag		On transmitting Transmit end	
	TBEP	Transmit data buffer empty flag		Transmit data buffer full (Transmit data writing is finished) Transmit data buffer empty	

Note: When an INTTXD is generated, TBEP flag is set to "1" automatically.

### **UART2** Receive Data Buffer

RD2BUF 7 6 5 4 3 2 1 0 Read only (0024H) (Initial value: 0000 0000)

13.2 Control TMP86FH92DMG

### **UART2** Transmit Data Buffer



TMP86FH92DMG

### 13.3 Transfer Data Format

In UART2, an one-bit start bit (Low level), stop bit (Bit length selectable at high level, by UART2CR1<STBT>), and parity (Select parity in UART2CR1<PE>; even- or odd-numbered parity by UART2CR1<EVEN>) are added to the transfer data. The transfer data formats are shown as follows.

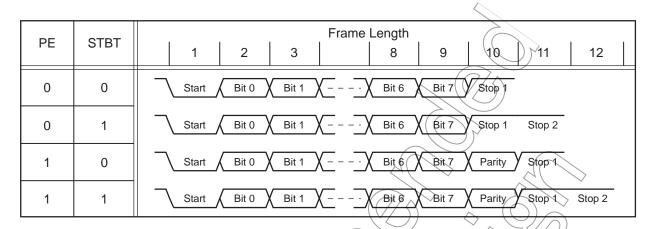


Figure 13-2 Transfer Data Format

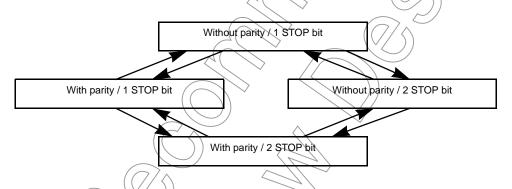


Figure 13-3 Caution on Changing Transfer Data Format

Note: In order to switch the transfer data format, perform transmit operations in the above Figure 13-3 sequence except for the initial setting.

13.4 Transfer Rate TMP86FH92DMG

### 13.4 Transfer Rate

The baud rate of UART2 is set of UART2CR1<BRG>. The example of the baud rate are shown as follows.

Table 13-1 Transfer Rate (Example)

DDC		Source Clock	
BRG	16 MHz	8 MHz	4 MHz
000	76800 [baud]	38400 [baud]	19200 [ <u>b</u> aud]
001	38400	19200	9600
010	19200	9600	4800
011	9600	4800	2400
100	4800	2400	1200
101	2400	1200	600

When TC3 is used as the UART2 transfer rate (when UART2CR1×BRG> = "110"), the transfer clock and transfer rate are determined as follows:

Transfer clock [Hz] = TC3 source clock [Hz] / TTREG3 setting value

Transfer Rate [baud] = Transfer clock [Hz] / 16

# 13.5 Data Sampling Method

The UART2 receiver keeps sampling input using the clock selected by UART2CR1<BRG> until a start bit is detected in RXD2 pin input. RT clock starts detecting "L" level of the RXD2 pin. Once a start bit is detected, the start bit, data bits, stop bit(s), and parity bit are sampled at three times of RT7, RT8, and RT9 during one receiver clock interval (RT clock). (RT0 is the position where the bit supposedly starts.) Bit is determined according to majority rule (The data are the same twice or more out of three samplings).

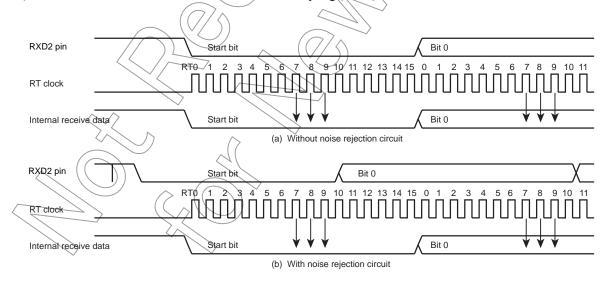


Figure 13-4 Data Sampling Method

TMP86FH92DMG

## 13.6 STOP Bit Length

Select a transmit stop bit length (1 bit or 2 bits) by UART2CR1<STBT>.

# 13.7 Parity

Set parity / no parity by UART2CR1<PE> and set parity type (Odd- or Even-numbered) by UART2CR1<EVEN>.

# 13.8 Transmit/Receive Operation

## 13.8.1 Data Transmit Operation

Set UART2CR1<TXE> to "1". Read UART2SR to check UART2SR<TBEP> = "1", then write data in TD2BUF (Transmit data buffer). Writing data in TD2BUF zero-clears UART2SR<TBEP>, transfers the data to the transmit shift register and the data are sequentially output from the TXD2 pin. The data output include a one-bit start bit, stop bits whose number is specified in UART2CR1</TBT> and a parity bit if parity addition is specified. Select the data transfer baud rate using UART2CR1</TBC>. When data transmit starts, transmit buffer empty flag UART2SR<TBEP> is set to "1" and an INTTXD2 interrupt is generated.

### 13.8.2 Data Receive Operation

Set UART2CR1<RXE> to "1". When data are received via the RXD2 pin, the receive data are transferred to RD2BUF (Receive data buffer). At this time, the data transmitted includes a start bit and stop bit(s) and a parity bit if parity addition is specified. When stop bit(s) are received, data only are extracted and transferred to RD2BUF (Receive data buffer). Then the receive buffer full flag UART2SR<RBFL> is set and an INTRXD2 interrupt is generated. Select the data transfer baud rate using UART2CR1<BRG>.

If an overrun error (OERR) occurs when data are received, the data are not transferred to RD2BUF (Receive data buffer) but discarded; data in the RD2BUF are not affected.

Note: When a receive operation is disabled by setting UART2CR1<RXE> bit to "0", the setting becomes valid when data receive is completed. However, if a framing error occurs in data receive, the receive-disabling setting may not become valid. If a framing error occurs, be sure to perform a re-receive operation.

13.9 Status Flag TMP86FH92DMG

# 13.9 Status Flag

### 13.9.1 Parity Error

When parity determined using the receive data bits differs from the received parity bit, the parity error flag UART2SR<PERR> is set to "1". The UART2SR<PERR> is cleared to "0" when the RD2BUF is read after reading the UART2SR.

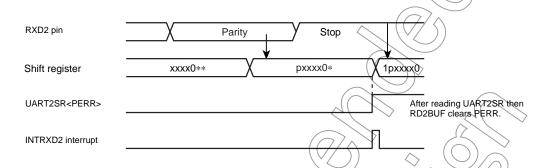


Figure 13-5 Generation of Parity Error

## 13.9.2 Framing Error

When "0" is sampled as the stop bit in the receive data, framing error flag UART2SR<FERR> is set to "1". The UART2SR<FERR> is cleared to "0" when the RD2BUF is read after reading the UART2SR.

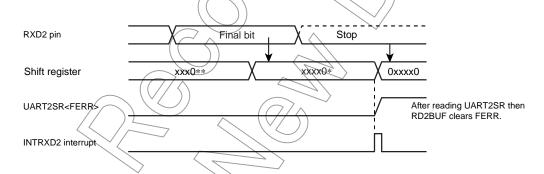


Figure 13-6 Generation of Framing Error

### 13.9.3 Overrun Error

When all bits in the next data are received while unread data are still in RD2BUF, overrun error flag UART2SR<OERR> is set to "1". In this case, the receive data is discarded; data in RD2BUF are not affected. The UART2SR<OERR> is cleared to "0" when the RD2BUF is read after reading the UART2SR.

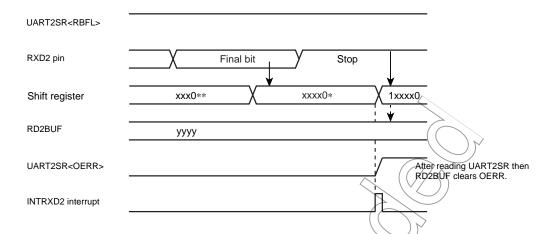


Figure 13-7 Generation of Overrun Error

Note: Receive operations are disabled until the overrun error flag UART2SR<OERR> is cleared.

#### 13.9.4 Receive Data Buffer Full

Loading the received data in RD2BUF sets receive data buffer full flag UART2SR<RBFL> to "1". The UART2SR<RBFL> is cleared to "0" when the RD2BUF is read after reading the UART2SR.

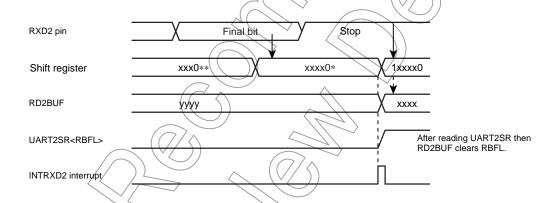


Figure 13-8 Generation of Receive Data Buffer Full

Note: If the overrun error flag UART2SR<OERR> is set during the period between reading the UART2SR and reading the RD2BUF, it cannot be cleared by only reading the RD2BUF. Therefore, after reading the RD2BUF, read the UART2SR again to check whether or not the overrun error flag which should have been cleared still remains set.

# 13.9.5 Transmit Data Buffer Empty

When no data is in the transmit buffer TD2BUF, that is, when data in TD2BUF are transferred to the transmit shift register and data transmit starts, transmit data buffer empty flag UART2SR<TBEP> is set to "1". The UART2SR<TBEP> is cleared to "0" when the TD2BUF is written after reading the UART2SR.

13.9 Status Flag TMP86FH92DMG

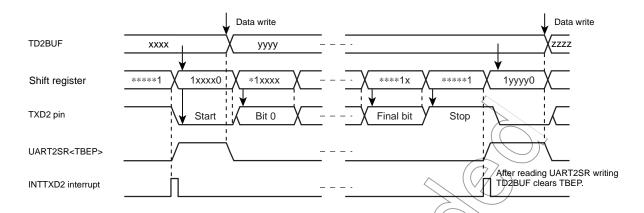


Figure 13-9 Generation of Transmit Data Buffer Empty

### 13.9.6 Transmit End Flag

When data are transmitted and no data is in TD2BUF (UART2SR<TBEP) = "V"), transmit end flag UART2SR<TEND> is set to "1". The UART2SR<TEND is cleared to "0" when the data transmit is started after writing the TD2BUF.


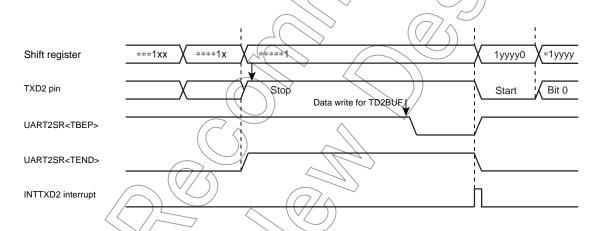


Figure 13-10 Generation of Transmit End Flag and Transmit Data Buffer Empty

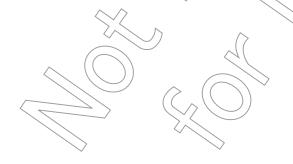

TOSHIBA TMP86FH92DMG

# Serial Expansion Interface (SEI)

SEI is one of the serial interfaces incorporated in the TMP86FH92DMG. It allows connection to peripheral devices via full-duplex synchronous communication protocols. The TMP86FH92DMG contain one channel of SEI.

SEI is connected with an external device through SCLK, MOSI, MISO and the ferminal  $\overline{SS}$ . SCLK, MOSI, MISO, and  $\overline{SS}$  pins respectively are shared with P02, P03, P04 and P05. When using these ports as SCLK, MOSI, MISO, or  $\overline{SS}$  pins, set the each Port Output Latch to "1".

### 14.1 Features

- The master outputs the shift clock for only a data transfer period,
- The clock polarity and phase are programmable.
- The data is 8 bits long.
- · MSB or LSB-first can be selected.
- The programmable data and clock timing of SEI can be connected to almost all synchronous serial peripheral devices. Refer to ""14.5 SEI Transfer Formats"
- The transfer rate can be selected from the following four (master only):
  - 4 Mbps, 2 Mbps, 1 Mbps, or 250 kbps (when operating at 16 MHz)
- The error detection circuit supports the following functions:
  - 1. Write collision detection: When the shift register is accessed for write during transfer
  - 2. Overflow detection: When new data is received while the transfer-finished flag is set (slave only)
  - 3. Mode fault error input: When the SEI device is set as the master, driver output is disabled immediately upon input of a low level on the SS pin (in open-drain output mode only). Overflow detection: When new data is received while the transfer-finished flag is set (slave only)


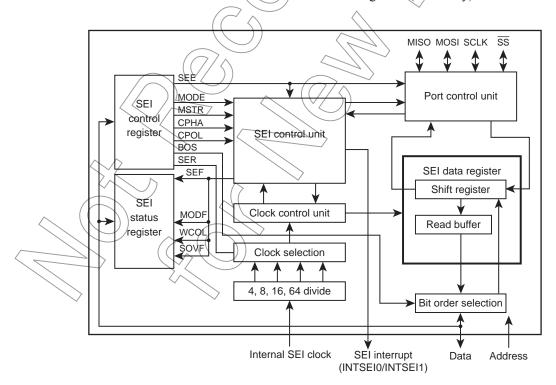


Figure 14-1 SEI (Serial Extended Interface)

4.2 SEI Registers TMP86FH92DMG

# 14.2 SEI Registers

The SEI interface has the SEI Control Register (SECR), SEI Status Register (SESR), and SEI Data Register (SEDR) which are used to set up the SEI system and enable/disable SEI operation.



Read-modify-write instruction are prohibited.

MODE	Mode fault detection (Note1)	0: Enables mode fault detection 1: Disables mode fault detection It is available in Master mode only. (Note: Make sure to set <mode> bit to "1" for disabling Mode fault detection</mode>	
SEE	SEI operation (Note2)	0: Disables SEI operation 1: Enables SEI operation	
BOS	Bit order selection	O: Transmitted beginning with the MSB (bit 7) of SEDR register  1: Transmitted beginning with the LSB (bit 0) of SEDR register	
MSTR	Mode selection (Note3)	0: Sets SEI for slave 1: Sets SEI for master	R/W
CPOL	Clock polarity	Selects active-"H" clock. SCLK remains "L" when IDLE.     Selects active-"L" clock. SCLK remains "H" when IDLE.	
СРНА	Clock phase	Selects clock phase. For details, refer to Section "SEI Transfer Formats".	
SER	Selects SEI transfer rate	00: Divide-by-4 01: Divide-by-8 10: Divide-by-16 11: Divide-by-64	

Note 1: If mode fault detection is enabled, an interrupt is generated when the MODF flag (SESR<MODF>) is set.

Note 2: SEI operation can only be disabled after transfer is completed. Before the SEI can be used, the each Port Control Register and Output Latch Control must be set for the SEI function (In case P0 port, P0OUTCR and P0DR).

When using the SEI as the master, set the SECR<SEE> bit to "1" (to enable SEI operation) and then place transmit data in the SEDR register. This initiates transmission/reception.

Note 3: Master/slave settings must be made before enabling SEI operation (This means that the SECR<MSTR> bit must first be set before setting the SECR<SEE> bit to "1").

## 14.2.1.1 Transfer rate

(1) Master mode (Transfer rate = fc/Internal clock divide ratio (unit: bps))

The table below shows the relationship between settings of the SER bit and transfer bit rates when the SEI is operating as the master.

Table 14-1 SEI Transfer Rate

SER	Internal Clock Divide Ratio of SEI	Transfer Rate when fc = 16 MHz
00	4	4 Mbps
01	8	2 Mbps
10	16	1 Mbps
11	64	250 kbps

#### (2) Slave mode

When the SEI is operating as a slave, the serial clock is input from the master and the setting of the SER bit has no effect. The maximum transfer rate is fc/4.

Note: Take note of the following relationship between the serial clock speed and fc on the master side:

15.625 kbps < Transfer rate < fc/4 bps

Example) 15.625 kbps < Transfer rate < 4 Mbps (fc = 16 MHz at V<sub>DD</sub> = 4.5 to 5.5 V)

15.625 kbps < Transfer rate < 2 Mbps (fc = 8 MHz at  $V_{DD}$  = 2.7 to 5.5  $V_{DD}$ 

## 14.2.2 SEI Status Register (SESR)

7 6 5 4 3 2 1 0

SESR SEF WCOL SOVF MODF (Initial value: 0000\*\*\*\*

SEF	Transfer-finished flag (Note1)	0. Transfer in progress 1: Transfer completed	
WCOL	Write collision error flag (Note2)	No write collision error occurred     Write collision error occurred	Donad amb
SOVF	Overflow error flag (slave) (Note3)	0: No overflow occurred 1: Overflow occurred	Read only
MODF	Mode fault flow error flag (master) (Note4)	0: No mode fault occurred 1: Mode fault occurred	

- Note 1: The SEF flag is automatically set at completion of transfer. The SEF flag thus set is automatically cleared by reading the SESR register and accessing the SEDR register.
- Note 2: The WCOL flag is automatically set by a write to the SEDR register while transfer is in progress. Writing to the SEDR register during transfer has no effect. The WCOL flag thus set is automatically cleared by reading the SESR register and accessing the SEDR register. No interrupts are generated for reasons that the WCOL flag is set.
- Note 3: During master mode:

This bit does not function; its data when read is "0".

During slave mode:

The SOVF flag is automatically set when the device finishes reading the next data while the SEF flag is set. The SOVF flag thus set is automatically cleared by reading the SESR register and accessing the SEDR register. The SOVF flag also is cleared by a switchover to master mode. No interrupts are generated for reasons that the SOVF flag is set.

Note 4: Master mode:

The MODF flag is set when the  $\overline{\text{SS}}$  pin is driven low. At this time, the SEI performs the following operations:

- 1. Disables the SEI pin driver and sets the SCLK and MOSI pins as inputs in the high-impedance state.
- 2. Clears the SECR<MSTR> bit.
- 3. Forcefully clears the SECR<SEE> bit to disable the SEI system.
- 4 The MODF flag thus set is automatically cleared by a read of the SESR register and a write to the SECR register.

Slave mode:

This bit does not function; its data when read is 0.

### 14.2.3 SEI Data Register (SEDR)

The SEI Data Register (SEDR) is used to send and receive data. When the SEI is set for master, data transfer is initiated by writing to this SEDR register. If the master device needs to write to the SEDR register after transfer began, always check to see by means of an interrupt or by polling that the SEF flag (SESR<SEF>) is set, before writing to the SEDR register.

7 6 5 4 3 2 1 0

SEDR SED7 SED6 SED5 SED4 SED3 SED2 SED1 SED0 R/W (Initial value: 0000 0000) (0029H)

14.3 SEI Operation TMP86FH92DMG

# 14.3 SEI Operation

During a SEI transfer, data transmission (serial shift-out) and reception (serial shift-in) are performed simultaneously. The serial clock synchronizes the timing at which information on the two serial data lines are shifted or sampled. Slave device can be selected individually using the slave select pin (SS pin). For unselected slave devices, data on the SEI bus cannot be taken in.

When operating as the master devices, the  $\overline{SS}$  pin can be used to indicate multiple-master bus connection.

## 14.3.1 Controlling SEI clock polarity and phase

The SEI clock allows its phase and polarity to be selected in software from four combinations available by using two bits, CPHA and CPOL (SECR<CPHL,CPOL>).

The clock polarity is set by CPOL to select between active-high or active-low (The transfer format is unaffected).

The clock phase is set by CPHA. The master device and the slave devices to communicate with must have the same clock phase and polarity.

If multiple slave devices with different transfer formats exist on the same bus, the format can be changed to that of the slave device to which to transfer.

Table 14-2 Clock Phase and Polarity

СРНА	SEI control register (SECR 002AH) bit 2
CPOL	SEI control register (SECR 002AH) bit/3

## 14.3.2 SEI data and clock timing

The programmable data and clock-timing of SEI allows connection to almost all synchronous serial peripheral devices. Refer to Section "14.5 SEI Transfer Formats".

TMP86FH92DMG

#### 14.4 SEI Pin Functions

The TMP86FH92DMG have four input/output pins associated with SEI transfer. The functionality of each pin depends on the SEI device's mode (master or slave). The SCLK pin, MOSI pin and MISO pin of all SEI devices are connected with the same name pin to each other.

### 14.4.1 SCLK pin

The SCLK pin functions as an output pin when SEI is set for master, or as an input pin when SEI is set for slave.

When SEI is set for master, serial clock is output from the SCLK pin to external devices. After the master starts transfer, eight serial clock pulses are output from the SCLK pin only during transfer.

When SEI is set for slave, the SCLK pin functions as an input pin.

During data transfer between master and slave, device operation is synchronized by the serial clock output from the master.

When the SS pin of the slave device is "H", data is not taken in regardless of whether the serial clock is available.

For both master and slave devices, data is shifted in and out at a rising or falling edge of the serial clock, and is sampled at the opposite edge where the data is stable. The active edge is determined by SEI transfer protocols.

Note: Noise in a slave device's SCLK input may cause the device to operate erratically.

### 14.4.2 MISO/MOSI pins

The MISO and MOSI pins are used for serial data transmission reception. The status of each pin during master and slave are shown in the table below.

Table 14-3 MISO/MOSI Pin Status

	MISO	MOSI
Master	Input	Output
Slave	Output	Input

Also, the SCLK, MOSI, and MISO pins can be set for open-drain by the each pin's input/output control register (In case PO Port, Input/output Control Register is POOUTCR).

The MISO pin of a slave device becomes an output when the SECR<SEE> bit is set to 1 (SEI operation enabled). To set the MISO pin of an inactive slave device to a high-impedance state, clear the SECR<SEE> bit to 0.

### 14.4.3 SS pin

The SS pin function differently when the SEI is the master and when it is a slave.

- When the SEI is a slave, this pin is used to enable the SEI transmission/reception. When the slave's  $\overline{SS}$  pin is high, the slave device ignores the serial clock from the master. Nor does it receive data from the MISO pin. When the slave's  $\overline{SS}$  pin is L, the SEI operates as slave.
- When the SEI is the master, the  $\overline{SS}$  pin is used for SEI error input. When the  $\overline{SS}$  pin of the master device goes low, output is immediately disabled on the SCLK and MOSI pins if these pins are configured as open-drain outputs. This causes the SESR<MODF> flag of the master device to be set. This state is called a mode fault. The mode fault function is provided to prevent damage caused by a collision between drivers that may occur, for example, when another device on the same bus becomes the master.

14.5.1

5 SEI Transfer Formats TMP86FH92DMG

### 14.5 SEI Transfer Formats

The transfer formats are set using CPHA and CPOL (SECR<CPHA,CPOL>). CPHA allows transfer protocols to be selected between two.

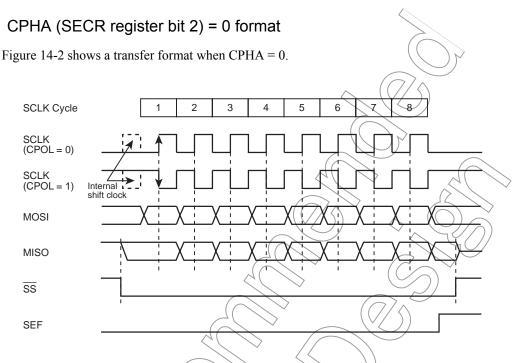


Figure 14-2 Transfer Format When CPHA = 0

Table 14-4 Transfer Format Details when CPHA = 0

SCLK Level when not Communicating (IDLE)	Data Shift	Data Sampling
CPOL = 0 "L" level	Falling edge of transfer clock	Rising edge of transfer clock
CPOL = 1 "H" tevel	Rising edge of transfer clock	Falling edge of transfer clock

• In master mode, transfer is initiated by writing new data to the SEDR register. At this time, the new data changes state on the MOSI pin a half clock period before the shift clock starts pulsing. Use BOS (SECR<BOS>) to select whether the data should be shifted out beginning with the MSB or LSB. The SEF flag (SESR<SEF>) is set after the last shift cycle.

In slave mode, writing data to the SEDR register is inhibited when the  $\overline{SS}$  pin is "L". A write during this period causes collision of writes, so that the WCOL flag (SESR<WCOL>) is set. Therefore, when writing data to the SEDR (SEI Data Register) after the SEF flag is set upon completion of transfer, make sure the  $\overline{SS}$  pin goes "H" again before writing the next data to the SEDR register.

Note: In slave mode, be careful not to write data while the SEF flag is set and the  $\overline{SS}$  pin remains "L".

### 14.5.2 CPHA = 1 format

Figure 14-3 shows a transfer format when CPHA = 1.

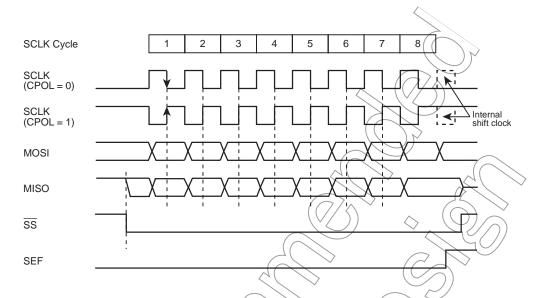


Figure 14-3 Transfer Format When CPHA =

Table 14-5 Transfer Format Details when CPHA = 1

	SCLK Level when Not Communicating (IDLE)	Data Shift	Data Sampling
CPOL=0	"L" level	Rising edge of transfer clock	Falling edge of transfer clock
CPOL=1	"H" level	Falling edge of transfer clock	Rising edge of transfer clock
CPOL=1	"H" level	Falling edge of transfer clock	Rising edge of transfer clock

- In master mode, transfer is initiated by writing new data to the SEDR register. The new data changes state on the MOSI pin at the first edge of the shift clock. Use BOS (SECR<BOS>) to select whether the data should be shifted out beginning with the MSB or LSB.
- In slave mode, unlike in the case of CPHA = 0 format, data can be written to the SEDR (SEI Data Register) regardless of whether the \$\overline{SS}\$ pin is "L" or "H". In both master and slave modes, the SEF flag (\$\overline{SESR} < \overline{SEF} >) is set after the last shift cycle. Writing data to the SEDR register while data transfer is in progress causes collision of writes. Therefore, wait until the SEF flag is set before writing new data to the SEDR register.

1.6 Functional Description TMP86FH92DMG

# 14.6 Functional Description

Figure 14-4 shows how the SEI master and slave are connected.

When the master device sends data from its MOSI pin to a slave device's MOSI pin, the slave device returns data from its MISO pin to the master device's MISO pin. This means that data are exchanged between master and slave via full-duplex communication, with data output and input operations synchronized by the same clock signal. After end of transfer, the transmit byte in 8 bit shift register is replaced with the receive byte.

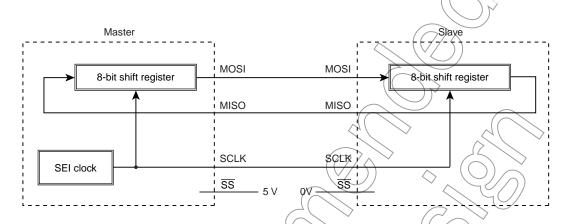


Figure 14-4 Master and Slave Connection in SEI

Figure 14-5 shows an example of how an SEI system can be configured. The general-purpose pins used for SEI transfer can be programmed to be open-drain outputs. This feature enables these pins to be connected with multiple devices. (We recommend using these pins in open-drain output mode.)

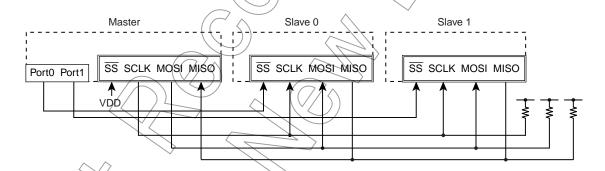


Figure 14-5 Example of SEI System Configuration (1 Master, 2 Slaves)

In this example, all the SCLK pins are interconnected, and all the MOSI and MISO pins are interconnected. One SEI device is set as the master and all the other SEI devices on the SEI bus are set as slaves. The master device sends data from its SCLK and MOSI pins to the SCLK and MOSI pins of a slave device.

The slave device selected by the master sends data from its MISO pin to the MISO pin of the master device.

## 14.7 Interrupt Generation

The TMP86FH92DMG is provided with the SEI interrupt channels 0 and 1 (INTSEI0 and INTSEI1) for processing SEI interrupts.

INTSEI0 generates an interrupt pulse when the SESR<MODF> flag is set. INTSEI1 generates an interrupt pulse when the SESR<SEF> flag is set.

Table 14-6 SEI Interrupt

SEI interrupt channe0 (INTSEI0)	Generates an interrupt pulse when the MODF flag is setl
SEI interrupt channel 1 (INTSEI1)	Generates an interrupt pulse when the SEF flag is setl

# 14.8 SEI System Errors

The SEI can detect the following three types of system errors:

- Mode fault error: A mode fault error occurs if the SS pin of the master device is driven low
- Write collision error: A write collision error occurs if data is written to the SEDR register while a transfer is in progress.
- Overflow error: An overflow error occurs if new data is received in a slave device before the previous data is read."

### 14.8.1 Write collision error

A write collision error occurs if an attempt is made to write to the SEDR register while data is being transferred. Because the SEDR register is not configured as dual-buffers for sending data, a write to the SEDR register directly results in writing to the SEI shift register. Therefore, writing to the SEDR register while a transfer is in progress causes a write collision error.

In no case is data transfer stopped in the middle, so that the write data which caused a write collision error will not be written to the shift register. Because slaves cannot control the timing at which the master starts a transfer, write collision errors normally occur on slave devices. The master has the right to perform a transfer at any time, and thus write collision errors do not normally occur on the master side. However, both master and slave SEI devices are capable of detecting write collision errors.

A write collision error tends to occur on a slave device when the master shifts out data at a speed faster than that at which the slave processes the transferred data. More specifically, a write collision error occurs if the slave transfers a new value to the SEDR register when the master has already started a shift cycle for the next byte.

#### 14.8.2 Overflow error

The transfer bit rate on the SEI bus is determined by the master. At higher bit rates, a slave device may not be able to keep up with transfer from the master. This occurs when the master shifts out data faster than can be processed by the slave. The SEI module uses the SESR<SOVF> flag to detect an overflow error.

The SOVF flag is set if the following conditions are both met:

- · When the SEI module is set as a slave
- · When the previous data byte remains to be read after a new data byte has been received

When the SOVF flag is set, the SEDR register is overwritten with a new data byte.

Note: Please carefully examine the communication processing routine and communication rate when designing your application system.

4.9 Bus Driver Protection TMP86FH92DMG

### 14.8.3 Mode fault error

When the SEI device is set as the master, a mode fault error occurs if the  $\overline{SS}$  pin is driven low. When a mode fault error occurs, the SEI immediately performs the following operations: The SOVF flag is set if the following conditions are both met:


- Clears the SECR<MSTR> bit to 0 to set the SEI device as a slave.
- Clears the SECR<SEE> bit to 0 to disable SEI operation.
- Sets the SESR<MODF> flag to 1 to generate an INTSEI0 interrupt pulse.
- Sets the SCLK and MOSI pins to output 1. (These pins become high-impedance in open-drain output mode, or high level in CMOS output mode.)

The SESR<MODF> flag thus set is automatically cleared by a read of the SESR register and a write to the SECR register. Once the SESR<MODF> flag is cleared, the mode setting can be made again.

When open-drain output mode is selected, this mode fault error function can be used to prevent the collision between the SCLK pin and MOSI pin drivers if two or more devices on the same bus are set as the master at the same time. (It is not possible to prevent the collision of the MISO pins if the SS pins of two or more slave devices on the same bus are simultaneously driven low.)

## 14.9 Bus Driver Protection

- One method to protect the device against latch-up due to collision of the bus drivers is the use of an open-drain option. This means changing the SEL pins' CMOS outputs to the open-drain type, which is accomplished by setting the SCLK, MOSI, and MISO pins for open-drain individually by using the each Port Input/output Control Register. In this case, these pins must be provided with pull-up resistors external to the chip.
- When using the SEI pins as CMOS outputs, we recommend connecting them to the bus via resistors in order to protect the device against collision of drivers. However, be sure to select the appropriate resistance value which will not affect actual device operation (Example:  $1 \Omega$  to several  $k\Omega$ ).

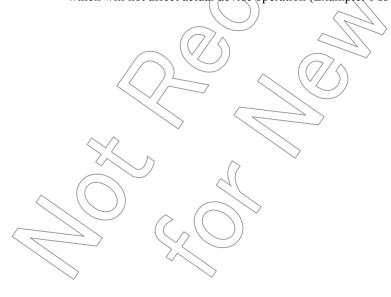

TOSHIBA TMP86FH92DMG

# 15. Serial Bus Interface(I<sup>2</sup>C Bus) Ver.-D (SBI)

The TMP86FH92DMG has a serial bus interface which employs an I<sup>2</sup>C bus.

The serial interface is connected to an external devices through SDA and SCL.

The serial bus interface pins are also used as the port. When used as serial bus interface pins, set the output latches of these pins to "1". When not used as serial bus interface pins, the port is used as a normal I/O port.

- Note 1: The serial bus interface can be used only in NORMAL1/2 and IDLE1/2 mode. It cannot be used in IDLE0, SLOW1/2 and SLEEP0/1/2 mode.
- Note 2: The serial bus interface can be used only in the Standard mode of I<sup>2</sup>C. The fast mode and the high-speed mode can not be used.
- Note 3: Please refer to the I/O port section about the detail of setting port.

#### Configuration 15.1 INTSBI interrupt request Input/ fc/4 → Divider øutput control Transfer control I<sup>2</sup>C bus Noise clock sysn canceller + Control I<sup>2</sup>C bus data Shift Noise control SDA register SDA I2CAR SBIDBR SBISRB SBISRA SBI control register B/ I2C bus SBI data SBI control register A/ SBI status register A address register buffer register Figure 15-1 Serial Bus Interface (SBI)

# 15.2 Control

The following registers are used for control the serial bus interface and monitor the operation status.

- Serial bus interface control register A (SBICRA)
- Serial bus interface control register B (SBICRB)
- Serial bus interface data buffer register (SBIDBR)
- I<sup>2</sup>C bus address register (I2CAR)
- Serial bus interface status register A (SBISRA)
- Serial bus interface status register B (SBISRB)

### 15.3 Software Reset


A serial bus interface circuit has a software reset function, when a serial bus interface circuit is locked by an external noise, etc.

To reset the serial bus interface circuit, write "10", "01" into the SWRST (Bit1, 0 in SBICRB).

And a status of software reset can be read from SWRMON (Bit0 in SBISRA).

# 15.4 The Data Format in the I<sup>2</sup>C Bus Mode

The data format of the I<sup>2</sup>C bus is shown below.

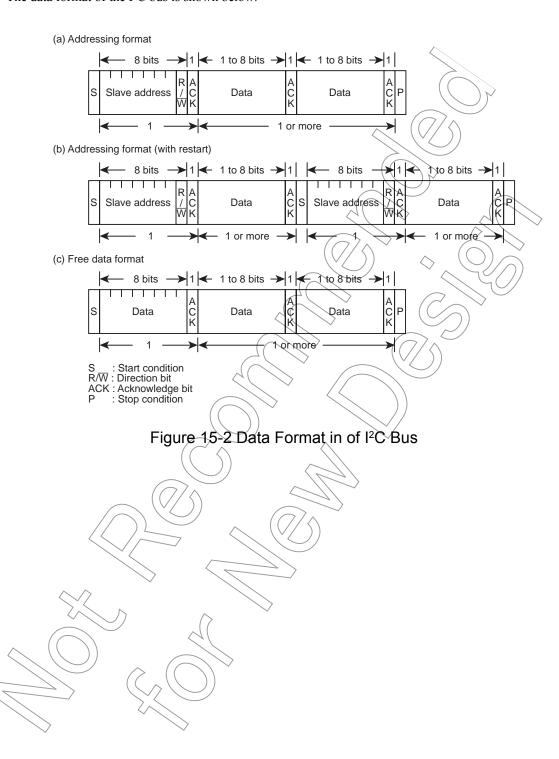

### 15.5 I<sup>2</sup>C Bus Control

The following registers are used to control the serial bus interface and monitor the operation status of the I<sup>2</sup>C bus.

### Serial Bus Interface Control Register A

SBICRA	7	6	5	4	3	2	1	0
(0015H)		ВС		ACK			SCK	(Initial value: 0000 *000)

			AC	(=0	(/ACK	(`= 1	
		ВС	Number of Clock	Bits	Number of Clock	Bits	
		000:	8	8	( 9 >	8	
		001:	1	1 _	2	1	
ВС	Number of transferred bits	010:	2	2	3	2	Write
		011:	3	3	4	3/	Oilly
		100:	4	47/	5	4	
		101:	5	(5/)	6	( )5)	
		110:	6	6	7 \	6//)/	
		111:	7	Z	8	7	
		ACK	Master mode		Slave mode		
ACK	Acknowledgement mode	0:	Not generate a clock pulse for an acknowledgement.		Not count a clock pulse for an acknowledgement.		R/W
	specification	1:	Generate a clock pulse for an acknowledgement.		Count a clock pulse for an acknowledgement.		
		SCK	10	At fc = 16 MHz	At fc = 8 MHz	At fc = 4 MHz	
		900:	4	Reserved	Reserved	100.0 kHz	
		001:	)) 5	Reserved	Reserved	55.6 kHz	
	Serial clock (fscl) selection	010:	6	Reserved	58.8 kHz	29.4 kHz	
SCK	(Output on SCL pin)	011;	7	60.6 kHz	30.3 kHz	15.2 kHz	Write only
	[fscl = 1/(2 <sup>n+1</sup> /fc + 8/fc)]	100:/	8	30.8 kHz	15.4 kHz	7.7 kHz	Offiny
	(7/4	101:	9 <	15,5 kHz	7.8 kHz	3.9 kHz	
		<i>)</i> 110:	10	7.8 kHz	3.9 kHz	1.9 kHz	
		111: ∠		Rese	erved		

Note 1: fc: High-frequency clock [Hz], \*: Don't care

Note 2: SBICRA cannot be used with any of read-modify-write instructions such as bit manipulation, etc.

Note 3: Do not set SCK as the frequency that is over 100 kHz.

### Serial Bus Interface Data Buffer Register

SBIDBR 6 5 4 3 2 1 0 (Initial value: \*\*\*\*\*\*\*\*\*) R/W

Note 1: For writing transmitted data, start from the MSB (Bit7).

Note 2: The data which was written into SBIDBR can not be read, since a write data buffer and a read buffer are independent in SBIDBR. Therefore, SBIDBR cannot be used with any of read-modify-write instructions such as bit manipulation, etc.

Note 3: \*: Don't care

### I<sup>2</sup>C bus Address Register

6 5 4 3 2 0 I2CAR (0017H) Slave address (Initial value: 0000 0000) ALS SA6 SA5 SA4 SA1 SA0 SA3 SA2

SA	Slave address selection		
ALS	Address recognition mode spec-	0: Slave address recognition	Write only
	ification	Non slave address recognition	. ,

Note 1: I2CAR is write-only register, which cannot be used with any of read-modify write instruction such as bit manipulation, etc.

Note 2: Do not set I2CAR to "00H" to avoid the incorrect response of acknowledgment in slave mode. (If "00H" is set to I2CAR as the Slave Address and a START Byte "01H" in I2C bus standard is received, the device detects slave address match.)

### Serial Bus Interface Control Register B

 SBICRB
 7
 6
 5
 4
 3
 2
 1
 0

 (0018H)
 MST
 TRX
 BB
 PIN
 SBIM
 SWRST1
 SWRST0
 (Initial value: 0001 0000)

MST	Master/slave selection	0: Slave 1: Master	
TRX	Transmitter/receiver selection	0: Receiver 1: Transmitter	
BB	Start/stop generation	0: Generate a stop condition when MST, TRX and PIN are "1" 1: Generate a start condition when MST, TRX and PIN are "1"	
PIN	Cancel interrupt service request	0: - (Can not clear this bit by a software) 1: Cancel interrupt service request	Write only
SBIM	Serial bus interface operating mode selection	00: Port mode (Serial bus interface output disable) 01: Reserved 10: I²C bus mode 11: Reserved	
SWRST1 SWRST0	Software reset start bit	Software reset starts by first writing "10" and next writing "01"	

- Note 1: Switch a mode to port after confirming that the bus is free.
- Note 2: Switch a mode to I<sup>2</sup>C bus mode after confining that the port is high level.
- Note 3: SBICRB has write-only register and must not be used with any of read-modify-write instructions such as bit manipulation,
- Note 4: When the SWRST (Bit1, 0 in SBICRB) is written to "10", "01" in I<sup>2</sup>C bus mode, software reset is occurred. In this case, the SBICRA, I2CAR, SBISRA and SBISRB registers are initialized and the bits of SBICRB except the SBIM (Bit3, 2 in SBICRB) are also initialized.

### Serial Bus Interface Status Register A

SBISRA 7 6 5 4 3 2 1 0
(0015H) SWRMON (Initial value: \*\*\*\* \*\*\*1)

	1		
SWRMON	Software reset monitor	0: During software reset	Read
	Software reset monitor	1: - (Initial value)	only

#### Serial Bus Interface Status Register B

SBIS	RB	7	6	5	4	3	2	1	0	_		
(0018	sH)	MST	TRX	BB	PIN	AL	AAS	AD0	LRB	(Initial value:	0001 0000	)
_			-									
	MST	Maste	r/slave selec	tion status	0:	Slave						
	IVIOT	monito	or		1:	Master						
	TRX	Trans	mitter/receive	er selection	0:	Receiver				<i>J)</i> ~		
	IKA	status	monitor		1:	Transmitter		,	$\bigcirc$			
	ВВ	Puo et	atus monitor		0:	Bus free			$(\vee /)$			
	ББ	Dus si	alus monitoi		1:	: Bus busy						
	PIN	Interru	ıpt service re	quests status	0:	0: Requesting interrupt service						
	FIIN	monito	or		1:	: Releasing interrupt service request						
	AL	Arbitro	Arbitration lost detection monitor			- 1					only	
	AL	Aibilia	alion iost det	ection monito		: Arbitration lost detected						
	AAS	Slave	address mat	ch detection	0:	-		$\overline{}$	/	14		
AAG		monitor			1:	Detect slave address match or "GENERAL CALL"						
	AD0	"GENERAL CALL" detection		0:	-			` <	74/)/			
	ADU	monito	or		1:	Detect "GE	NERAL CALI	L <b>"</b>				

0: Last receive bit is "0"

Last receive bit is "1"

## 15.5.1 Acknowledgement mode specification

Last received bit monitor

LRB

### 15.5.1.1 Acknowledgment mode (ACK = "1")

To set the device as an acknowledgment mode, the ACK (Bit4 in SBICRA) should be set to "1". When a serial bus interface circuit is a master mode, an additional clock pulse is generated for an acknowledge signal. In a slave mode, a clock is counted for the acknowledge signal.

In the master transmitter mode, the SDA pin is released in order to receive an acknowledge signal from the receiver during additional clock pulse cycle. In the master receiver mode, the SDA pin is set to low level generation an acknowledge signal during additional clock pulse cycle.

In a slave mode, when a received slave address matches to a slave address which is set to the I2CAR or when a "GENERAL CALL" is received, the SDA pin is set to low level generating an acknowledge signal. After the matching of slave address or the detection of "GENERAL CALL", in the transmitter, the SDA pin is released in order to receive an acknowledge signal from the receiver during additional clock pulse cycle. In a receiver, the SDA pin is set to low level generation an acknowledge signal during additional clock pulse cycle after the matching of slave address or the detection of "GENERAL CALL"

The Table 15-1 shows the SCL and SDA pins status in acknowledgment mode.

Table 15-1 SCL and SDA Pins Status in Acknowledgement Mode

Mode		Pin	Transmitter	Receiver	
		SCL	An additional clock pulse is generated.		
Master		SDA	Released in order to receive an acknowledge signal.  Set to low level generating at acknowledge signal		
		SCL	A clock is counted for the acknowledge signal.		
Slave	004	When slave address matches or a general call is detected	-	Set to low level generating an acknowledge signal.	
	After matching of slave address or general call		Released in order to receive an acknowledge signal.	Set to low level generating an acknowledge signal.	

15. Serial Bus Interface(I

15.5 I<sup>2</sup>C Bus Control TMP86FH92DMG

### 15.5.1.2 Non-acknowledgment mode (ACK = "0")

To set the device as a non-acknowledgement mode, the ACK (Bit4 in SBICRA) should be cleared to "0".

In the master mode, a clock pulse for an acknowledge signal is not generated.

In the slave mode, a clock for a acknowledge signal is not counted.

### 15.5.2 Number of transfer bits

The BC (Bits7 to 5 in SBICRA) is used to select a number of bits for next transmitting and receiving data.

Since the BC is cleared to "000" by a start condition, a slave address and direction bit transmissions are always executed in 8 bits. Other than these, the BC retains a specified value.


#### 15.5.3 Serial clock

#### 15.5.3.1 Clock source

The SCK (Bits2 to 0 in SBICRA) is used to select a maximum transfer frequency output from the SCL pin in the master mode.

Four or more machine cycles are required for both high and low levels of pulse width in the external clock which is input from SCL pin.

Note: Since the serial bus interface can not be used as the fast mode and the high-speed mode, do not set SCK as the frequency that is over 100 kHz.

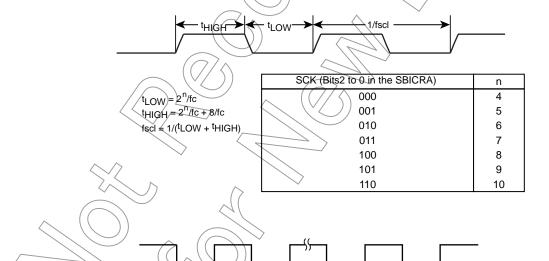

tSCKL, tSCKH > 4 tcyc

Note 1: fc = High-frequency clock

Note 2: tcyc = 4/fc (in NORMAL mode, IDLE mode)

Figure 15-3 Clock Source

#### 15.5.3.2 Clock synchronization

In the I<sup>2</sup>C bus, in order to drive a bus with a wired AND, a master device which pulls down a clock pulse to low will, in the first place, invalidate a clock pulse of another master device which generates a high-level clock pulse.

The serial bus interface circuit has a clock synchronization function. This function ensures normal transfer even if there are two or more masters on the same bus.

The example explains clock synchronization procedures when two masters simultaneously exist on a bus.

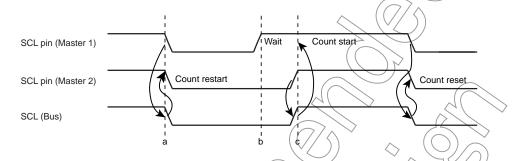


Figure 15-4 Clock Synchronization

As Master 1 pulls down the SCL pin to the low level at point "a" the SCL line of the bus becomes the low level. After detecting this situation, Master 2 resets counting a clock pulse in the high level and sets the SCL pin to the low level.

Master 1 finishes counting a clock pulse in the low level at point 'b' and sets the SCL pin to the high level. Since Master 2 holds the SCL line of the bus at the low level, Master 1 waits for counting a clock pulse in the high level. After Master 2 sets a clock pulse to the high level at point "c" and detects the SCL line of the bus at the high level, Master 1 starts counting a clock pulse in the high level. Then, the master, which has finished the counting a clock pulse in the high level, pulls down the SCL pin to the low level.

The clock pulse on the bus is determined by the master device with the shortest high-level period and the master device with the longest low-level period from among those master devices connected to the bus.

### 15.5.4 Slave address and address recognition mode specification

When the serial bus interface circuit is used with an addressing format to recognize the slave address, clear the ALS (Bit) in I2CAR) to "0", and set the SA (Bits7 to 1 in I2CAR) to the slave address.

When the serial bus interface circuit is used with a free data format not to recognize the slave address, set the ALS to "1". With a free data format, the slave address and the direction bit are not recognized, and they are processed as data from immediately after start condition.

### 15.5.5 Master/slave selection

To set a master device, the MST (Bit7 in SBICRB) should be set to "1". To set a slave device, the MST should be cleared to "0".

When a stop condition on the bus or an arbitration lost is detected, the MST is cleared to "0" by the hardware.

#### 15.5.6 Transmitter/receiver selection

To set the device as a transmitter, the TRX (Bit6 in SBICRB) should be set to "1". To set the device as a receiver, the TRX should be cleared to "0". When data with an addressing format is transferred in the slave mode, the TRX is set to "1" by a hardware if the direction bit  $(R/\overline{W})$  sent from the master device is "1", and is cleared

15.5 I<sup>2</sup>C Bus Control TMP86FH92DMG

to "0" by a hardware if the bit is "0". In the master mode, after an acknowledge signal is returned from the slave device, the TRX is cleared to "0" by a hardware if a transmitted direction bit is "1", and is set to "1" by a hardware if it is "0". When an acknowledge signal is not returned, the current condition is maintained.

When a stop condition on the bus or an arbitration lost is detected, the TRX is cleared to "0" by the hardware. "Table 15-2 TRX changing conditions in each mode" shows TRX changing conditions in each mode and TRX value after changing

Table 15-2 TRX changing conditions in each mode

	Mode	Direction Bit	Conditions	TRX after Changing
Ī	Slave	"0"	A received slave address is the	("0")
ı	Mode	"1"	same value set to I2CAR	"1"
I	Master	aster "0"	AOK discribing to and	)"1"
١	Mode	"1"	ACK signal is returned	"0"

When a serial bus interface circuit operates in the free data format, a slave address and a direction bit are not recognized. They are handled as data just after generating a start condition. The TRX is not changed by a hardware.

### 15.5.7 Start/stop condition generation

When the BB (Bit5 in SBISRB) is "0", a slave address and a direction bit which are set to the SBIDBR are output on a bus after generating a start condition by writing "1" to the MST, TRX, BB and PIN. It is necessary to set ACK to "1" beforehand.




Figure 15-5 Start Condition Generation and Slave Address Generation

When the BB is "1", sequence of generating a stop condition is started by writing "1" to the MST, TRX and PIN, and "0" to the BB. Do not modify the contents of MST, TRX, BB and PIN until a stop condition is generated on a bus.

When a stop condition is generated and the SCL line on a bus is pulled-down to low level by another device, a stop condition is generated after releasing the SCL line.




Figure 15-6 Stop Condition Generation

The bus condition can be indicated by reading the contents of the BB (Bit5 in SBISRB). The BB is set to "1" when a start condition on a bus is detected (Bus Busy State) and is cleared to "0" when a stop condition is detected (Bus Free State).

#### 15.5.8 Interrupt service request and cancel

When a serial bus interface circuit is in the master mode and transferring a number of clocks set by the BC and the ACK is complete, a serial bus interface interrupt request (INTSBI) is generated.

In the slave mode, the conditions of generating INTSBI interrupt request are follows:

- At the end of acknowledge signal when the received slave address matches to the value set by the I2CAR
- At the end of acknowledge signal when a "GENERAL CALL" is received.
- At the end of transferring or receiving after matching of slave address or receiving of "GENERAL CALL"

When a serial bus interface interrupt request occurs, the PIN (Bit4 in SBISRB) is cleared to "0". During the time that the PIN is "0", the SCL pin is pulled-down to low level.

Either writing data to SBIDBR or reading data from the SBIDBR sets the PIN to "1".

The time from the PIN being set to "1" until the SCL pin is released takes t<sub>LOW</sub>.

Although the PIN (Bit4 in SBICRB) can be set to "1" by the software, the PIN can not be cleared to "0" by the software.

Note: When the arbitration lost occurs, if the slave address sent from the other master devices is not match, the INTSBI interrupt request is generated. But the PIN is not cleared.

### 15.5.9 Setting of I<sup>2</sup>C bus mode

The SBIM (Bit3 and 2 in SBICRB) is used to set I<sup>2</sup>C bus mode.

Set the SBIM to "10" in order to set 1°C bus mode. Before setting of 1°C bus mode, confirm serial bus interface pins in a high level, and then, write "10" to SBIM. And switch a port mode after confirming that a bus is free.

# 15.5.10 Arbitration lost detection monitor

Since more than one master device can exist simultaneously on a bus, a bus arbitration procedure is implemented in order to guarantee the contents of transferred data.

Data on the SDA line is used for bus arbitration of the I<sup>2</sup>C bus.

The following shows an example of a bus arbitration procedure when two master devices exist simultaneously on a bus. Master 1 and Master 2 output the same data until point "a". After that, when Master 1 outputs "1" and Master 2 outputs "0", since the SDA line of a bus is wired AND, the SDA line is pulled-down to the low level by Master 2. When the SCL line of a bus is pulled-up at point "b", the slave device reads data on the SDA line, that is data in Master 2. Data transmitted from Master 1 becomes invalid. The state in Master 1 is called "arbitration lost". A master device which loses arbitration releases the SDA pin and the SCL pin in order not to effect data transmitted from other masters with arbitration. When more than one master sends the same data at the first word, arbitration occurs continuously after the second word.

15.5 I<sup>2</sup>C Bus Control TMP86FH92DMG

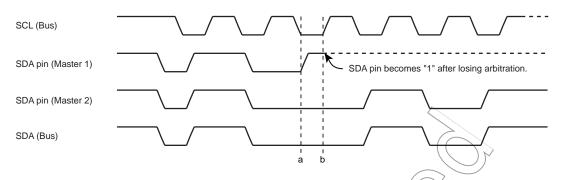


Figure 15-7 Arbitration Lost

The serial bus interface circuit compares levels of a SDA line of a bus with its SDA pin at the rising edge of the SCL line. If the levels are unmatched, arbitration is lost and the AL (Bit3 in SBISRB) is set to "1".

When the AL is set to "1", the MST and TRX are cleared to "0" and the mode is switched to a slave receiver mode. Thus, the serial bus interface circuit stops output of clock pulses during data transfer after the AL is set to "1".

The AL is cleared to "0" by writing data to the SBIDBR reading data from the SBIDBR or writing data to the SBICRB.

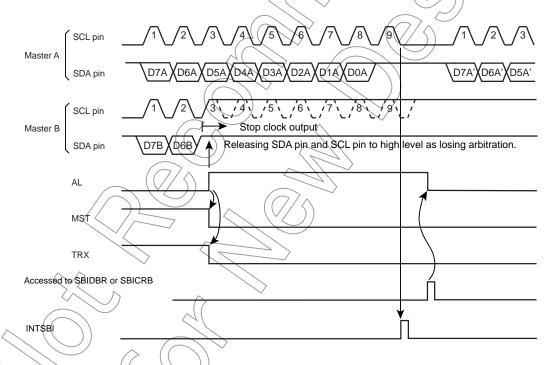


Figure 15-8 Example of when a Serial Bus Interface Circuit is a Master B

### 15.5.11 Slave address match detection monitor

In the slave mode, the AAS (Bit2 in SBISRB) is set to "1" when the received data is "GENERAL CALL" or the received data matches the slave address setting by I2CAR with an address recognition mode (ALS = 0).

When a serial bus interface circuit operates in the free data format (ALS = 1), the AAS is set to "1" after receiving the first 1-word of data.

The AAS is cleared to "0" by writing data to the SBIDBR or reading data from the SBIDBR.

### 15.5.12 GENERAL CALL detection monitor

The AD0 (Bit1 in SBISRB) is set to "1" when all 8-bit received data is "0" immediately after a start condition in a slave mode. The AD0 is cleared to "0" when a start or stop condition is detected on a bus.

### 15.5.13 Last received bit monitor

The SDA line value stored at the rising edge of the SCL line is set to the LRB (Bit0 in SBISRB). In the acknowledge mode, immediately after an INTSBI interrupt request is generated, an acknowledge signal is read by reading the contents of the LRB.

### 15.6 Data Transfer of I<sup>2</sup>C Bus

#### 15.6.1 Device initialization

For initialization of device, set the ACK in SBICRA to "1" and the BC to "000". Specify the data length to 8 bits to count clocks for an acknowledge signal. Set a transfer frequency to the SCK in SBICRA.

Next, set the slave address to the SA in I2CAR and clear the ALS to "0" to set an addressing format.

After confirming that the serial bus interface pin is high level, for specifying the default setting to a slave receiver mode, clear "0" to the MST, TRX and BB in SBICRB, set "1" to the PIN, "10" to the SBIM, and "00" to bits SWRST1 and SWRST0.

Note: The initialization of a serial bus interface circuit must be complete within the time from all devices which are connected to a bus have initialized to and device does not generate a start condition. If not, the data can not be received correctly because the other device starts transferring before an end of the initialization of a serial bus interface circuit.

### 15.6.2 Start condition and slave address generation

Confirm a bus free status (BB  $\neq 0$ ).

Set the ACK to "17 and specify a slave address and a direction bit to be transmitted to the SBIDBR.

By writing "1" to the MST, TRX, BB and PIN, the start condition is generated on a bus and then, the slave address and the direction bit which are set to the SBIDBR are output. The time from generating the START condition until the falling SCL pin takes thou

An INTSBI interrupt request occurs at the 9th falling edge of a SCL clock cycle, and the PIN is cleared to "0". The SCL pin is pulled-down to the low level while the PIN is "0". When an interrupt request occurs, the TRX changes by the hardware according to the direction bit only when an acknowledge signal is returned from the slave device.

Note 1: Do not write a slave address to be output to the SBIDBR while data is transferred. If data is written to the SBIDBR, data to been outputting may be destroyed.

Note 2: The bus free must be confirmed by software within 98.0 µs (The shortest transmitting time according to the I<sup>2</sup>C bus standard) after setting of the slave address to be output. Only when the bus free is confirmed, set "1" to the MST, TRX, BB, and PIN to generate the start conditions. If the writing of slave address and setting of MST, TRX, BB and PIN doesn't finish within 98.0 µs, the other masters may start the transferring and the slave address data written in SBIDBR may be broken.

Data Transfer of I<sup>2</sup>C Bus

TMP86FH92DMG

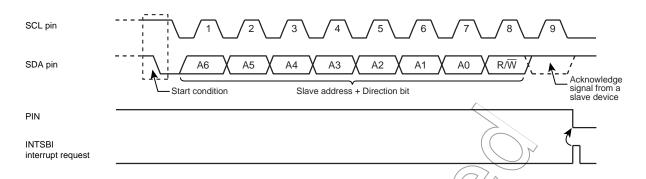


Figure 15-9 Start Condition Generation and Slave Address Transfer

#### 15.6.3 1-word data transfer

Check the MST by the INTSBI interrupt process after an 1-word data transfer is completed, and determine whether the mode is a master or slave.

### 15.6.3.1 When the MST is "1" (Master mode)

Check the TRX and determine whether the mode is a transmitter or receiver.

### (1) When the TRX is "1" (Transmitter mode)

Test the LRB. When the LRB is "1", a receiver does not request data. Implement the process to generate a stop condition (Described later) and terminate data transfer.

When the LRB is "0", the receiver requests next data. When the next transmitted data is other than 8 bits, set the BC, set the ACK to "1", and write the transmitted data to the SBIDBR. After writing the data, the PIN becomes "1", a serial clock pulse is generated for transferring a next 1 word of data from the SCL pin, and then the 1 word of data is transmitted. After the data is transmitted, and an INTSBI interrupt request occurs. The PIN become "0" and the SCL pin is set to low level. If the data to be transferred is more than one word in length, repeat the procedure from the LRB test above.

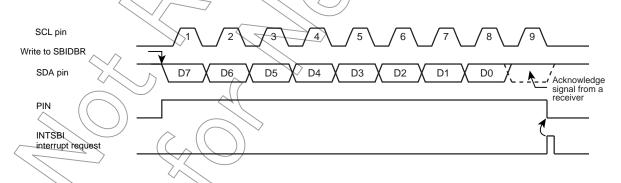


Figure 15-10 Example of when BC = "000", ACK = "1"

#### (2) When the TRX is "0" (Receiver mode)

When the next transmitted data is other than of 8 bits, set the BC again. Set the ACK to "1" and read the received data from the SBIDBR (Reading data is undefined immediately after a slave address is sent). After the data is read, the PIN becomes "1". A serial bus interface circuit outputs a serial clock pulse to the SCL pin to transfer next 1-word of data and sets the SDA pin to "0" at the acknowledge signal timing.

An INTSBI interrupt request occurs and the PIN becomes "0". Then a serial bus interface circuit outputs a clock pulse for 1-word of data transfer and the acknowledge signal each time that received data is read from the SBIDBR.

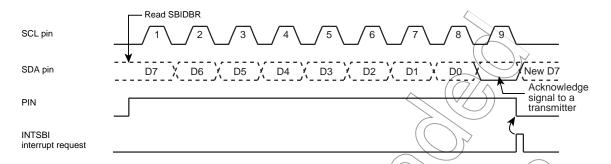


Figure 15-11 Example of when BC = "000", ACK = "1"

To make the transmitter terminate transmit, clear the ACK to "0" before reading data which is 1-word before the last data to be received. A serial bus interface circuit does not generate a clock pulse for the acknowledge signal by clearing ACK. In the interrupt routine of end of transmission, when the BC is set to "001" and read the data, PIN is set to "1" and generates a clock pulse for a 1-bit data transfer. In this case, since the master device is a receiver, the SDA line on a bus keeps the high-level. The transmitter receives the high-level signal as an ACK signal. The receiver indicates to the transmitter that data transfer is complete.

After 1-bit data is received and an interrupt request has occurred, generate the stop condition to terminate data transfer.

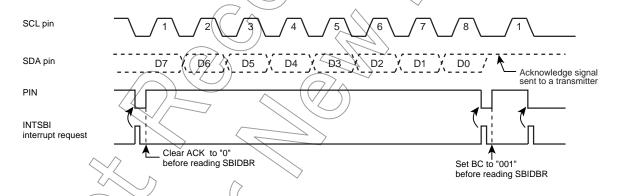


Figure 15-12 Termination of Data Transfer in Master Receiver Mode

#### 15.6.3.2 When the MST is "0" (Stave mode)

In the slave mode, a serial bus interface circuit operates either in normal slave mode or in slave mode after losing arbitration.

In the slave mode, the conditions of generating INTSBI interrupt request are follows:

- At the end of acknowledge signal when the received slave address matches to the value set by the I2CAR
- · At the end of acknowledge signal when a "GENERAL CALL" is received
- At the end of transferring or receiving after matching of slave address or receiving of "GENERAL CALL"

15.6 Data Transfer of I2C Bus

A serial bus interface circuit changes to a slave mode if arbitration is lost in the master mode. And an INTSBI interrupt request occurs when word data transfer terminates after losing arbitration. The behavior of INTSBI interrupt request and PIN after losing arbitration are shown in Table 15-3.

Table 15-3 The Behavior of INTSBI interrupt request and PIN after Losing Arbitration

	When the Arbitration Lost Occurs during Transmission of Slave Address as a Master	When the Arbitration Lost Occurs during Transmission of Data as a Master Transmit Mode
INTSBI in- terrupt re- quest	ted at the termination of word data.	
PIN	When the slave address matches the value set by I2CAR, the PIN is cleared to "0" by generating of INTSBI interrupt request. When the slave address doesn't match the value set by I2CAR, the PIN keeps "1".	PIN keeps "1" (PIN is not cleared to "0").

When an INTSBI interrupt request occurs, the PIN (bit 4 in the SBICRB) is reset, and the SCL pin is set to low level. Either reading or writing from or to the SBIDBR or setting the PIN to "1" releases the SCL pin after taking t<sub>LOW</sub>.

Check the AL (Bit3 in the SBISRB), the TRX (Bit6 in the SBISRB), the AAS (Bit2 in the SBISRB), and the AD0 (Bit1 in the SBISRB) and implements processes according to conditions listed in "Table 15-4 Operation in the Slave Mode".

Table 15-4 Operation in the Slave Mode

	TRX	AL	AAS	AD0	Conditions	Process
		1	1	0	A serial bus interface circuit loses arbitration when transmitting a slave address. And receives a slave address of which the value of the direction bit sent from another master (s "1".	Set the number of bits in 1 word to the BC and write transmitted data to the SBIDBR.
	1	1	1	0/	In the slave receiver mode, a serial bus in- terface circuit receives a slave address of which the value of the direction bit sent from the master is "1".	and write transmitted data to the ODIDDIN.
		0 <	0	0	In the slave transmitter mode, 1-word data is transmitted.	Test the LRB. If the LRB is set to "1", set the PIN to "1" since the receiver does not request next data. Then, clear the TRX to "0" to release the bus. If the LRB is set to "0", set the number of bits in 1 word to the BC and write transmitted data to the SBIDBR since the receiver requests next data.
4			1	1/0	A serial bus interface circuit loses arbitration when transmitting a slave address. And receives a slave address of which the value of the direction bit sent from another master is "0" or receives a "GENERAL CALL".	Read the SBIDBR for setting the PIN to "1" (Reading dummy data) or write "1" to the PIN.
//			0	0	A serial bus interface circuit loses arbitra- tion when transmitting a slave address or data. And terminates transferring word da- ta.	A serial bus interface circuit is changed to slave mode. To clear AL to "0", read the SBIDBR or write the data to SBIDBR.
	0	0	1	1/0	In the slave receiver mode, a serial bus interface circuit receives a slave address of which the value of the direction bit sent from the master is "0" or receives "GENERAL CALL".	Read the SBIDBR for setting the PIN to "1" (Reading dummy data) or write "1" to the PIN.
			0	1/0	In the slave receiver mode, a serial bus interface circuit terminates receiving of 1-word data.	Set the number of bits in 1-word to the BC and read received data from the SBIDBR.

Note: In the slave mode, if the slave address set in I2CAR is "00H", a START Byte "01H" in I2C bus standard is received, the device detects slave address match and the TRX is set to "1".

### 15.6.4 Stop condition generation

When the BB is "1", a sequence of generating a stop condition is started by setting "1" to the MST, TRX and PIN, and clear "0" to the BB. Do not modify the contents of the MST, TRX, BB, PIN until a stop condition is generated on a bus.

When a SCL line on a bus is pulled-down by other devices, a serial bus interface circuit generates a stop condition after they release a SCL line.

The time from the releasing SCL line until the generating the STOP condition takes thow.

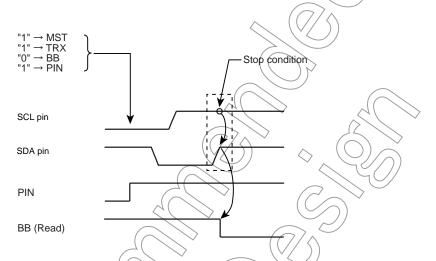


Figure 15-13 Stop Condition Generation

#### 15.6.5 Restart

Restart is used to change the direction of data transfer between a master device and a slave device during transferring data. The following explains how to restart a serial bus interface circuit.

Clear "0" to the MST, TRX and BB and set "1" to the PIN. The SDA pin retains the high-level and the SCL pin is released. Since a stop condition is not generated on a bus, a bus is assumed to be in a busy state from other devices. Test the BB until it becomes "0" to check that the SCL pin of a serial bus interface circuit is released. Test the LRB until it becomes "1" to check that the SCL line on a bus is not pulled-down to the low level by other devices. After confirming that a bus stays in a free state, generate a start condition with procedure "15.6.2 Start condition and slave address generation".

In order to meet setup time when restarting, take at least 4.7 µs of waiting time by software from the time of restarting to confirm that a bus is free until the time to generate a start condition.

Note: When the master is in the receiver mode, it is necessary to stop the data transmission from the slave device before the STOP condition is generated. To stop the transmission, the master device make the slave device receiving a negative acknowledge. Therefore, the LRB is "1" before generating the Restart and it can not be confirmed that SCL line is not pulled-down by other devices. Please confirm the SCL line state by reading the port.

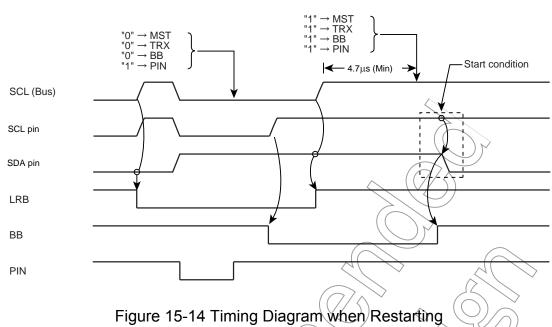


Figure 15-14 Timing Diagram when Restarting

TOSHIBA TMP86FH92DMG


# 16. 10-bit AD Converter (ADC)

The TMP86FH92DMG have a 10-bit successive approximation type AD converter.

# 16.1 Configuration

The circuit configuration of the 10-bit AD converter is shown in Figure 16-1.

It consists of control register ADCCR1 and ADCCR2, converted value register ADCDR1 and ADCDR2, a DA converter, a sample-hold circuit, a comparator, and a successive comparison circuit.

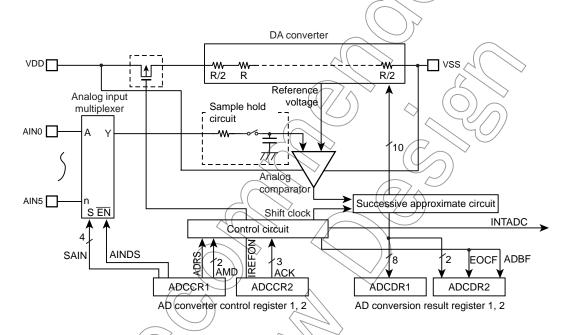

Note: Before using AD converter, set appropriate value to I/O port register combining a analog input port. For details, see the section on "I/O ports":

Figure 16-1 10-bit AD Converter

Register configuration TMP86FH92DMG

# 16.2 Register configuration

The AD converter consists of the following four registers:

1. AD converter control register 1 (ADCCR1)

This register selects the analog channels and operation mode (Software start or repeat) in which to perform AD conversion and controls the AD converter as it starts operating.

2. AD converter control register 2 (ADCCR2)

This register selects the AD conversion time and controls the connection of the DA converter (Ladder resistor network).

3. AD converted value register 1 (ADCDR1)

This register used to store the digital value after being converted by the AD converter.

4. AD converted value register 2 (ADCDR2)

This register monitors the operating status of the AD converter.

#### AD Converter Control Register 1

ADCCR1 7 6 5 4 3 2 1 0 (000EH) ADRS AMD AINDS SAIN (Initial value: 0001 0000)

ADRS	AD conversion start	0: - AD conversion start	
AMD	AD operating mode	00: AD operation disable 01: Software start mode 10: Reserved 11: Repeat mode	
AINDS	Analog input control	O: Analog input enable  1: Analog input disable	
<		0000: AIN0 0001: AIN1 0010: AIN2 0011: AIN3 0100: AIN4 0101: AIN5	R/W
SAIN	Analog input channel select	0110: Reserved 0111: Reserved 1000: Reserved 1001: Reserved	
		1010: Reserved 1011: Reserved 1100: Reserved 1101: Reserved 1101: Reserved 1110: Reserved	
		1111: Reserved	

- Note 1: Select analog input channel during AD converter stops (ADCDR2<ADBF> = "0").
- Note 2: When the analog input channel is all use disabling, the ADCCR1<AINDS> should be set to "1".
- Note 3: During conversion, Do not perform port output instruction to maintain a precision for all of the pins because analog input port use as general input port. And for port near to analog input, Do not input intense signaling of change.
- Note 4: The ADCCR1<ADRS> is automatically cleared to "0" after starting conversion.
- Note 5: Do not set ADCCR1<ADRS> newly again during AD conversion. Before setting ADCCR1<ADRS> newly again, check ADCDR2<EOCF> to see that the conversion is completed or wait until the interrupt signal (INTADC) is generated (e.g., interrupt handling routine).
- Note 6: After STOP or SLOW/SLEEP mode are started, AD converter control register1 (ADCCR1) is all initialized and no data can be written in this register. Therefore, to use AD converter again, set the ADCCR1 newly after returning to NORMAL1 or NORMAL2 mode.

#### AD Converter Control Register 2

ADCCR2 7 6 5 4 3 2 1 0 (000FH) REFON "1" ACK "0" (Initial value: \*\*0\* 000\*)

IREFON	DA converter (Ladder resistor) connection control	0: 1:	Connected only during AD conversion Always connected	
		1	39/fc	
		001:	Reserved 78/fc	
	AD conversion time select (Refer to the following table about the conversion time)	-		R/W
ACK		011:	156/fc	
ACK		100:	312/fc ( )	
		101:	624/fc	
		110:	1248/fc	
		111:	Reserved	

Note 1: Always set bit0 in ADCCR2 to "0" and set bit4 in ADCCR2 to "1".

Note 2: When a read instruction for ADCCR2, bit6 to 7 in ADCCR2 read in as undefined data.

Note 3: After STOP or SLOW/SLEEP mode are started, AD converter control register2 (ADCCR2) is all initialized and no data can be written in this register. Therefore, to use AD converter again, set the ADCCR2 newly after returning to NORMAL1 or NORMAL2 mode.

### Table 16-1 ACK setting and Conversion time

Condition ACK	Conversion time	16 MHz	8 MHz	4 MHz	2 MHz	10 MHz	5 MHz	2.5 MHz
000	39/fc	-	((-))	-	19.5 µs	// -	-	15.6 µs
001		Reserved						
010	78/fc	- ((	` <b>\</b>	19.5 µs	39.0 µs	-	15.6 µs	31.2 µs
011	156/fc		19.5 µs	39.0 µs	78.0 µs	15.6 µs	31.2 µs	62.4 µs
100	312/fc	19.5 µs <	39.0 µs	78.0 µs	156.0 µs	31.2 µs	62.4 µs	124.8 µs
101	624/fe	39.0 µs	78.0 µs	156.0 µs		62.4 µs	124.8 µs	-
110	1248/fc	78.0 µs	156.0 µs		-	124.8 µs	-	-
111				Rese	rved			

Note 1: Setting for "-" in the above table are inhibited. fc: High Frequency oscillation clock [Hz]

Note 2: Set conversion time setting should be kept more than the following time by Power supply voltage(VDD) .

VDD = 4.5 to 5.5 V 15.6 VDD = 2.7 to 5.5 V 31.2

15.6 µs and more

## AD Converted value Register 1

6 5 4 3 2 0 ADCDR1 (0021H)AD09 AD08 AD07 AD06 AD05 AD04 AD03 AD02 (Initial value: 0000 0000) 16.2 Register configuration TMP86FH92DMG

#### AD Converted value Register 2



EOCF	AD conversion end flag	0: 1:	Before or during conversion Conversion completed	Read
ADBF	AD conversion BUSY flag	0: 1:	During stop of AD conversion  During AD conversion	only

Note 1: The ADCDR2<EOCF> is cleared to "0" when reading the ADCDR1. Therefore, the AD conversion result should be read to ADCDR2 more first than ADCDR1.

Note 2: The ADCDR2<ADBF> is set to "1" when AD conversion starts, and cleared to "0" when AD conversion finished. It also is cleared upon entering STOP mode or SLOW mode.

Note 3: If a read instruction is executed for ADCDR2, read data of bit3 to bit0 are unstable.

TMP86FH92DMG

#### 16.3 Function

#### 16.3.1 Software Start Mode

After setting ADCCR1<AMD> to "01" (software start mode), set ADCCR1<ADRS> to "1". AD conversion of the voltage at the analog input pin specified by ADCCR1<SAIN> is thereby started.

After completion of the AD conversion, the conversion result is stored in AD converted value registers (ADCDR1, ADCDR2) and at the same time ADCDR2<EOCF> is set to 1, the AD conversion finished interrupt (INTADC) is generated.

ADRS is automatically cleared after AD conversion has started. Do not set ADCCR1<ADRS> newly again (Restart) during AD conversion. Before setting ADRS newly again, check ADCDR2<EOCF> to see that the conversion is completed or wait until the interrupt signal (INTADC) is generated (e.g., interrupt handling routine).

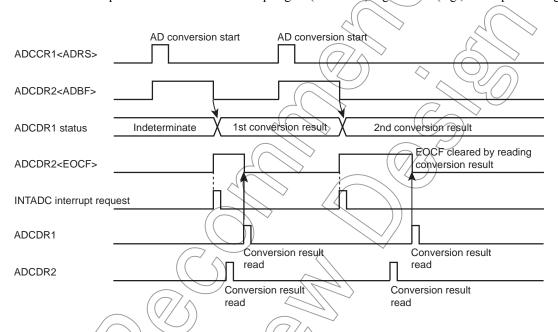


Figure 16-2 Software Start Mode


### 16.3.2 Repeat Mode

AD conversion of the voltage at the analog input pin specified by ADCCR1<SAIN> is performed repeatedly. In this mode, AD conversion is started by setting ADCCR1<ADRS> to "1" after setting ADCCR1<AMD> to "11" (Repeat mode).

After completion of the AD conversion, the conversion result is stored in AD converted value registers (ADCDR1, ADCDR2) and at the same time ADCDR2<EOCF> is set to 1, the AD conversion finished interrupt (INTADC) is generated.

In repeat mode, each time one AD conversion is completed, the next AD conversion is started. To stop AD conversion, set ADCCR1<AMD> to "00" (Disable mode) by writing 0s. The AD convert operation is stopped immediately. The converted value at this time is not stored in the AD converted value register.

163 Function TMP86FH92DMG

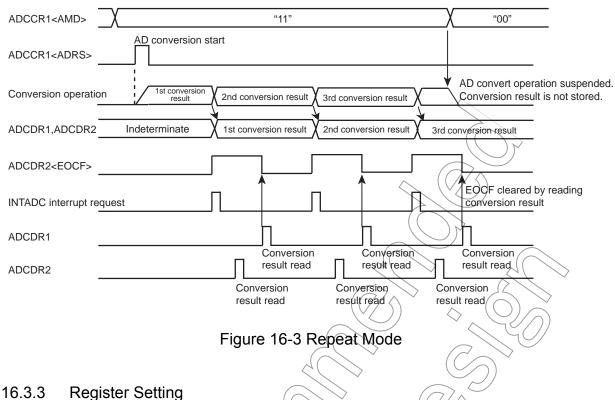

- - 1. Set up the AD converter control register 1 (ADCCR1) as follows
    - Choose the channel to AD convert using AD input channel select (SAIN).
    - Specify analog input enable for analog input control (AINDS).
    - Specify AMD for the AD-converter control operation mode (software or repeat mode).
  - 2. Set up the AD converter control register 2 (ADCCR2) as follows:
    - Set the AD conversion time using AD conversion time (ACK). For details on how to set the conversion time, refer to Figure 16-1 and AD converter control register 2.
    - Choose IREFON for DA converter control.
  - 3. After setting up (1) and (2) above, set AD conversion start (ADRS) of AD converter control register 1 (ADCCR1) to "1". If software start mode has been selected, AD conversion starts immediately.
  - After an elapse of the specified AD conversion time, the AD converted value is stored in AD converted value register (ADCDR1) and the AD conversion finished flag (EOCF) of AD converted value register 2 (ADCDR2) is set to "1", upon which time AD conversion interrupt INTADC is generated.
  - 5. EOCF is cleared to "0" by a read of the conversion result. However, if reconverted before a register read, although EOCF is cleared the previous conversion result is retained until the next conversion is completed.

Example :After selecting the conversion time 19.5 µs at 16 MHz and the analog input channel AIN3 pin, perform AD conversion once. After checking EOCF, read the converted value, store the lower 2 bits in address 0009EH and store the upper 8 bits in address 0009FH in RAM. The operation mode is software start mode.

	: (port setting)	:	;Set port register appropriately before setting AD converter registers.
	:	:	(Refer to section 1/0 port in details)
	LD	(ADCCR1), 00100011B	; Select AIN3
	LD	(ADCCR2), 11011000B	;Select conversion time(312)fo) and operation mode
	SET	(ADCCR1) . 7	; ADRS = 1(AD conversion start)
SLOOP:	TEST	(ADCDR2) . 5	; EOCE= 1.2
	JRS	T, SLOOP	
	1.5	A (ADODDO)	
	LD	A , (ADCDR2)	: Read result data
	LD	(9EH) , A	
	LD	A, (ADCDR1)	Read result data
	LD	(9FH), A	

# 16.4 STOP/SLOW Modes during AD Conversion

When standby mode (STOP or SLOW mode) is entered forcibly during AD conversion, the AD convert operation is suspended and the AD converter is initialized (ADCCR1 and ADCCR2 are initialized to initial value). Also, the conversion result is indeterminate. (Conversion results up to the previous operation are cleared, so be sure to read the conversion results before entering standby mode (STOP or SLOW mode).) When restored from standby mode (STOP or SLOW mode), AD conversion is not automatically restarted, so it is necessary to restart AD conversion. Note that since the analog reference voltage is automatically disconnected, there is no possibility of current flowing into the analog reference voltage.



#### Analog Input Voltage and AD Conversion Result 16.5

The analog input voltage is corresponded to the 10-bit digital value converted by the AD as shown in Figure 16-4.


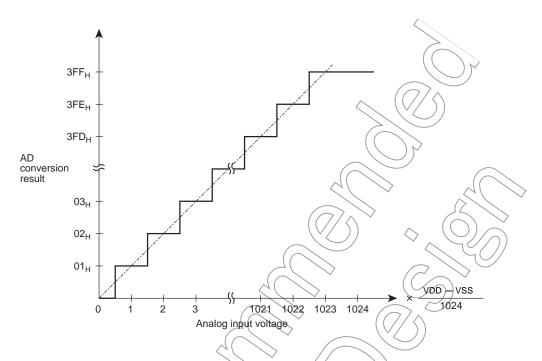


Figure 16-4 Analog Input Voltage and AD Conversion Result (Typ.)

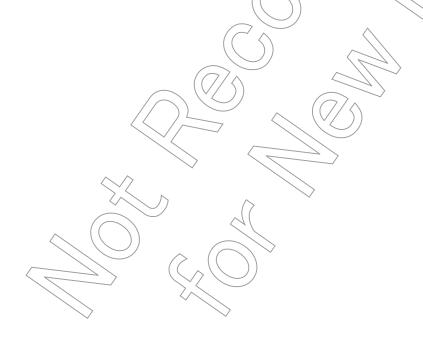

TMP86FH92DMG

#### 16.6 Precautions about AD Converter

## 16.6.1 Analog input pin voltage range

Make sure the analog input pins (AIN0 to AIN5) are used at voltages within VDD to VSS. If any voltage outside this range is applied to one of the analog input pins, the converted value on that pin becomes uncertain. The other analog input pins also are affected by that.

### 16.6.2 Analog input shared pins

The analog input pins (AIN0 to AIN5) are shared with input/output ports. When using any of the analog inputs to execute AD conversion, do not execute input/output instructions for all other ports. This is necessary to prevent the accuracy of AD conversion from degrading. Not only these analog input shared pins, some other pins may also be affected by noise arising from input/output to and from adjacent pins.

#### 16.6.3 Noise Countermeasure

The internal equivalent circuit of the analog input pins is shown in Figure 16-5. The higher the output impedance of the analog input source, more easily they are susceptible to noise. Therefore, make sure the output impedance of the signal source in your design is  $5 \text{ k}\Omega$  or less. Toshiba also recommends attaching a capacitor external to the chip.


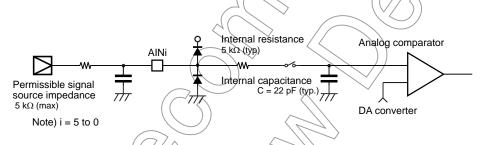


Figure 16-5 Analog Input Equivalent Circuit and Example of Input Pin Processing



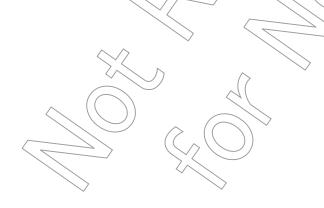

TOSHIBA TMP86FH92DMG

# 17. Key-on Wakeup (KWU)

TMP86FH92DMG have four pins P34 to P37, in addition to the P20 (INT5/STOP) pin, that can be used to exit STOP mode.

When using these P34 to P37 pin's input to exit STOP mode, pay attention to the logic of P20 pin. In details, refer

to the following section"17.2 Control". Configuration 17.1 STOP mode control INT5 ◀ P20 (INT5/STOP) STOP mode release signal (1: Release) R34 (AIN2/STOP2) STOP2(STOPCR) STOP signal P35 (AIN3/STOP3) STOP3(STOPCR)
STOP signal - P36 (AIN4/STOP4) STOP4(STOPCR) STOP signal P37 (AIN5/STOP5) STOP5(STOPCR) STOP signal Figure 17-1 Key-on Wakeup Circuit Example of STOP mode release operation STOP mode release operation(P34 to 37) P3i "H" · "L" Rising or falling edge detect Operation STOR Wake-up\*  $^{\star}$  : The time required for wakeup from releasing STOP mode includes the warming-up time.

Figure 17-2 Example of STOP Mode Release Operation

For details, refer to section "Control of Operation Modes".

17.2 Control TMP86FH92DMG

## 17.2 Control

The P34 to P37 (STOP2 to STOP5) pins can individually be disabled/enabled using Key-on Wakeup Control Register (STOPCR). When these pins are used as a release input of STOP mode, beforehand they set to key-on wakeup by each register of P3 Port. For details, refer to section "I/O Ports".

STOP mode can be entered by setting up the System Control Register (SYSCR1), and can be released by detecting the active edge (rising or falling edge) on any STOP2 to STOP5 pins which are available for STOP mode release.

Note: When using Key-on Wakeup function, select level mode ( set SYSCR1<RELM> to "1") for selection of STOP mode release method.

Although P20 pin is shared with INT5 and STOP pin input, use mainly STOP pin to release STOP mode. This is because Key-on Wakeup function is comprised of STOP pin and STOP2 to STOP5 pins as shown in the configuration diagram.

- Note 1: When STOP mode release by an edge on STOP pin, follow one of the two methods described below.
  - (1) Disable all of STOP2 to STOP5 pin inputs.
  - (2) Fix STOP2 to 5 pin inputs high or low level.
- Note 2: When using key-on wakeup (STOP2 to 5 pins) to exit STOP mode, make sure STOP pin is held low and STOP2 to 5 pin inputs are held high or low level, because STOP mode release signal is created by OR circuit the STOP pin input and the STOP2 to 5 pin input together.

#### Key-on Wakeup STOP Mode Control Register

STOPCR	7	6	5	4	3 2 1
(0031H)	STOP5	STOP4	STOP3	STOP2	(Initial value : 0000 ****)

STOP2	STOP mode release by P34 (\$TOP2)	0: Disable 1: Enable	
STOP3	STOP mode release by P35 (\$TOP3)	0: Disable	
		1: Enable	Write
STOP4	STOP mode release by P36 (STOP4)	Ø: Disable	only
31014	STOT Mode release by 100 (GTOL 4)	1: Enable	
STOP5	STOP mode release by P37 (STOP5)	0: Disable	
01010	o lot modercease by 1 or (e1 ols)	1. Enable	

<example mode="" of="" release="" stop=""> The device is released from STOP mode in the following condition.</example>							
	P20(STOP)	P3x					
STOP mode release using P3x (STOP2 to 5)	Level detection mode: Low Edge detection mode: Disable	Edge detection Rising or falling edge					
STOP mode release using P20 (STOP)	Level detection mode: High Edge detection mode: Rising edge	STOPCR: inhibited					

Note: Assertion of the STOP mode release signal is not recognized within three instruction cycles after executing the STOP instruction.

TOCHIRA TMP86FH92DMG

# 18. Flash Memory

TMP86FH92DMG has 16384byte flash memory (address: C000H to FFFFH). The write and erase operations to the flash memory are controlled in the following three types of mode.

- MCU mode

The flash memory is accessed by the CPU control in the MCU mode. This mode is used for software bug correction and firmware change after shipment of the device since the write operation to the flash memory is available by retaining the application behavior.

- Serial PROM mode

The flash memory is accessed by the CPU control in the serial PROM mode. Use of the serial interface (UART) enables the flash memory to be controlled by the small number of pins. TMP86FH92DMG in the serial PROM mode supports on-board programming which enables users to program flash memory after the microcontroller is mounted on a user board.

- Parallel PROM mode

The parallel PROM mode allows the flash memory to be accessed as a stand-alone flash memory by the program writer provided by the third party. High-speed access to the flash memory is available by controlling address and data signals directly. For the support of the program writer, please ask Toshiba sales representative

In the MCU and serial PROM modes, the flash memory control register (FLSCR) is used for flash memory control. This chapter describes how to access the flash memory using the flash memory control register (FLSCR) in the MCU and serial PROM modes.


Note 1: The 'Read Protect' described by data sheet of old edition was changed into 'Security Program'.



8.1 Flash Memory Control TMP86FH92DMG

# 18.1 Flash Memory Control

The flash memory is controlled via the flash memory control register (FLSCR) and flash memory standby control resister (FLSCR).

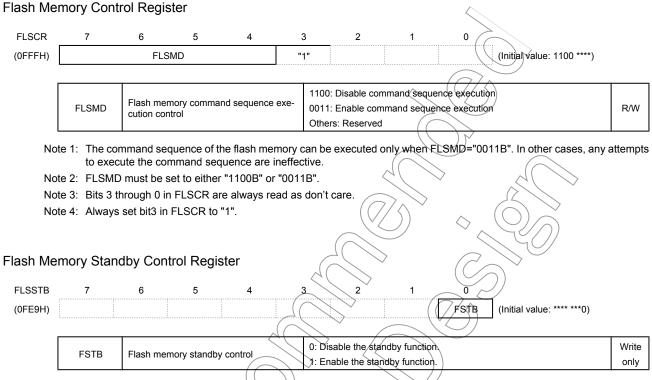

- Note 1: When FSTB is set to 1, do not execute the read/write instruction to the flash memory because there is a possibility that the expected data is not read or the program is not operated correctly. If executing the read/write instruction, FSTB is initialized to 0 automatically.
- Note 2: If an interrupt is issued when FSTB is set to 1, FSTB is initialized to 0 automatically and then the vector area of the flash memory is read.
- Note 3: If the IDLE0/1/2, SLEEP0/1/2 or STOP mode is activated when FSTB is set to 1, FSTB is initialized to 0 automatically. In the IDLE0/1/2, SLEEP0/1/2 or STOP mode, the standby function operates regardless of FSTB setting.

# 18.1.1 Flash Memory Command Sequence Execution Control (FLSCR<FLSMD>)

The flash memory can be protected from inadvertent write due to program error or microcontroller misoperation. This write protection feature is realized by disabling flash memory command sequence execution via the flash memory control register (write protect). To enable command sequence execution, set FLSCR<FLSMD> to "001 NB". To disable command sequence execution, set FLSCR<FLSMD> to "1100B". After reset, FLSCR<FLSMD> is initialized to "1100B" to disable command sequence execution. Normally, FLSCR<FLSMD> should be set to "1100B" except when the flash memory needs to be written or erased.

# 18.1.2 Flash Memory Standby Control (FLSSTB<FSTB>)

Low power consumption is enabled by cutting off the steady-state current of the flash memory. In the IDLE0/1/2, SLEEP0/1/2 or STOP mode, the steady-state current of the flash memory is cut off automatically.

When the program is executed in the RAM area (without accessing the flash memory) in the NORMAL 1/2 or SLOW1/2 mode, the current can be cut off by the control of the register. To cut off the steady-state current of the flash memory, set FLSSTB<FSTB> to "1" by the control program in the RAM area. The procedures for controlling the FLSSTB register are explained below.

(Steps1 and 2 are controlled by the program in the flash memory, and steps 3 through 8 are controlled by the write control program executed in the RAM area.)

- 1. Transfer the control program of the FLSSTB register to the RAM area.
- 2. Jump to the RAM area.
- 3. Disable (DI) the interrupt master enable flag (IMF = "0").
- 4. Set FLSSTB<FSTB> to "1".
- 5. Execute the user program.
- 6. Repeat step 5 until the return request to the flash memory is detected
- 7. Set FLSSTB<FSTB> to "0".
- 8. Jump to the flash memory area.

Note 1: The standby function is not operated by setting FLSSTB<FSTB> with the program in the flash memory. You must set FLSSTB<FSTB> by the program in the RAM area.

Note 2: To use the standby function by setting FLSSTB<FSTB> to "1" with the program in the RAM area, FLSSTB<FSTB> must be set to "0" by the program in the RAM area before returning the program control to the flash memory. If the program control is returned to the flash memory with FLSSTB<FSTB> set to "1", the program may malfunction and run out of control.



18.2 Command Sequence TMP86FH92DMG

## 18.2 Command Sequence

The command sequence in the MCU and the serial PROM modes consists of six commands (JEDEC compatible), as shown in Table 18-1. Addresses specified in the command sequence are recognized with the lower 12 bits (excluding BA, SA, and FF7FH used for security program). The upper 4 bits are used to specify the flash memory area,

Table 18-1 Command Sequence

	0	1st Bus W	rite Cycle	2nd Bus V	/rite Cycle	3rd Bus V	/rite Cycle	4th Bus W	/rite Cycle	5th Bus V	rite Cycle	6th Bus W	rite Cycle
	Command Sequence	Address	Data	Address	Data	Address	Data	Address	Data	Address	Data	Address	Data
1	Byte program	555H	AAH	АААН	55H	555H	A0H	BA (Note 1)	Data (Note 1)	<u>()</u>	-	-	-
2	Sector Erase (4-kbyte Erase)	555H	AAH	АААН	55H	555H	80H	555H	AAH	AAAH	55H	SA (Note 2)	30H
3	Chip Erase (All Erase)	555H	AAH	АААН	55H	555H	80H	555H	ААН	AAAH	55H	555H	10H
4	Product ID Entry	555H	AAH	AAAH	55H	555H	90H		> -	- /	-	-	-
Ĺ	Product ID Exit	XXH	F0H	-	-	-	-((	(/ 3)	- ^	, -((	))-	-	-
5	Product ID Exit	555H	AAH	AAAH	55H	555H	FOH		-		(2/)/	-	-
6	Security Program	555H	AAH	AAAH	55H	555H	A5H	FF7FH	00H	<del> </del>	5 💆	-	-

Note 1: Set the address and data to be written.

Note 2: The area to be erased is specified with the upper 4 bits of the address.

### 18.2.1 Byte Program

This command writes the flash memory for each byte unit. The addresses and data to be written are specified in the 4th bus write cycle. Each byte can be programmed in a maximum of 40 µs. The next command sequence cannot be executed until the write operation is completed. To check the completion of the write operation, perform read operations repeatedly until the same data is read twice from the same address in the flash memory. During the write operation, any consecutive attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1).

Note: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

## 18.2.2 Sector Erașe (4-kbyte Erase)

This command erases the flash memory in units of 4 kbytes. The flash memory area to be erased is specified by the upper 4 bits of the 6th bus write cycle address. For example, to erase 4 kbytes from F000H to FFFFH, specify one of the addresses in F000H-FFFFH as the 6th bus write cycle. The sector erase command is effective only in the MCU and serial PROM modes, and it cannot be used in the parallel PROM mode.

A maximum of 30 ms is required to erase 4 kbytes. The next command sequence cannot be executed until the erase operation is completed. To check the completion of the erase operation, perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. During the erase operation, any consecutive attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1).

#### 18.2.3 Chip Erase (All Erase)

This command erases the entire flash memory in approximately 30 ms. The next command sequence cannot be executed until the erase operation is completed. To check the completion of the erase operation, perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. During the erase operation, any consecutive attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1). After the chip is erased, all bytes contain FFH.

## 18.2.4 Product ID Entry

This command activates the Product ID mode. In the Product ID mode, the vendor ID, the flash ID, and the security program status can be read from the flash memory.

Table 18-2 Values To Be Read in the Product ID Mode

Address	Meaning	Read Value
F000H	Vendor ID	98H
F001H	Flash macro ID	41H (//))
		0EH: 60 kbytes
		0BH: 48 kbytes
		07H: 32 kbytes
F002H	Flash size	Q5H: 24 kbytes
		03H: 16 kbytes
		01H: 8 kbytes
		00H: 4 kbytes
FF7FH	Socurity program atotus	FFH: Security program disabled
FF/FH	Security program status	Other than FFH: Security program enabled

Note: The value at address F002H (flash size) depends on the size of flash memory incorporated in each product. For example, if the product has 60-kbyte flash memory, "0EH" is read from address F002H.

#### 18.2.5 Product D Exit

This command is used to exit the Product ID mode.

#### 18.2.6 Security Program

This command enables the read protection setting in the flash memory. When the security program is enabled, the flash memory cannot be read in the parallel PROM mode. In the serial PROM mode, the flash write and RAM loader commands cannot be executed.

To disable the security program setting, it is necessary to execute the chip erase command sequence. Whether or not the security program is enabled can be checked by reading FF7FH in the Product ID mode. For details, see Table 18-2.

It takes a maximum of  $40 \,\mu s$  to set security program in the flash memory. The next command sequence cannot be executed until this operation is completed. To check the completion of the security program operation, perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. During the security program operation, any attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1).

18.3 Toggle Bit (D6) TMP86FH92DMG

# 18.3 Toggle Bit (D6)

After the byte program, chip erase, and security program command sequence is executed, any consecutive attempts to read from the same address is reversed bit 6 (D6) of the data (toggling between 0 and 1) until the operation is completed. Therefore, this toggle bit provides a software mechanism to check the completion of each operation. Usually perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. After the byte program, chip erase, or security program command sequence is executed, the initial read of the toggle bit always produces a "1".

# 18.4 Access to the Flash Memory Area

When the write, erase and security program are set in the flash memory, read and fetch operations cannot be performed in the entire flash memory area. Therefore, to perform these operations in the entire flash memory area, access to the flash memory area by the control program in the BOOTROM or RAM area. (The flash memory program cannot write to the flash memory.) The serial PROM or MCU mode is used to run the control program in the BOOTROM or RAM area.

- Note 1: The flash memory can be written or read for each byte unit. Erase operations can be performed either in the entire area or in units of 4 kbytes, whereas read operations can be performed by an one transfer instruction. However, the command sequence method is adopted for write and erase operations, requiring several-byte transfer instructions for each operation.
- Note 2: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

### 18.4.1 Flash Memory Control in the Serial PROM Mode

The serial PROM mode is used to access to the flash memory by the control program provided in the BOOT-ROM area. Since almost of all operations relating to access to the flash memory can be controlled simply by the communication data of the serial interface (UART), these functions are transparent to the user. For the details of the serial PROM mode, see "Serial PROM Mode."

To access to the flash memory by using peripheral functions in the serial PROM mode, run the RAM loader command to execute the control program in the RAM area. The procedures to execute the control program in the RAM area is shown in "18.4.1.1 How to write to the flash memory by executing the control program in the RAM area (in the RAM loader mode within the serial PROM mode)".

18.4.1.1 How to write to the flash memory by executing the control program in the RAM area (in the RAM loader mode within the serial PROM mode)

(Steps 1 and 2 are controlled by the BOOTROM, and steps 3 through 9 are controlled by the control program executed in the RAM area.)

- 1. Transfer the write control program to the RAM area in the RAM loader mode.
- 2. Jump to the RAM area.
- 3. Disable (DI) the interrupt master enable flag (IMF←"0").
- 4. Set FLSCR<FLSMD> to "0011B" (to enable command sequence execution).
- 5. Execute the erase command sequence.
- 6. Read the same flash memory address twice.

(Repeat step 6 until the same data is read by two consecutive reads operations.)

- 7. Execute the write command sequence.
- 8 Read the same flash memory address twice.

(Repeat step 8 until the same data is read by two consecutive reads operations.)

- 9. Set FLSCR<FLSMD> to "1100B" (to disable command sequence execution).
- Note 1: Before writing to the flash memory in the RAM area, disable interrupts by setting the interrupt master enable flag (IMF) to "0". Usually disable interrupts by executing the DI instruction at the head of the write control program in the RAM area.
- Note 2: Since the watchdog timer is disabled by the BOOTROM in the RAM loader mode, it is not required to disable the watchdog timer by the RAM loader program.

Example : After chip erasure, the program in the RAM area writes data 3FH to address F000H.

	DI		: Disable interrupts (IMF←"0")
	LD	(FLSCR),00111000B	: Enable command sequence execution.
	LD	IX,0F555H	
	LD	IY,0FAAAH	
	LD	HL,0F000H	
; #### Flash Mem	ory Chip erase I	Process ####	
	LD	(IX),0AAH	: 1st bus write cycle
	LD	(IY),55H	: 2nd bus write cycle
	LD	(IX),80H	: 3rd bus write cycle
	LD	(IX),0AAH	: 4th bus write cycle
	LD	(IY),55H	: 5th bus write cycle
	LD	(IX),10H	: 6th bus write cycle
sLOOP1:	LD	W,(HL)	
	CMP	W,(HL)	
	JR	NZ,sLOOP1	: Loop until the same value is read
; #### Flash Mem	ory Write Proces	ss ####	
	LD	(IX),0AAH	:1st bus write cycle
	LD	(IY),55H	: 2nd bus write cycle
	LD	(IX),0A0H	:3rd bus write cycle
	LD	(HL),3FH	: 4th bus write cycle, (F000H)≠3FH
sLOOP2:	LD	W,(HL)	
	CMP	W,(HL)	
	JR	NZ,sLOOP2	: Loop until the same value/is read.
	LD	(FLSCR),11001000B	: Disable command sequence execution.
sLOOP3:	JP	sLOOR3	
		(//	
			7/^ ~
4			
	/ \		
<√?	·		
<u> </u>	$\searrow$	$\wedge$	
	\	4	
	)		
		$\langle \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	
	<b>\</b>		
$\checkmark$		$\vee$	

## 18.4.2 Flash Memory Control in the MCU mode

In the MCU mode, write operations are performed by executing the control program in the RAM area. Before execution of the control program, copy the control program into the RAM area or obtain it from the external using the communication pin. The procedures to execute the control program in the RAM area in the MCU mode are described below.

18.4.2.1 How to write to the flash memory by executing a user write control program in the RAM area (in the MCU mode)

(Steps 1 and 2 are controlled by the program in the flash memory, and steps 3 through 11 are controlled by the control program in the RAM area.)

- 1. Transfer the write control program to the RAM area.
- 2. Jump to the RAM area.
- 3. Disable (DI) the interrupt master enable flag (IMF \( \dots \)"0")
- 4. Disable the watchdog timer, if it is used.
- 5. Set FLSCR<FLSMD> to "0011B" (to enable command sequence execution)
- 6. Execute the erase command sequence.
- 7. Read the same flash memory address twice.

(Repeat step 7 until the same data is read by two consecutive read operations.)

- 8. Execute the write command sequence.
- 9. Read the same flash memory address twice

(Repeat step 9 until the same data is read by two consecutive read operations.)

- 10. Set FLSCR<FLSMD> to "1100B" (to disable command sequence execution).
- 11. Jump to the flash memory area.

Note 1: Before writing to the flash memory in the RAM area, disable interrupts by setting the interrupt master enable flag (IMF) to "0". Usually disable interrupts by executing the DI instruction at the head of the write control program in the RAM area.

Note 2: When writing to the flash memory, do not intentionally use non-maskable interrupts (the watchdog timer must be disabled if it is used). If a non-maskable interrupt occurs while the flash memory is being written, unexpected data is read from the flash memory (interrupt vector), resulting in malfunction of the microcontroller.

Example :After sector erasure (E000H-EFFFH), the program in the RAM area writes data 3FH to address E000H.

	DI		: Disable interrupts (IMF←"0")
	LD	(WDTCR2),4EH	: Clear the WDT binary counter.
	LDW	(WDTCR1),0B101H	: Disable the WDT.
	LD	(FLSCR),00111000B	: Enable command sequence execution.
	LD	IX,0F555H	
	LD	IY,0FAAAH	
	LD	HL,0E000H	
; #### Flash Mem	ory Sector Eras	e Process ####	$\sim (7/s)$
	LD	(IX),0AAH	: 1st bus write cycle
	LD	(IY),55H	: 2nd bus write cycle
	LD	(IX),80H	: 3rd bus write cycle
	LD	(IX),0AAH	: 4th bus write cycle
	LD	(IY),55H	: 5th bus write cycle
	LD	(HL),30H	: 6th bus write cycle
sLOOP1:	LD	W,(HL)	(V) 4 (9)
	CMP	W,(HL)	
	JR	NZ,sLOOP1	: Loop until the same value is read:
; #### Flash Mem	ory Write Proce	ss ####	
	LD	(IX),0AAH	:1st bus write cycle
	LD	(IY),55H	: 2nd bus write cycle
	LD	(IX),0A0H	· 3rd bus write cycle
	LD	(HL),3FH	: 4th bus write cycle, (E000H)=3FH
sLOOP2:	LD	W,(HL)	
	CMP	W,(HL)	_
	JR	NZ,sLQOP2	: Loop until the same value is read.
	LD	(FLSCR),11001000B	: Disable command sequence execution.
	JP	(XXXXH)	: Jump to the flash memory area.
			7/\
			<u> </u>
Example :This write cont	rol program	reads data from address	s F000H and stores it to 98H in the RAM area.
	LD	A,(0F000H)	: Read data from address F000H.
	LD	(98H),A	: Store data to address 98H.
	$\bigcirc$	$\bigcirc$	
		4	
	()	$\sim$ (( ))	
	~		

TOSHIBA TMP86FH92DMG

# 19. Serial PROM Mode

#### 19.1 Outline

The TMP86FH92DMG has a 2048 byte BOOTROM (Mask ROM) for programming to flash memory. The BOOTROM is available in the serial PROM mode, and controlled by TEST, BOOT and RESET pins. Communication is performed via UART. The serial PROM mode has seven types of operating mode: Flash memory writing, RAM loader, Flash memory SUM output, Product ID code output, Flash memory status output, Flash memory erasing and Flash memory security program setting. Memory address mapping in the serial PROM mode differs from that in the MCU mode. Figure 19-1 shows memory address mapping in the serial PROM mode.

Table 19-1 Operating Range in the Serial PROM Mode

Parameter	Min	Max	Unit
Power supply	4.5	5.5	$\mathcal{M}()$
High frequency (Note)	2	16	MHz

Note: Though included in above operating range, some of high frequencies are not supported in the serial PROM mode. For details, refer to "Table 19-5".

# 19.2 Memory Mapping

The Figure 19-1 shows memory mapping in the Serial PROM mode and MCU mode.

In the serial PROM mode, the BOOTROM (Mask ROM) is mapped in addresses from 7800H to 7FFFH.

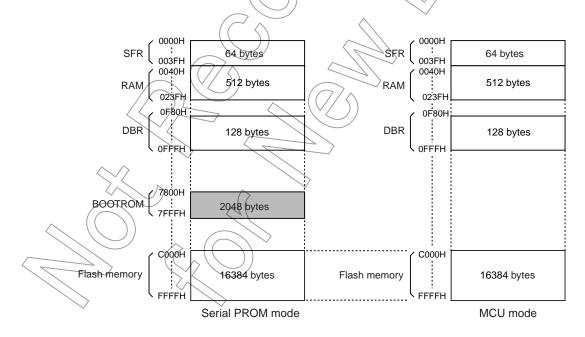


Figure 19-1 Memory Address Maps

Serial PROM Mode Setting TMP86FH92DMG

# 19.3 Serial PROM Mode Setting

#### 19.3.1 Serial PROM Mode Control Pins

To execute on-board programming, activate the serial PROM mode. Table 19-2 shows pin setting to activate the serial PROM mode.

Table 19-2 Serial PROM Mode Setting

Pin	Setting
TEST pin	High
BOOT/RXD1 pin	High
RESET pin	

Note: The BOOT pin is shared with the UART communication pin (RXD1 pin) in the serial PROM mode. This pin is used as UART communication pin after activating serial PROM mode.

#### 19.3.2 Pin Function

In the serial PROM mode, TXD1 (P00) and RXD1 (P01) are used as a serial interface pin.

Table 19-3 Pin Function in the Serial PROM Mode

Pin Name (Serial PROM Mode)	Input/ Output	Function		Pin Name (MCU Mode)		
TXD1	Output	Serial data output		P00		
BOOT/RXD1	Input/In- put	Serial PROM mode control/Serial data input	(Note 1)	P01		
RESET	Input	Serial PROM mode control		RESET		
TEST	Input	Fixed to high		TEST		
VDD	Power supply	4.5 to∕5.5 ∀				
vss	Power supply	0 V				
I/O ports except P00, P01	) I/O	These ports are in the high-impedance state in the serie the port inputs with a hardware feature to prevent overlamake the port inputs valid, set the pin of the SPCR register.	ap current. (The	port inputs are invalid.) To		
XIN XOUT	Input Output	Self-oscillate with an oscillator.		(Note 2)		

Note 1: During on-board programming with other parts mounted on a user board, be careful no to affect these communication control pins.

Note 2: Operating range of high frequency in serial PROM mode is 2 MHz to 16 MHz.

# TMP86FH92DMG VDD(4.5 V to 5.5 V) Serial PROM mode MCU mode XIN XOUT TXD1 (P00) RESET GND

Figure 19-2 Serial PROM Mode Pin Setting

Note 1: For connection of other pins, refer to "Table 19-3 Rin Function in the Serial PROM Mode".

# 19.3.3 Example Connection for On-Board Writing

Figure 19-3 shows an example connection to perform on-board wring.

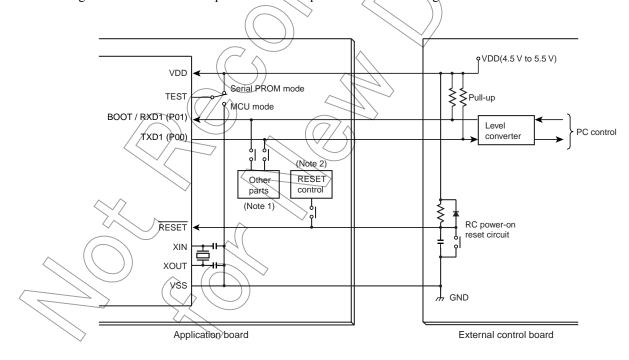


Figure 19-3 Example Connection for On-Board Writing

- Note 1: When other parts on the application board effect the UART communication in the serial PROM mode, isolate these pins by a jumper or switch.
- Note 2: When the reset control circuit on the application board effects activation of the serial PROM mode, isolate the pin by a jumper or switch.
- Note 3: For connection of other pins, refer to "Table 19-3 Pin Function in the Serial PROM Mode".

TMP86FH92DMG

#### 19.3 Serial PROM Mode Setting

## 19.3.4 Activating the Serial PROM Mode

The following is a procedure to activate the serial PROM mode. "Figure 19-4 Serial PROM Mode Timing" shows a serial PROM mode timing.

- 1. Supply power to the VDD pin.
- 2. Set the  $\overline{RESET}$  pin to low.
- 3. Set the TEST pin and BOOT/RXD1 pins to high.
- 4. Wait until the power supply and clock oscillation stabilize.
- 5. Set the  $\overline{RESET}$  pin to high.
- 6. Input the matching data (5AH) to the BOOT/RXD1 pin after setup sequence. For details of the setup timing, refer to "19.16 UART Timing".


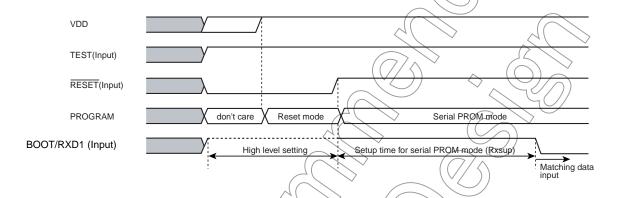


Figure 19-4 Serial PROM Mode Timing

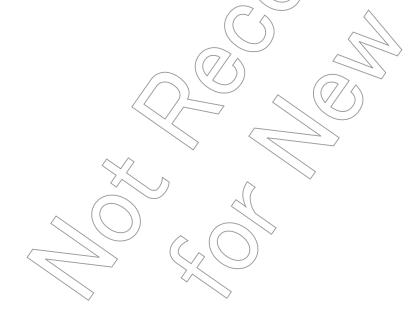

# 19.4 Interface Specifications for UART

The following shows the UART communication format used in the serial PROM mode.

To perform on-board programming, the communication format of the write controller must also be set in the same manner.

The default baud rate is 9600 bps regardless of operating frequency of the microcontroller. The baud rate can be modified by transmitting the baud rate modification data shown in Table 19-4 to TMP86FH92DMG. The Table 19-5 shows an operating frequency and baud rate. The frequencies which are not described in Table 19-5 can not be used

- Baud rate (Default): 9600 bps

Data length: 8 bitsParity addition: None

- Stop bit: 1 bit

#### Table 19-4 Baud Rate Modification Data

Baud rate modification data	04H	05H	06H 07H	0AH 18H 28H
Baud rate (bps)	76800	62500	57600 38400	31250 19200 9600

Table 19-5 Operating Frequency and Baud Rate in the Serial PROM Mode

								$\vee$		\ \						
	Reference I	Baud Rate (bps)	768	300	625	500 🗸 (	578	00	384	400	312	250	192	200	96	00
(Note 3)	Baud Rate I	Modification Da- ta	04	ŀН	O.E	SH-	06	SH (	07	7H	0.4	λH	18	ВН	28	ВН
(Note 3)	Ref. Frequency (MHz)	Rating (MHz)	Baud rate (bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)
1	2	1.91 to 2.10	-	-		IJ-	-	16	77/	-	-	-			9615	+0.16
	4	3.82 to 4.19	-	(-7)	/	-	- 4		\ -	-	31250	0.00	19231	+0.16	9615	+0.16
2	4.19	3.82 to 4.19				-	6	/><	\ -	-	32734	+4.75	20144	+4.92	10072	+4.92
3	4.9152	4.70 to 5.16	- /		-	(-\			38400	0.00	-	-	19200	0.00	9600	0.00
,	5	4.70 to 5.16	\ <u>'</u> -\	1				)'	39063	+1.73	-	-	19531	+1.73	9766	+1.73
4	6	5.87 to 6.45	-	<u> </u>	_ <	7		> -	-	-	-	-			9375	-2.34
4	6.144	5.87 to 6.45	-	-	-	-/	-	-	-	-	-	-	-	-	9600	0.00
5	7.3728	7.05 to 7.74	5	-	_	-	57600	0.00	-	-	-	-	19200	0.00	9600	0.00
6	8	7.64 to 8.39	<u></u>	-	62500	0.00	-	-	38462	+0.16	31250	0.00	19231	+0.16	9615	+0.16
7	9.8304	9.40 to 10.32	76800	0.00		-	-	-	38400	0.00	-	-	19200	0.00	9600	0.00
,	10	9.40 to 10.32	78125	+1.73	-	<u> </u>	-	-	39063	+1.73	-	-	19531	+1.73	9766	+1.73
	12	11.75 to 12.90	- ((	$\sqrt{2}$	( <u>-</u> )	-	57692	+0.16	-	-	31250	0.00	18750	-2.34	9375	-2.34
8	12.288	11.75 to 12.90	- ~		<u>-</u>	-	59077	+2.56	-	-	32000	+2.40	19200	0.00	9600	0.00
	12.5	11.75 to 12.90	-	'	60096	-3.85	60096	+4.33	-	-	30048	-3.85	19531	+1.73	9766	+1.73
9	14.7456	14.10 to 15.48	-	-	-	-	57600	0.00	38400	0.00	-	-	19200	0.00	9600	0.00
10	16	15.27 to 16.77	76923	+0.16	62500	0.00	-	-	38462	+0.16	31250	0.00	19231	+0.16	9615	+0.16

Note 1: "Ref. Frequency" and "Rating" show frequencies available in the serial PROM mode. Though the frequency is supported in the serial PROM mode, the serial PROM mode may not be activated correctly due to the frequency difference in the external controller (such as personal computer) and oscillator, and load capacitance of communication pins.

Note 2: It is recommended that the total frequency difference is within ±3% so that auto detection is performed correctly by the reference frequency.

Note 3: The external controller must transmit the matching data (5AH) repeatedly till the auto detection of baud rate is performed. This number indicates the number of times the matching data is transmitted for each frequency.

TMP86FH92DMG

#### 19.5 Operation Command

# 19.5 Operation Command

The eight commands shown in Table 19-6 are used in the serial PROM mode. After reset release, the TMP86FH92DMG waits for the matching data (5AH).

Table 19-6 Operation Command in the Serial PROM Mode

Command Data	Operating Mode	Description
5AH	Setup	Matching data. Execute this command after releasing the reset.
F0H	Flash memory erasing	Erases the flash memory area (address C000H to FFFFH).
30H	Flash memory writing	Writes to the flash memory area (address C000H to FFFFH).
60H	RAM loader	Writes to the specified RAM area (address 0050H to 023FH).
90H	Flash memory SUM output	Outputs the 2-byte checksum upper byte and lower byte in this order for the entire area of the flash memory (address C000H to FFFFH).
C0H	Product ID code output	Outputs the product D code (13-byte data).
СЗН	Flash memory status output	Outputs the status code (7-byte data) such as the security program condition.
FAH	Flash memory security program setting	Enables the security program.

# 19.6 Operation Mode

The serial PROM mode has seven types of modes, that are (1) Flash memory erasing, (2) Flash memory writing, (3) RAM loader, (4) Flash memory SUM output, (5) Product ID code output, (6) Flash memory status output and (7) Flash memory security program setting modes. Description of each mode is shown below.

1. Flash memory erasing mode

The flash memory is erased by the chip erase (erasing an entire flash area) or sector erase (erasing sectors in 4-kbyte units). The erased area is filled with FFH. When the security program is enabled, the sector erase in the flash erasing mode can not be performed. To disable the security program, perform the chip erase. Before erasing the flash memory, TMP86FH92DMG checks the passwords except a blank product. If the password is not matched, the flash memory erasing mode is not activated.

2. Flash memory writing mode

Data is written to the specified flash memory address for each byte unit. The external controller must transmit the write data in the Intel Hex format (Binary). If no error is encountered till the end record, TMP86FH92DMG calculates the checksum for the entire flash memory area (C000H to FFFFH), and returns the obtained result to the external controller. When the security program is enabled, the flash memory writing mode is not activated. In this case, perform the chip erase command beforehand in the flash memory erasing mode. Before activating the flash memory writing mode, TMP86FH92DMG checks the password except a blank product. If the password is not matched, flash memory writing mode is not activated.

3. RAM loader mode

The RAM loader transfers the data in Intel Hex format sent from the external controller to the internal RAM. When the transfer is completed normally, the RAM loader calculates the checksum. After transmitting the results, the RAM loader jumps to the RAM address specified with the first data record in order to execute the user program. When the security program is enabled, the RAM loader mode is not activated. In this case, perform the chip erase beforehand in the flash memory erasing mode. Before activating the RAM loader mode, TMP86FH92DMG checks the password except a blank product. If the password is not matched, flash RAM loader mode is not activated.

4. Flash memory SUM output mode

The checksum is calculated for the entire flash memory area (C000H to FFFFH), and the result is returned to the external controller. Since the BOOTROM does not support the operation command to read the flash memory, use this checksum to identify programs when managing revisions of application programs.

5. Product ID code output

The code used to identify the product is output. The code to be output consists of 13-byte data, which includes the information indicating the area of the ROM incorporated in the product. The external controller reads this code, and recognizes the product to write.

(In the case of TMP86FH92DMG, the addresses from C000H to FFFFH become the ROM area.)

6. Flash memory status output mode

The status of the area from FFE0H to FFFFH, and the security program condition are output as 7-byte code. The external controller reads this code to recognize the flash memory status.

7. Flash memory security program setting mode

This mode disables reading the flash memory data in parallel PROM mode. In the serial PROM mode, the flash memory writing and RAM loader modes are disabled. To disable the flash memory security program, perform the chip erase in the flash memory erasing mode.



### 19.6.1 Flash Memory Erasing Mode (Operating command: F0H)

Table 19-7 shows the flash memory erasing mode.

Table 19-7 Flash Memory Erasing Mode

	Transfer Byte	Transfer Data from the External Controller to TMP86FH92DMG	Baud Rate	Transfer Data from TMP86FH92DMG to the External Controller
	1st byte 2nd byte	Matching data (5AH)	9600 bps 9600 bps	- (Automatic baud rate adjustment) OK: Echo back data (5AH) Error: No data transmitted
	3rd byte 4th byte	Baud rate change data (Table 19-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (F0H)	Modified baud rate  Modified baud rate	OK: Echo back data (F0H) Error: A1H x 3, A3H x 3, 63H x 3 (Note 1)
	7th byte 8th byte	Password count storage address bit 15 to 08 (Note 4, 5)	Modified baud rate  Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	9th byte 10th byte	Password count storage address bit 07 to 00 (Note 4, 5)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
BOOT ROM	11th byte 12th byte	Password comparison start address bit 15 to 08 (Note 4, 5)	Modified baud rate Modified baud rate	OK) Nothing transmitted Error: Nothing transmitted
	13th byte 14th byte	Password comparison start address bit 07 to 00 (Note 4, 5)	Modified baud rate Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
	15th byte : m'th byte	Password string (Note 4, 5)	Modified baud rate  Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	n'th - 2 byte	Erase area specification (Note 2)	Modified baud rate	-
	n'th - 1 byte		Modified baud rate	OK: Checksum (Upper byte) (Note 3) Error: Nothing transmitted
	n'th byte		Modified baud rate	OK: Checksum (Lower byte) (Note 3) Error: Nothing transmitted
	n'th + 1 byte	(Wait for the next operation command data)	Modified baud rate	-

Note 1: "xxH x 3" indicates that the device enters the halt condition after transmitting 3 bytes of xxh.

Note 2: Refer to "19.13 Specifying the Erasure Area".

Note 3: Refer to "19.8 Checksum (SUM)"

Note 4: Refer to "19.10 Passwords".

Note 5: Do not transmit the password string for a blank product.

Note 6: When a password error occurs, TMP86FH92DMG stops UART communication and enters the halt mode. Therefore, when a password error occurs, initialize TMP86FH92DMG by the RESET pin and reactivate the serial PROM mode.

Note 7: If an error occurs during transfer of a password address or a password string, TMP86FH92DMG stops UART communication and enters the halt condition. Therefore, when a password error occurs, initialize TMP86FH92DMG by the RESET pin and reactivate the serial PROM mode.

Description of the flash memory erasing mode

- 1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.
- 2. The 5th byte of the received data contains the command data in the flash memory erasing mode (F0H).
- 3. When the 5th byte of the received data contains the operation command data shown in Table 19-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, F0H). If the 5th byte of the received data does not contain the operation command data, the device enters the halt condition after sending 3 bytes of the operation command error code (63H).
- 4. The 7th thorough m'th bytes of the transmitted and received data contain the same data as in the flash memory writing mode. In the case of a blank product, do not transmit a password string. (Do not transmit a dummy password string.)
- 5. The n'th 2 byte contains the erasure area specification data. The upper 4 bits and lower 4 bits specify the start address and end address of the erasure area, respectively. For the detailed description, see "19.13 Specifying the Erasure Area".
- 6. The n'th 1 byte and n'th byte contain the upper and lower bytes of the checksum, respectively. For how to calculate the checksum, refer to "19.8 Checksum (SUM)". Checksum is calculated unless a receiving error or Intel Hex format error occurs. After sending the end record, the external controller judges whether the transmission is completed correctly by receiving the checksum sent by the device.
- 7. After sending the checksum, the device waits for the next operation command data.



#### 19.6 Operation Mode

## 19.6.2 Flash Memory Writing Mode (Operation command: 30H)

Table 19-8 shows flash memory writing mode process.

Table 19-8 Flash Memory Writing Mode Process

	2						
	Transfer Byte	Transfer Data from External Controller to TMP86FH92DMG	Baud Rate	Transfer Data from TMP86FH92DMG to External Controller			
	1st byte 2nd byte	Matching data (5Ah)	9600 bps 9600 bps	(Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted			
	3rd byte 4th byte	Baud rate modification data (See Table 19-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)			
	5th byte 6th byte	Operation command data (30H)	Modified baud rate Modified baud rate	OK: Echo back data (30H)  Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)			
	7th byte 8th byte	Password count storage address bit 15 to 08 (Note 4)	Modified baud rate	OK: Nothing transmitted  Error: Nothing transmitted			
	9th byte 10th byte	Password count storage address bit 07 to 00 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted			
BOOT ROM	11th byte 12th byte	Password comparison start address bit 15 to 08 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted			
	13th byte 14th byte	Password comparison start address bit 07 to 00 (Note 4)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted			
	15th byte : m'th byte	Password string (Note 5)	Modified baud rate	OK: Nothing transmitted  Error: Nothing transmitted			
	m'th + 1 byte : n'th - 2 byte	Intel Hex format (binary) (Note 2)	Modified baud rate	-			
	n'th - 1 byte	-	Modified baud rate	OK: SUM (Upper byte) (Note 3) Error: Nothing transmitted			
	n'th byte		Modified baud rate	OK: SUM (Lower byte) (Note 3) Error: Nothing transmitted			
4	n'th + 1 byte	(Wait state for the next operation command data)	Modified baud rate	-			

Note 1: "xxH' × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to "19.7 Error Code".

- Note 2: Refer to "19.9 Intel Hex Format (Binary)".
- Note 3: Refer to "19.8 Checksum (SUM)".
- Note 4: Refer to "19.10 Passwords".
- Note 5: If addresses from FFE0H to FFFFH are filled with "FFH", the passwords are not compared because the device is considered as a blank product. Transmitting a password string is not required. Even in the case of a blank product, it is required to specify the password count storage address and the password comparison start address. Transmit these data from the external controller. If a password error occurs due to incorrect password count storage address or password comparison start address, TMP86FH92DMG stops UART communication and enters the halt condition. Therefore, when a password error occurs, initialize TMP86FH92DMG by the RESET pin and reactivate the serial ROM mode.
- Note 6: If the security program is enabled or a password error occurs, TMP86FH92DMG stops UART communication and enters the halt condition. In this case, initialize TMP86FH92DMG by the RESET pin and reactivate the serial ROM mode.

- Note 7: If an error occurs during the reception of a password address or a password string, TMP86FH92DMG stops UART communication and enters the halt condition. In this case, initialize TMP86FH92DMG by the RESET pin and reactivate the serial PROM mode.
- Note 8: Do not write only the address from FFE0H to FFFFH when all flash memory data is the same. If only these area are written, the subsequent operation can not be executed due to password error.
- Note 9: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

#### Description of the flash memory writing mode

- 1. The 1st byte of the received data contains the matching data. When the serial PROM mode is activated, TMP86FH92DMG (hereafter called device), waits to receive the matching data (5AH). Upon reception of the matching data, the device automatically adjusts the UART's initial baud rate to 9600 bps.
- 2. When receiving the matching data (5AH), the device transmits an echo back data (5AH) as the second byte data to the external controller. If the device can not recognize the matching data, it does not transmit the echo back data and waits for the matching data again with automatic baud rate adjustment. Therefore, the external controller should transmit the matching data repeatedly till the device transmits an echo back data. The transmission repetition count varies depending on the frequency of device. For details, refer to Table 19-5.
- 3. The 3rd byte of the received data contains the band rate modification data. The five types of band rate modification data shown in Table 19-4 are available. Even if band rate is not modified, the external controller should transmit the initial band rate data (28H: 9600 bps).
- 4. Only when the 3rd byte of the received data contains the baud rate modification data corresponding to the device's operating frequency, the device echoes back data the value which is the same data in the 4th byte position of the received data. After the echo back data is transmitted, baud rate modification becomes effective. If the 3rd byte of the received data does not contain the baud rate modification data, the device enters the halts condition after sending 3 bytes of baud rate modification error code (62H).
- 5. The 5th byte of the received data contains the command data (30H) to write the flash memory.
- 6. When the 5th byte of the received data contains the operation command data shown in Table 19-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, 30H). If the 5th byte of the received data does not contain the operation command data, the device enters the half condition after sending 3 bytes of the operation command error code (63H).
- 7. The 7th byte contains the data for 15 to 8 bits of the password count storage address. When the data received with the 7th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 8. The 9th byte contains the data for 7 to 0 bits of the password count storage address. When the data received with the 9th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 9. The 11th byte contains the data for 15 to 8 bits of the password comparison start address. When the data received with the 11th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 10. The 13th byte contains the data for 7 to 0 bits of the password comparison start address. When the data received with the 13th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 11. The 15th through m'th bytes contain the password data. The number of passwords becomes the data (N) stored in the password count storage address. The external password data is compared with N-byte data from the address specified by the password comparison start address. The external controller should send N-byte password data to the device. If the passwords do not match, the device enters the halt condition without returning an error code to the external controller. If the addresses from FFE0H to FFFFH are filled with "FFH", the passwords are not compared because the device is considered as a blank product.
- 12. The m'th + 1 through n'th 2 bytes of the received data contain the binary data in the Intel Hex format. No received data is echoed back to the external controller. After receiving the start mark (3AH for ":") in the Intel Hex format, the device starts data record reception. Therefore, the received data except 3AH is ignored until the start mark is received. After receiving the start mark, the device receives the data record, that consists of data length, address, record type, write data and checksum. Since the device

0.6 Operation Mode TMP86FH92DMG

starts checksum calculation after receiving an end record, the external controller should wait for the checksum after sending the end record. If a receiving error or Intel Hex format error occurs, the device enters the halts condition without returning an error code to the external controller.

13. The n'th - 1 and n'th bytes contain the checksum upper and lower bytes. For details on how to calculate the SUM, refer to "19.8 Checksum (SUM)". The checksum is calculated only when the end record is detected and no receiving error or Intel Hex format error occurs. After sending the end record, the external controller judges whether the transmission is completed correctly by receiving the checksum sent by the device.

14. After transmitting the checksum, the device waits for the next operation command data.



#### 19.6.3 RAM Loader Mode (Operation Command: 60H)

Table 19-9 shows RAM loader mode process.

Table 19-9 RAM Loader Mode Process

	Transfer Bytes	Transfer Data from External Controller to TMP86FH92DMG	Baud Rate	Transfer Data from TMP86FH92DMG to External Controller
	1st byte 2nd byte	Matching data (5AH) -	9600 bps 9600 bps	- (Automatic baud rate adjustment)  OK: Echo back data (5AH)  Error: Nothing transmitted
	3rd byte	Baud rate modification data (See Table 19-4)	9600 bps	
	4th byte	-	9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (60H) -	Modified baud rate Modified baud rate	OK: Echo back data (60H)  Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte 8th byte	Password count storage address bit 15 to 08 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	9th byte 10th byte	Password count storage address bit 07 to 00 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
BOOT ROM	11th byte 12th byte	Password comparison start address bit 15 to 08 (Note 4)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
	13th byte 14th byte	Password comparison start address bit 07 to 00 (Note 4)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
	15th byte	Password string (Note 5)	Modified baud rate	-
	m'th byte		7/5)	OK: Nothing transmitted Error: Nothing transmitted
	m'th + 1 byte	Intel Hex format (Binary) (Note 2)	Modified baud rate	-
	n'th - 2 byte		Modified baud rate	-
	n'th - 1 byte	D	Modified baud rate	OK: SUM (Upper byte) (Note 3) Error: Nothing transmitted
	n'th byte		Modified baud rate	OK: SUM (Lower byte) (Note 3) Error: Nothing transmitted
RAM		The program jumps to the start address	of RAM in which the first transfe	rred data is written.

- Note 1: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to "19.7 Error Code".
- Note 2: Refer to "19.9 Intel Hex Format (Binary)".
- Note 3: Refer to "19.8 Checksum (SUM)".
- Note 4: Refer to "19.10 Passwords".
- Note 5: If addresses from FFE0H to FFFFH are filled with "FFH", the passwords are not compared because the device is considered as a blank product. Transmitting a password string is not required. Even in the case of a blank product, it is required to specify the password count storage address and the password comparison start address. Transmit these data from the external controller. If a password error occurs due to incorrect password count storage address or password comparison start address, TMP86FH92DMG stops UART communication and enters the halt condition. Therefore, when a password error occurs, initialize TMP86FH92DMG by the RESET pin and reactivate the serial ROM mode.
- Note 6: After transmitting a password string, the external controller must not transmit only an end record. If receiving an end record after a password string, the device may not operate correctly.
- Note 7: If the security program is enabled or a password error occurs, TMP86FH92DMG stops UART communication and enters the halt condition. In this case, initialize TMP86FH92DMG by the RESET pin and reactivate the serial PROM mode.

P.6 Operation Mode TMP86FH92DMG

Note 8: If an error occurs during the reception of a password address or a password string, TMP86FH92DMG stops UART communication and enters the halt condition. In this case, initialize TMP86FH92DMG by the RESET pin and reactivate the serial PROM mode.

Note 9: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

#### Description of RAM loader mode

- 1. The 1st through 4th bytes of the transmitted and received data contains the same data as in the flash memory writing mode.
- 2. In the 5th byte of the received data contains the RAM loader command data (60H).
- 3. When the 5th byte of the received data contains the operation command data shown in Table 19-6, the device echoes back the value which is the same data in the 6th byte position (in this case, 60H). If the 5th byte does not contain the operation command data, the device enters the halt condition after sending 3 bytes of operation command error code (63H).
- 4. The 7th through m'th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.
- 5. The m'th + 1 through n'th 2 bytes of the received data contain the binary data in the Intel Hex format. No received data is echoed back to the external controller. After receiving the start mark (3AH for ":") in the Intel Hex format, the device starts data record reception. Therefore, the received data except 3AH is ignored until the start mark is received. After receiving the start mark, the device receives the data record, that consists of data length, address, record type, write data and checksum. The writing data of the data record is written into RAM specified by address. Since the device starts checksum calculation after receiving an end record, the external controller should wait for the checksum after sending the end record. If a receiving error of Intel Hex format error occurs, the device enters the halts condition without returning an error code to the external controller.
- 6. The n'th 1 and n'th bytes contain the checksum upper and lower bytes. For details on how to calculate the SUM, refer to "19.8 Checksum (SUM)". The checksum is calculated only when the end record is detected and no receiving error or Intel Hex format error occurs. After sending the end record, the external controller judges whether the transmission is completed correctly by receiving the checksum sent by the device.
- 7. After transmitting the checksum to the external controller, the boot program jumps to the RAM address that is specified by the first received data record.

### 19.6.4 Flash Memory SUM Output Mode (Operation Command: 90H)

Table 19-10 shows flash memory SUM output mode process.

Table 19-10 Flash Memory SUM Output Process

	Transfer Bytes	Transfer Data from External Control- ler to TMP86FH92DMG	Baud Rate	Transfer Data from TMP86FH92DMG to External Controller
	1st byte 2nd byte	Matching data (5AH)	9600 bps 9600 bps	- (Automatic baud rate adjustment) OK: Echo back data (5AH)
			. (	Error: Nothing transmitted
	3rd byte	Baud rate modification data (See Table 19-4)	9600 bps	
	4th byte	-	9600 bps	OK: Echo back data
				Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
BOOT	5th byte	Operation command data (90H)	Modified baud rate	-
ROM	6th byte	-	Modified baud rate	OK: Echo back data (90H)
				Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte	-	Modified baud rate	OK: SUM (Upper byte) (Note 2)
				Error: Nothing transmitted
	8th byte	-	Modified baud rate	OK: SUM (Lower byte) (Note 2)
				Error: Nothing transmitted
	9th byte	(Wait for the next operation command data)	Modified baud rate	

Note 1: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to "19.7 Error Code".

Note 2: Refer to "19.8 Checksum (SUM)".

Description of the flash memory SUM output mode

- 1. The 1st through 4th bytes of the transmitted and received data contains the same data as in the flash memory writing mode.
- 2. The 5th byte of the received data contains the command data in the flash memory SUM output mode (90H).
- 3. When the 5th byte of the received data contains the operation command data shown in Table 19-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, 90H). If the 5th byte of the received data does not contain the operation command data, the device enters the halt condition after transmitting 3 bytes of operation command error code (63H).
- 4. The 7th and the 8th bytes contain the upper and lower bits of the checksum, respectively. For how to calculate the checksum, refer to "19.8 Checksum (SUM)".
- After sending the checksum, the device waits for the next operation command data.

TMP86FH92DMG

#### 19.6.5 Product ID Code Output Mode (Operation Command: C0H)

Table 19-11 shows product ID code output mode process.

Table 19-11 Product ID Code Output Process

	Transfer Bytes	Transfer Data from External Controller to TMP86FH92DMG	Baud Rate	Transfer	Data from TMP86FH92DMG to External Controller
	1st byte 2nd byte	Matching data (5AH)	9600 bps 9600 bps	OK: Echo	atic baud rate adjustment) o back data (5AH) thing transmitted
	3rd byte 4th byte	Baud rate modification data (See Table 19-4)	9600 bps	1	o back data H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (C0H)	Modified baud rate Modified baud rate		back data (C0H) H × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte		Modified baud rate	ЗАН	Start mark
	8th byte	<	Modified baud rate	ФАН	The number of transfer data (from 9th to 18th bytes)
	9th byte		Modified baud rate	02H	Length of address (2 bytes)
	10th byte		Modified baud rate	1)DH	Reserved data
BOOT	11th byte	40	Modified baud rate	00Н	Reserved data
ROM	12th byte		Modified baud rate	00H	Reserved data
	13th byte		Modified baud rate	00H	Reserved data
	14th byte		Modified baud rate	01H	ROM block count (1 block)
	15th byte		Modified baud rate	C0H	First address of ROM (Upper byte)
	16th byte		Modified baud rate	00H	First address of ROM (Lower byte)
	17th byte		Modified baud rate	FFH	End address of ROM (Upper byte)
	18th byte		Modified baud rate	FFH	End address of ROM (Lower byte)
	19th byte		Modified baud rate	22H	Checksum of transferred data (9th through 18th byte)
	20th byte	(Wait for the next operation command data)	Modified baud rate	-	

Note: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to "19.7 Error Code".

Description of Product ID code output mode

- 1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.
- 2. The 5th byte of the received data contains the product ID code output mode command data (C0H).
- 3. When the 5th byte contains the operation command data shown in Table 19-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, C0H). If the 5th byte data does not contain the operation command data, the device enters the halt condition after sending 3 bytes of operation command error code (63H).
- 4. The 9th through 19th bytes contain the product ID code. For details, refer to "19.11 Product ID Code".
- 5. After sending the checksum, the device waits for the next operation command data.

#### 19.6.6 Flash Memory Status Output Mode (Operation Command: C3H)

Table 19-12 shows Flash memory status output mode process.

Table 19-12 Flash Memory Status Output Mode Process

	Transfer Bytes	Transfer Data from External Controller to TMP86FH92DMG	Baud Rate	Transfer Data from TMP86FH92DMG to External Controller
	1st byte 2nd byte	Matching data (5AH)	9600 bps 9600 bps	- (Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted
	3rd byte 4th byte	Baud rate modification data (See Table 19-4)	9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (C3H)	Modified baud rate Modified baud rate	OK: Echo back data (C3H) Error: A1H & 3, A3H & 3, 63H × 3 (Note 1)
	7th byte		Modified baud rate	3AH Start mark
	8th byte		Modified band rate	04H Byte count (from 9th to 12th byte)
BOOT ROM	9th byte		Modified baud rate	00H Status code 1 to 03H
	10th byte		Modified baud rate	00H Reserved data
	11th byte		Modified baud rate	00H Reserved data
	12th byte		Modified baud rate	00H Reserved data
	13th byte		Modified baud rate	Checksum 2's complement for the sum of 9th through 12th bytes 9th byte Checksum 00H: 00H 01H: FFH 02H: FEH 03H: FDH
	14th byte	(Wait for the next operation command data)	Modified baud rate	-

Note 1: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to "19.7 Error Code".

Note 2: For the details on status code 1, refer to "19.12 Flash Memory Status Code".

Description of Flash memory status output mode

- 1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the Flash memory writing mode.
- 2. The 5th byte of the received data contains the flash memory status output mode command data (C3H).
- 3. When the 5th byte contains the operation command data shown in Table 19-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, C3H). If the 5th byte does not contain the operation command data, the device enters the halt condition after sending 3 bytes of operation command error code (63H).
- 4. The 9th through 13th bytes contain the status code. For details on the status code, refer to "19.12 Flash Memory Status Code".
- 5. After sending the status code, the device waits for the next operation command data.

#### 19.6.7 Flash Memory security program Setting Mode (Operation Command: FAH)

Table 19-13 shows Flash memory security program setting mode process.

Table 19-13 Flash Memory security program Setting Mode Process

	Transfer Bytes	Transfer Data from External Control- ler to TMP86FH92DMG	Baud Rate	Transfer Data from TMP86FH92DMG to External Controller
	2nd byte - 9  3rd byte Baud rate modification data (See Table 19-4)		9600 bps 9600 bps	- (Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted
			9600 bps	OK; Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (FAH) -	Modified baud rate Modified baud rate	OK: Echo back data (FAH) Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte 8th byte	Password count storage address 15 to 08 (Note 2)	Modified baud rate Modified baud rate	OK: Nothing transmitted  Error: Nothing transmitted
BOOT ROM	9th byte 10th byte	Password count storage address 07 to 00 (Note 2)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	11th byte 12th byte	Password comparison start address 15 to 08 (Note 2)	Modified baud rate Modified baud rate	OK: Nothing transmitted  Error: Nothing transmitted
	13th byte 14th byte	Password comparison start address 07 to 00 (Note 2)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	15th byte : m'th byte	Password string (Note 2)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
	n'th byte		Modified baud rate	OK: FBH (Note 3) Error: Nothing transmitted
	n'+1th byte	(Wait for the next operation command data)	Modified baud rate	-

Note 1: "xxH.x 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to "19.7 Error Code".

Note 2: Refer to "19.10 Passwords".

Note 3: If the security program is enabled for a blank product or a password error occurs for a non-blank product, TMP86FH92DMG stops UART communication and enters the halt mode. In this case, initialize TMP86FH92DMG by the RESET pin and reactivate the serial PROM mode.

Note 4: If an error occurs during reception of a password address or a password string, TMP86FH92DMG stops UART communication and enters the halt mode. In this case, initialize TMP86FH92DMG by the RESET pin and reactivate the serial PROM mode.

Description of the Flash memory security program setting mode

- 1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the Flash memory writing mode.
- 2. The 5th byte of the received data contains the command data in the flash memory status output mode (FAH).

3. When the 5th byte of the received data contains the operation command data shown in Table 19-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, FAH). If the 5th byte does not contain the operation command data, the device enters the halt condition after transmitting 3 bytes of operation command error code (63H).

4. The 7th through m'th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.

5. The n'th byte contains the status to be transmitted to the external controller in the case of the successful security program.

9.7 Error Code TMP86FH92DMG

#### 19.7 Error Code

When detecting an error, the device transmits the error code to the external controller, as shown in Table 19-14.

Table 19-14 Error Code

Transmit Data	Meaning of Error Data
62H, 62H, 62H	Baud rate modification error.
63H, 63H, 63H	Operation command error.
A1H, A1H, A1H	Framing error in the received data.
A3H, A3H, A3H	Overrun error in the received data:

Note: If a password error occurs, TMP86FH92DMG does not transmit an error code.


## 19.8 Checksum (SUM)

#### 19.8.1 Calculation Method

The checksum (SUM) is calculated with the sum of all bytes, and the obtained result is returned as a word.

The data is read for each byte unit and the calculated result is returned as a word.

Example:

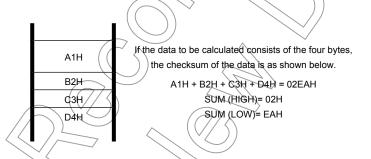

The checksum which is transmitted by executing the flash memory write command, RAM loader command, or flash memory SUM output command is calculated in the manner, as shown above.

### 19.8.2 Calculation data

The data used to calculate the checksum is listed in Table 19-15.

Table 19-15 Checksum Calculation Data

Table 19-15 Checksum Cald	culation Data			
Operating Mode	Calculation Data	Description		
Flash memory writing mode		Even when a part of the tlash memory is written, the checksum		
Flash memory SUM output mode	Data in the entire area of the flash memory	of the entire flash memory area (C000H to FFFH) is calculate The data length, address, record type and checksum in Intel Hex format are not included in the checksum.		
RAM loader mode	RAM data written in the first received RAM address through the last received RAM address	The length of data, address, record type and checksum in Intel Hex format are not included in the checksum.		
Product ID Code output mode	9th through 18th bytes of the transferred data	For details, refer to "19.11 Product ID Code".		
Flash Memory Status Output mode	9th through 12th bytes of the transferred data	For details, refer to "19.12 Flash Memory Status Code"		
Flash Memory Erasing mode	All data in the erased area of the flash memory (the whole or part of the flash memory)	When the sector erase is executed, only the erased area is used to calculate the checksum. In the case of the chip erase, an entire area of the flash memory is used.		

TMP86FH92DMG

#### 19.9 Intel Hex Format (Binary)

#### 19.9 Intel Hex Format (Binary)

- 1. After receiving the checksum of a data record, the device waits for the start mark (3AH ":") of the next data record. After receiving the checksum of a data record, the device ignores the data except 3AH transmitted by the external controller.
- 2. After transmitting the checksum of end record, the external controller must transmit nothing, and wait for the 2-byte receive data (upper and lower bytes of the checksum).
- 3. If a receiving error or Intel Hex format error occurs, the device enters the halt condition without returning an error code to the external controller. The Intel Hex format error occurs in the following case:

When the record type is not 00H, 01H, or 02H

When a checksum error occurs

When the data length of an extended record (record type = 02H) is not 02H

When the device receives the data record after receiving an extended record (record type = 02H) with extended address of 1000H or larger.

When the data length of the end record (record type = 01H) is not 00H

#### 19.10 Passwords

The consecutive eight or more-byte data in the flash memory area can be specified to the password. TMP86FH92DMG compares the data string specified to the password with the password string transmitted from the external controller. The area in which passwords can be specified is located at addresses C000H to FF9FH. The area from FFA0H to FFFFH can not be specified as the passwords area.

If addresses from FFE0H through FFFFH are filled with "FFH", the passwords are not compared because the product is considered as a blank product. Even in this case, the password count storage addresses and password comparison start address must be specified. Table 19-16 shows the password setting in the blank product and non-blank product.

Table 19-16 Password Setting in the Blank Product and Non-Blank Product

Password	Blank Product (Note 1)	Non-Blank Product
PNSA (Password count storage address)	C000H≤PNSA \$ FF9FH	C000H ≤ PNSA ≤ FF9FH
PCSA (Password comparison start address)	C000H ≤ RCSA ≤ FF9FH	C000H ≤ PCSA ≤ FFA0 - N
N (Password count)	·	8 ≤ N
Password string setting	Not required (Note 5)	Required (Note 2)

Note 1: When addresses from FFE0H through FFFFH are filled with "FFH", the product is recognized as a blank product.

Note 2: The data including the same consecutive data (three or more bytes) can not be used as a password. (This causes a password error data. TMP86FH92DMG transmits no data and enters the halt condition.)

Note 3: \*: Don't care.

Note 4: When the above condition is not met, a password error occurs. If a password error occurs, the device enters the halt condition without returning the error code.

Note 5: In the flash memory writing mode or RAM loader mode, the blank product receives the Intel Hex format data immediately after receiving PCSA without receiving password strings. In this case, the subsequent processing is performed correctly because the blank product ignores the data except the start mark (3AH ":") as the Intel Hex format data, even if the external controller transmits the dummy password string. However, if the dummy password string contains "3AH", it is detected as the start mark erroneously. The microcontroller enters the halt mode. If this causes the problem, do not transmit the dummy password strings.

Note 6: In the flash memory erasing mode, the external controller must not transmit the password string for the blank product.

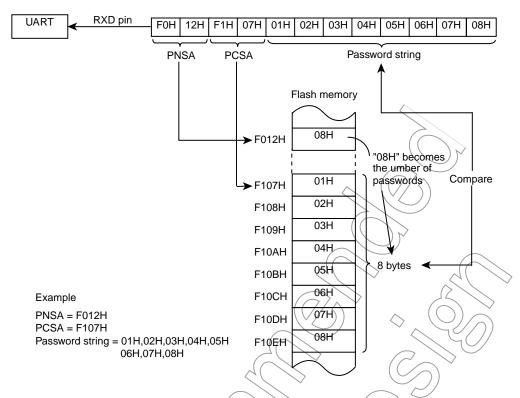


Figure 19-5 Password Comparison

#### 19.10.1 Password String

The password string transmitted from the external controller is compared with the specified data in the flash memory. When the password string is not matched to the data in the flash memory, the device enters the halt condition due to the password error.

#### 19.10.2 Handling of Password Error

If a password error occurs, the device enters the halt condition. In this case, reset the device to reactivate the serial PROM mode.

## 19.10.3 Password Management during Program Development

If a program is modified many times in the development stage, confusion may arise as to the password. Therefore, it is recommended to use a fixed password in the program development stage.

Example : Specify PNSA to F000H, and the password string to 8 bytes from address F001H (PCSA becomes F001H.)

Password Section code abs = 0F000H

DB 08H : PNSA definition

DB "CODE1234" : Password string definition

19. Serial PROM Mode19.11 Product ID Code

TMP86FH92DMG

#### 19.11 Product ID Code

The product ID code is the 13-byte data containing the start address and the end address of ROM. Table 19-17 shows the product ID code format.

Table 19-17 Product ID Code Format

Data	Description	In the Case of MP86FH92DMG
1st	Start Mark (3AH)	3AH )
2nd	The number of transfer data (10 bytes from 3rd to 12th byte)	9AH
3rd	Address length (2 bytes)	02H
4th	Reserved data	1DH
5th	Reserved data	00H
6th	Reserved data	00H
7th	Reserved data	00Н
8th	ROM block count	01H
9th	The first address of ROM (Upper byte)	COH
10th	The first address of ROM (Lower byte)	60H
11th	The end address of ROM (Upper byte)	EFH
12th	The end address of ROM (Lower byte)	FFH
13th	Checksum of the transferred data (2's compliment for the sum of 3rd through 12th bytes)	22H

## 19.12 Flash Memory Status Code

The flash memory status code is the 7-byte data including the security program status and the status of the data from FFE0H to FFFFH. Table 19-18 shows the flash memory status code.

Table 19-18 Flash Memory Status Code

	Data	Description	In the Cas TMP86FH9		
	1st	Start mark	3AH		
	2nd	Transferred data count (3rd through 6th byte)	04H		
/ / /	3rd	Status code	00H to 0 (See figure		
	4th	Reserved data	00H		
	5th	Reserved data	00H		
	6th	Reserved data	00H		
>	7th	Checksum of the transferred data (2's compliment for the sum of 3rd through 6th data)	3rd byte 00H 01H 02H 03H	checksum 00H FFH FEH FDH	

#### Status Code 1



RPENA	Flash memory security program status	0: 1:	Security program is disabled. Security program is enabled.
BLANK	The status from FFE0H to FFFFH.	0: 1:	All data is FFH in the area from FFE0H to FFFFH.  The value except FFH is included in the area from FFE0H to FFFFH.

Some operation commands are limited by the flash memory status code 1. If the security program is enabled, flash memory writing mode command and RAM loader mode command can not be executed. Erase all flash memory before executing these command.

RPENA	BLANK	Flash Memory Writing Mode	RAM Loader Mode	Flash memory SUM Output Mode	Product ID Code Output Mode	Flash Memory Status Output Mode		Memory g Mode Sector Erase	Security pro- gram Setting Mode
0	0	0	0	0 1	Q	0 (		0	×
0	1	Pass	Pass	0	O		// Pa	ass	Pass
1	0	×	×	6	V 0	(9/1	0	×	×
1	1	×	×	0	0		Pass	×	Pass

Note: O: The command can be executed.

Pass: The command can be executed with a password.

×: The command can not be executed.

(After echoing the command back to the external controller, TMP86FH92DMG stops UART communication and enters the halt condition.)


#### 19.13 Specifying the Erasure Area

In the flash memory erasing mode, the erasure area of the flash memory is specified by n-2 byte data.

The start address of an erasure area is specified by ERASTA, and the end address is specified by ERAEND.

If ERASTA is equal to or smaller than ERAEND, the sector erase (erasure in 4 kbyte units) is executed. Executing the sector erase while the security program is enabled results in an infinite loop.

If ERASTA is larger than ERAEND, the chip erase (erasure of an entire flash memory area) is executed and the security program is disabled. Therefore, execute the chip erase (not sector erase) to disable the security program.

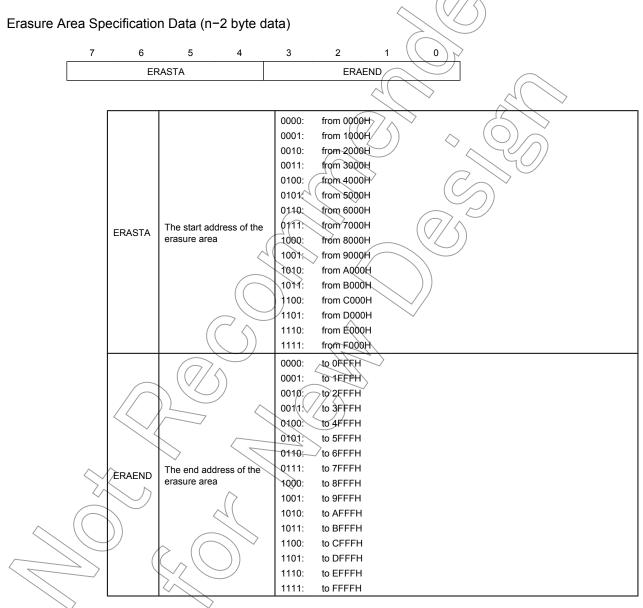


Note: When the sector erase is executed for the area containing no flash cell, TMP86FH92DMG stops the UART communication and enters the halt condition.

## 19.14 Port Input Control Register

In the serial PROM mode, the input level is fixed to the all ports except P00 and P01 ports with a hardware feature to prevent overlap current to unused ports. (All port inputs and peripheral function inputs shared with the ports become invalid.) Therefore, to access to the flash memory in the RAM loader mode without UART communication, port inputs must be valid. To make port inputs valid, set the pin of the port input control register (SPCR) to "1".

The SPCR register is not operated in the MCU mode.


#### Port Input Control Register



Note 1: The SPCR register can be read or written only in the serial PROM mode. When the write instruction is executed to the SPCR register in the MCU mode, the port input control can not be performed. When the read instruction is executed for the SPCR register in the MCU mode, read data of bit7 to 1 are unstable.

Note 2: All I/O ports except P00 and P01 ports are controlled by the SPCR register.

### 19.15 Flowchart

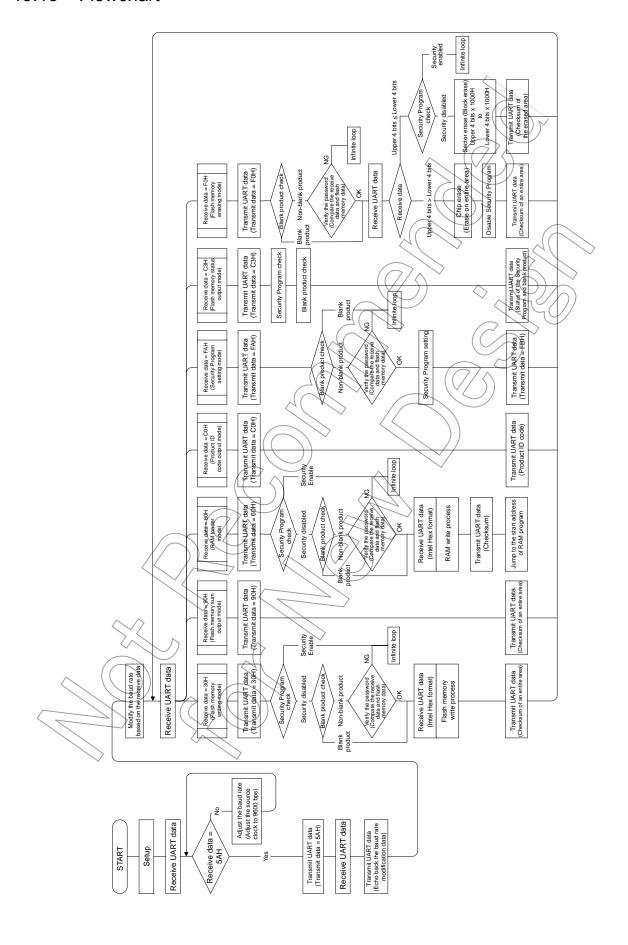


## 19.16 UART Timing

Table 19-19 UART Timing-1 (VDD = 4.5 to 5.5 V, fc = 2 to 16 MHz, Topr = -10 to  $40^{\circ}\text{C}$ )

Description	O. made al	Clask Francisco (fa)	Minimum Required Time		
Parameter	Symbol	Clock Frequency (fc)	At fc = 2 MHz	At fc = 16 MHz	
Time from matching data reception to the echo back	CMeb1	Approx. 930	465 µs	58.1 μs	
Time from baud rate modification data reception to the echo back	CMeb2	Approx. 980	490 µs	61.3 µs	
Time from operation command reception to the echo back	CMeb3	Approx. 800	400 μs	50 μs	
Checksum calculation time	CKsm	Approx. 7864500	3.93 s	491.5 μs	
Erasure time of an entire flash memory	CEall	- >	30 ms	30 ms	
Erasure time for a sector of a flash memory (in 4-kbyte units)	CEsec	- ((	15 ms	15 ms	

Table 19-20 UART Timing-2 (VDD = 4.5 to 5.5 V, fc = 2 to 16 MHz, Topr = -10 to 40°C)

		. / / ^ ~	. /	7
Parameter	Symbol	Cleck Frequency (fc)	Minimum Re	At fc = 16 MHz
Time from the reset release to the acceptance of start bit of RXD pin	RXsup	2100	1.05 ms	131.3 ms
Matching data transmission interval	CMtr1	28500	14.2 ms	1.78 ms
Time from the echo back of matching data to the acceptance of baud rate modification data	CMtr2	380	190 µs	23.8 µs
Time from the echo back of baud rate modification data to the acceptance of an operation command	CMtr3	650	325 μs	40.6 μs
Time from the echo back of operation command to the acceptance of password count storage addresses (Upper byte)	CMtr4	800	400 µs	50 µs

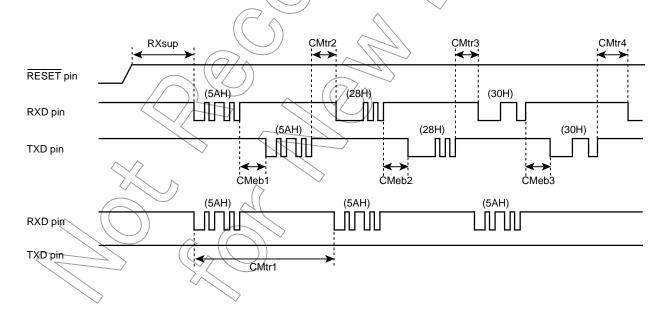




TOSHIBA TMP86FH92DMG

# 20. Input/Output Circuitry


#### 20.1 Control Pins


The input/output circuitries of the TMP86FH92DMG control pins are shown delow.

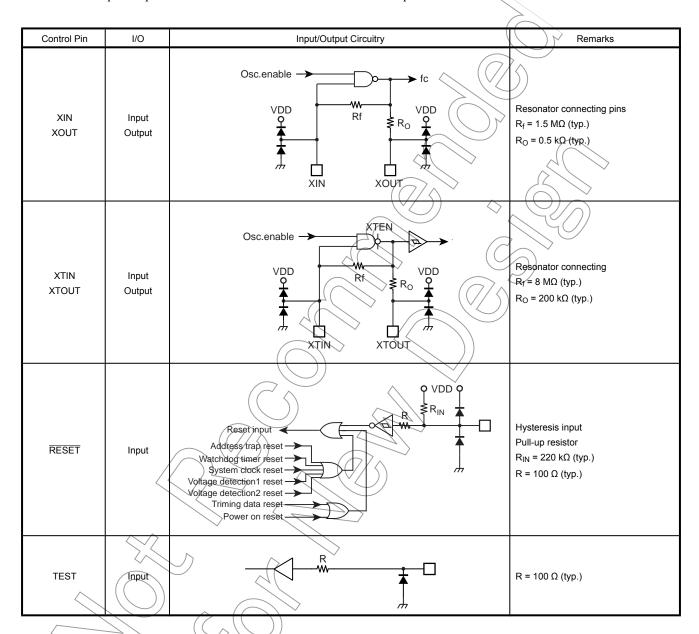

Note: The Test pins of TMP86FH92DMG does not have a pull-down resistor and diode(D1). Fix the TEST pin at Low level in MCU mode.

## 20.2 Input/Output Ports

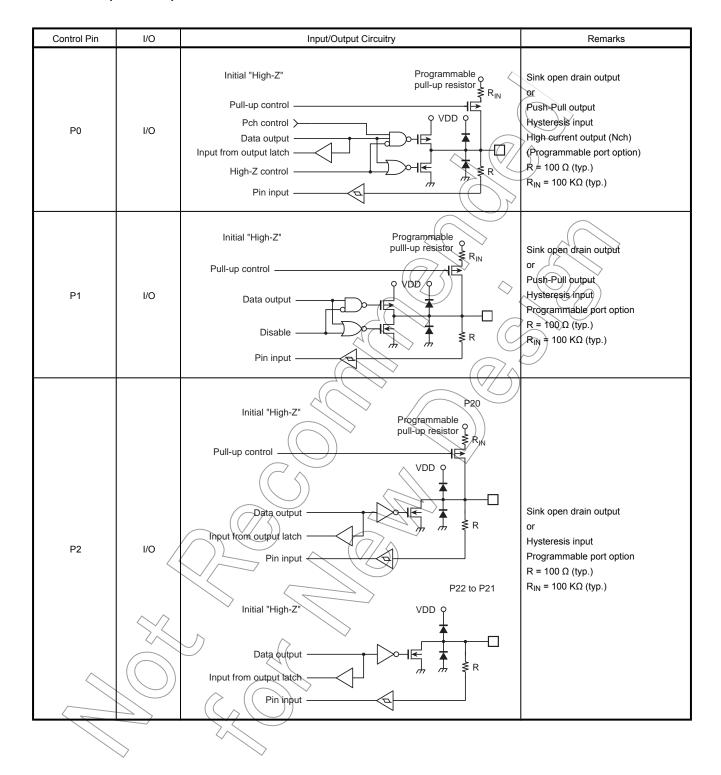

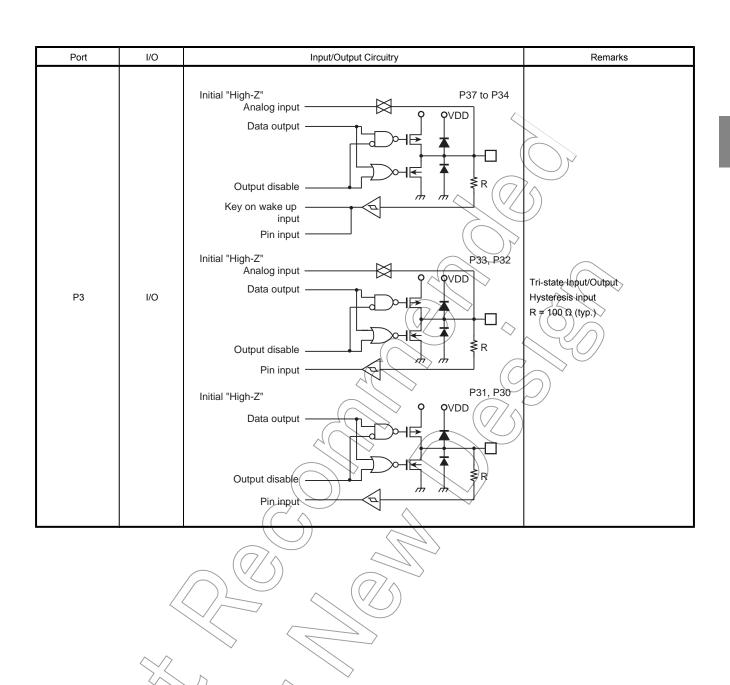



TOSHIBA TMP86FH92DMG

## 21. Electrical Characteristics

## 21.1 Absolute Maximum Ratings

The absolute maximum ratings are rated values which must not be exceeded during operation, even for an instant. Any one of the ratings must not be exceeded. If any absolute maximum rating is exceeded, a device may break down or its performance may be degraded, causing it to catch fire or explode resulting in injury to the user. Thus, when designing products which include this device, ensure that no absolute maximum rating value will ever be exceeded.

	·			(VSS = 0 V)
Parameter	Symbol	Pins	Ratings	Unit
Supply voltage	V <sub>DD</sub>		-0.3 to 6.0	٧
Input voltage	V <sub>IN</sub>		-0.3 to V <sub>DD</sub> + 0.3	٧
Output voltage	V <sub>OUT1</sub>		-0.3 to V <sub>DD</sub> + 0.3	> v
	I <sub>OUT1</sub>	P0, P1, P3 ports	-4.8	
Output current (Per 1 pin)	I <sub>OUT2</sub>	P1, P2, P3 ports	32	
	I <sub>OUT3</sub>	P0 ports	30	A
	Σ I <sub>OUT1</sub>	P0, P1, P3 ports	30	mA
Output current (Total)	Σ I <sub>OUT2</sub>	P1, P2, P3 ports	) 60	
	Σ I <sub>OUT3</sub>	P0 ports	80	
Power dissipation [Topr = 85 °C]	P <sub>D</sub>		200	mW
Soldering temperature (time)	Tsld		260 (10 s)	
Storage temperature	Tstg		-55 to 125	°C
Operating temperature	Topr ((		-40 to 85	

21.2 Operating Conditions TMP86FH92DMG

### 21.2 Operating Conditions

The Operating Conditions show the conditions under which the device be used in order for it to operate normally while maintaining its quality. If the device is used outside the range of Operating Conditions (power supply voltage, operating temperature range, or AC/DC rated values), it may operate erratically. Therefore, when designing your application equipment, always make sure its intended working conditions will not exceed the range of Operating Conditions.

#### 21.2.1 MCU mode (Flash Programming or erasing)

 $V_{SS} = 0 \text{ V}, \text{ Topr} = -10 \text{ to } 40^{\circ}\text{C})$ 

Parameter	Symbol	Pins	Ratings	Ntin.	Max	Unit
Supply voltage	V <sub>DD</sub>		NORMAL1, 2 modes	4.5	5.5	
Lea distribute at	V <sub>IH1</sub>	Except hysteresis input	V MEN	V <sub>DD</sub> × 0.70	4	>
Input high level	V <sub>IH2</sub>	Hysteresis input	V <sub>DD</sub> ≥ 4.5 V	V <sub>DD</sub> × 0.75	VDD	٧
Innut low lovel	V <sub>IL1</sub>	Except hysteresis input	V <sub>DD</sub> ≥ 4.5 V		V <sub>DD</sub> × 0.30	
Input low level	V <sub>IL2</sub>	Hysteresis input	V <sub>DD</sub> 2 4.5 V	0	V <sub>DD</sub> × 0/25	
Clock frequency	fc	XIN, XOUT	7(>>	1.0	16.0	MHz

## 21.2.2 MCU mode (Except Flash Programming or erasing)

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -40 \text{ to } 85^{\circ}\text{C})$ 

8					(*3	S - 0 V, TOPI					
Parameter	Symbol	Pins	<i>))</i> F	Ratings	Min	Max	Unit				
			fc = 16 MHz	NORMAL1, 2 modes IDLE0, 1, 2 modes	4.0						
Supply voltage			fc = 8 MHz	NORMAL1, 2 modes		5.5					
(Condition 1)			fs = 32.768 KHz	SLOW1, 2 modes SLEEP0, 1, 2 modes	3.0						
	V <sub>DD</sub>		STQP mode				V				
Supply voltage			fc = 8 MHz	NORMAL1, 2 modes IDLE0, 1, 2 modes							
(Condition 2) (Note)		$\rightarrow$	fs = 32.768 KHz	SLOW1, 2 modes SLEEP0, 1, 2 modes	2.7	3.0					
		$\langle \langle \langle \rangle \rangle \rangle$	STOP mode								
	YIH1	Except hysteresis input	V >4.0V		V <sub>DD</sub> × 0.70						
Input high level	V <sub>IH2</sub>	Hysteresis input	V <sub>DD</sub> ≥ 4.0V		V <sub>DD</sub> × 0.75	V <sub>DD</sub>	V				
	V <sub>IH3</sub>		V <sub>DD</sub> < 4.0V		V <sub>DD</sub> × 0.90						
	V <sub>IL1</sub>	Except hysteresis input	V >4.0V			V <sub>DD</sub> × 0.30					
Input low level	V <sub>IL2</sub>	Hysteresis input	V <sub>DD</sub> ≥ 4.0V		0	V <sub>DD</sub> × 0.25	V				
	V <sub>IL3</sub>		V <sub>DD</sub> < 4.0V			V <sub>DD</sub> × 0.10					
	fo	VIN VOLIT	V <sub>DD</sub> = 2.7 to 5.5V		1.0	8.0	NAL I-				
Clock frequency	fc	V <sub>DD</sub> = 4.0 to 5.5V			V <sub>DD</sub> = 4.0 to 5.5V		V <sub>DD</sub> = 4.0 to 5.5V		1.0	16.0	MHz
	fs	XTIN, XTOUT	V <sub>DD</sub> = 2.7 to 5.5V		30.0	34.0	kHz				

Note: When the supply voltage VDD is less than 3.0V, the operating temperature Topr must be in a range of -20°C to 85°C

### 21.2.3 Serial PROM mode

(V<sub>SS</sub> = 0 V, Topr = -10 to 40 °C)

Parameter	Symbol	Pins	s Condition		Max	Unit
Supply voltage	$V_{DD}$		NORMAL1, 2 modes	4/.5	5.5	
la avid biala valda a a	V <sub>IH1</sub>	Except hysteresis input	V <sub>DD</sub> ≥ 4.5 V	V <sub>DD</sub> × 0.70	V	
Input high voltage	V <sub>IH2</sub>	Hysteresis input	V <sub>DD</sub> ≥ 4.5 V	V <sub>DD</sub> × 0.75	V <sub>DD</sub>	V
land law saltana	V <sub>IL1</sub>	Except hysteresis input	V <sub>DD</sub> ≥ 4.5 V		V <sub>DD</sub> × 0.30	
Input low voltage	V <sub>IL2</sub>	Hysteresis input	V <sub>DD</sub> ≥ 4.5 V		V <sub>DD</sub> × 0.25	
Clock frequency	fc	XIN, XOUT		2.0	16.0	MHz



## 21.3 DC Characteristics

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -40 \text{ to } 85 ^{\circ}\text{C})$ 

Parameter	Symbol	Pins	Condition	Min	Тур.	Max	Unit
Hysteresis voltage	V <sub>HS</sub>	Hysteresis input	V <sub>DD</sub> = 5.0V		0.9	-	V
	I <sub>IN1</sub>	TEST					
Input current	I <sub>IN2</sub>	Sink open drain, tri - state port	V <sub>DD</sub> = 5.5 V, V <sub>IN</sub> = 5.5 V/0 V	$((\cdot)$	7 -	±2	μA
	I <sub>IN3</sub>	RESET	V <sub>DD</sub> = 5.5 V, V <sub>IN</sub> = 5.5 V				
Innut registance	R <sub>IN1</sub>	RESET pull - up	V <sub>DD</sub> = 5.5 V, V <sub>IN</sub> = 0 V	100	200	450	kΩ
Input resistance	R <sub>IN2</sub>	PORT pull - up	V <sub>DD</sub> = 5.5 V, V <sub>IN</sub> = 0 V	50	100	200	kΩ
Output leakage current	I <sub>LO0</sub>	P0,P1,P2,P3	V <sub>DD</sub> = 5.5 V, V <sub>OUT</sub> = 5.3 V/0.2 V	-	-	±2	μA
Output high voltage	V <sub>OH</sub>	P0,P1,P2,P3	V <sub>DD</sub> = 4.5 V, I <sub>OH</sub> = -0.7 mA	4.1	-	-	V
Output low voltage	V <sub>OL</sub>	Except P0	V <sub>DD</sub> = 4.5 V, I <sub>OL</sub> = 1.6 mA	-	( <del>-</del>	0.4	V
Output low current	I <sub>OL</sub>	High current port (P0 Port)	V <sub>DD</sub> = 4.5 V, V <sub>OC</sub> = 1.0 V	- (2	20	-	mA
Supply current in			When a program operates on flash memory (Note4,5)		12.5	20	
NORMAL1, 2 modes			V <sub>IN</sub> = 5:3 V/0.2 V When a program operates on RAM		7.5	14	mA
Supply current in			fs = 32.768 kHz		5.5	9	
IDLE 0, 1, 2 modes				1			
			When a program operates on flash memory (Note4,5)	-	22	65	
Supply current in SLOW1 mode	I <sub>DD</sub>		When a program operates on RAM (FLSSTB <fstb>= VDD = 3.0 V 0)</fstb>	-	21	30	
			V <sub>IN</sub> = 2.8 V/0.2 V When a program operates on RAM (FLSSTB <fstb>= 1)</fstb>	-	16	25	μA
Supply current in SLEEP1 mode				-	14	22	
Supply current in SLEEP0 mode				-	12	20	
Supply current in STOP mode	\ <u>\</u>		V <sub>DD</sub> = 5.5 V V <sub>IN</sub> = 5.3 V/0.2 V	-	10	20	
Peak current of inter-		7	V <sub>DD</sub> = 5.5 V	-	10	-	
mittent operation (Note4,5)	MDDP-P		V <sub>DD</sub> = 3.0 V	-	2	-	mA

Note 1: Typical values show those at Topr = 25 °C and  $V_{DD} = 5$  V.

Note 2: Input current (I<sub>IN3</sub>): The current through pull-up or pull-down resistor is not included.

Note 3: The supply currents of \$LOW2 and SLEEP2 modes are equivalent to those of IDLE0, IDLE1 and IDLE2 modes.

Note 4: When a program is executing in the flash memory or when data is being read from the flash memory, the flash memory operates in an intermittent manner, causing peak currents in the operation current, as shown in Figure 21-1.

In this case, the supply current I<sub>DD</sub> (in NORMAL1, NORMAL2 and SLOW1 modes) is defined as the sum of the average peak current and MCU current.

Note 5: When designing the power supply, make sure that peak currents can be supplied. In SLOW1 mode, the difference between the peak current and the average current becomes large.

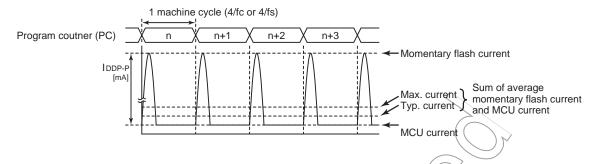


Figure 21-1 Intermittent Operation of Flash Memory




### 21.4 AD Conversion Characteristics

 $(Topr = -40 \text{ to } 85^{\circ}C)$ 

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Analog input voltage	V <sub>AIN</sub>		V <sub>SS</sub>	-	$V_{DD}$	٧
Non linearity error			-	2-	±6	
Zero point error		V <sub>DD</sub> = 3.0V/5.0 V	-	((-)p	±6	LOD
Full scale error		V <sub>SS</sub> = 0.0 V	- (-		±6	LSB
Total error			~ · (()	/ \ \-	±6	

- Note 1: The total error includes all errors except a quantization error, and is defined as a maximum deviation from the ideal conversion line.
- Note 2: Conversion time is different in recommended value by power supply voltage.
- Note 3: The voltage to be input on the AIN input pin must not exceed the range between V<sub>DD</sub> and V<sub>SS</sub>. If a voltage outside this range is input, conversion values will become unstable and conversion values of other channels will also be affected.
- Note 4: When the supply voltage VDD is less than 3.0V, the operating temperature Topr must be in a range of −20°C to 85°C.

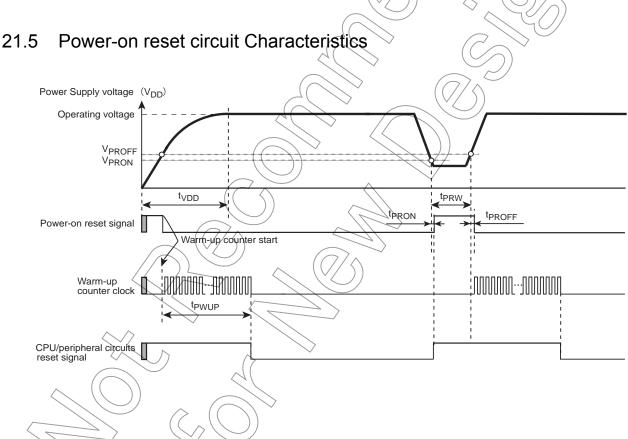

Note: The power-on reset circuit may not operate properly depending on transitions in supply voltage (VDD). When designing your application system, careful consideration must be given to ensure proper operation of the power-on reset circuit by referring to the device's electrical characteristics.


Figure 21-2 Operation of the Power-on reset circuit

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -40 \text{ to } 85 ^{\circ}\text{C})$ 

Symbol	Parameter	Min	Тур.	Max	Unit
V <sub>PROFF</sub>	Power-on reset release voltage (Note1)	2.2	2.4	2.6	V
V <sub>PRON</sub>	Power-on reset threshold voltage (Note1)	2.0	2.2	2.3	V
t <sub>PROFF</sub>	Power-on reset release response time	-	0.01	ð.	
t <sub>PRON</sub>	Power-on reset generation response time	-	0.01	(0.1)	>
t <sub>PRW</sub>	Power-on reset minimum pulse width	1.0	-		ms
t <sub>PWUP</sub>	Power-on warm-up time	9.0	15.0	48.0	
t <sub>VDD</sub>	Power-on reset	-		5	

- Note 1: Because the power-on reset releasing voltage and the power-on reset detecting voltage change relative to one another, the detected voltage will never become inverted.
- Note 2: The input clock to the warm-up counter is derived from the oscillation circuit. Because the oscillation frequency is unstable until the oscillation circuit stabilizes, the warm-up time includes error.
- Note 3: The supply voltage must be raised to satisfy the condition typD < tpwup.

## 21.6 Voltage detection circuit characteristics

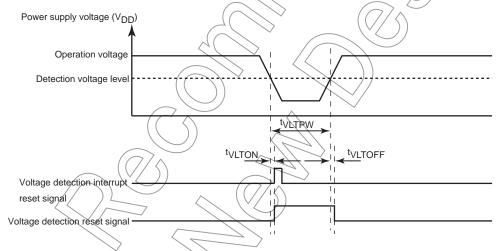

Note: The voltage detection circuit may not operate properly depending on transitions in supply voltage (VDD). When designing your application system, careful consideration must be given to ensure proper operation of the voltage detection circuit by referring to the device's electrical characteristics.

Figure 21-3 Operation timing of Voltage detection circuit

 $(V_{SS} = 0 \text{ V}, \text{Topr} = -40 \text{ to } 85 ^{\circ}\text{C})$ 

Symbol	Parameter	Min	Тур.	Max	Unit
t <sub>VLTOFF</sub>	Voltage detection release response time	-	0.01	0.1	
$t_{VLTON}$	Voltage detection response time	-	0.01	0.1	ms
t <sub>VLTPW</sub>	Voltage detection minimum pulse width	1.0	-	-	

### 21.7 AC Characteristics

 $(V_{SS} = 0 \text{ V}, 4.0 \text{ V} \le V_{DD} \le 5.5 \text{ V}, \text{ Topr} = -40 \text{ to } 85^{\circ}\text{C})$ 

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
		NORMAL1, 2 modes			4	
Markey and Con-		IDLE0, 1, 2 modes	0.25			
Machine cycle time	tcy	SLOW1, 2 modes	447.0	( )	422.2	μs
		SLEEP0, 1, 2 modes	117.6		133.3	
High-level clock pulse width	t <sub>WCH</sub>	For external clock operation (XIN input)	(7/	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		
Low-level clock pulse width	t <sub>WCL</sub>	fc = 16 MHz		31.25	-	ns
High-level clock pulse width	t <sub>WSH</sub>	For external clock operation (XTIN input)		45.00		
Low-level clock pulse width	t <sub>WSL</sub>	fs = 32.768 kHz		15.26	ı	μs

 $(V_{SS} = 0 \text{ V}, 3.0 \text{ V} \le V_{pp} \le 5.5 \text{ V}, \text{ Topr} = -40 \text{ to } 85^{\circ}\text{C})$ 

Parameter	Symbol	Condition ((// 🖒	Min	Typ.	Max	Unit
		NORMAL1, 2 modes		~~~//	()	
Market and the Control		IDLE0, 1, 2 modes	0.5	7	4	
Machine cycle time	tcy	SLOW1, 2 modes	447(0)		100.0	μs
		SLEEP0, 1, 2 modes	117\6		133.3	
High-level clock pulse width	t <sub>WCH</sub>	For external clock operation (XIN input)	$(7/\wedge$	20.5		
Low-level clock pulse width	t <sub>WCL</sub>	fc = 8 MHz		62.5	-	ns
High-level clock pulse width	t <sub>WSH</sub>	For external clock operation (XTIN input)		45.00		
Low-level clock pulse width	t <sub>WSL</sub>	fs = 32.768 kHz	))-	15.26	-	μs

 $(V_{SS} = 0 \text{ V}, 2.7 \text{ V} \le V_{DD} < 3.0 \text{ V}, \text{Topr} = -20 \text{ to } 85^{\circ}\text{C})$ 

	_		,			
Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Machine cycle time		NORMAL1, 2 modes	0.5	1	4	
	toy	SLEEP0, 1, 2 modes	117.6	1	133.3	μs
High-level clock pulse width  Low-level clock pulse width	t <sub>WCH</sub>	For external clock operation (XIN input) fc = 8 MHz	-	62.5	-	ns
High-level clock pulse width	t <sub>WSH</sub>	For external clock operation (XTIN input)	_	15.26	_	μs
Low-level clock pulse width	t <sub>WSL</sub>	fs = 32.768 kHz	-	13.20	-	μδ

## 21.8 Flash Characteristics


### 21.8.1 Write/Erase Characteristics

 $(V_{SS} = 0 V)$ 


Parameter	Condition	Min	Тур.	Max.	Unit
Number of guaranteed writes to flash memory	V <sub>SS</sub> = 0 V, Topr = -10 to 40°C	-	-	100	Times

Note: To rewrite data to Flash memory addresses at which data is already written, make sure to erase the existing data before rewriting data.

## 21.9 Oscillating Conditions

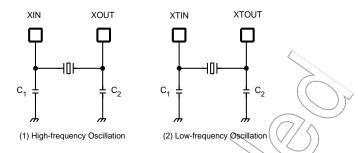

Note 1: To ensure stable oscillation, the resonator position, load capacitance, etc. must be appropriate. Because these factors are greatly affected by board patterns, please be sure to evaluate operation on the board on which the device will actually be mounted.





### 21.10 Handling Precaution

- The solderability test conditions are shown below.

1. When using the Sn-37Pb solder bath

Solder bath temperature =  $230^{\circ}$ C

Dipping time = 5 seconds

Number of times = once

R-type flux used

2. When using the Sn-3.0Ag-0.5Cu solder bath

Solder bath temperature =  $245^{\circ}$ C

Dipping time = 5 seconds

Number of times = once

R-type flux used

The pass criteron of the above test is as follows: Solderability rate until forming \$\geq 95\%


- When using the device (oscillator) in places exposed to high electric fields such as cathode-ray tubes, we recommend electrically shielding the package in order to maintain normal operating condition.



TOSHIBA TMP86FH92DMG

# 22. Package Dimensions

SSOP30-P-56-0.65 Rev 02

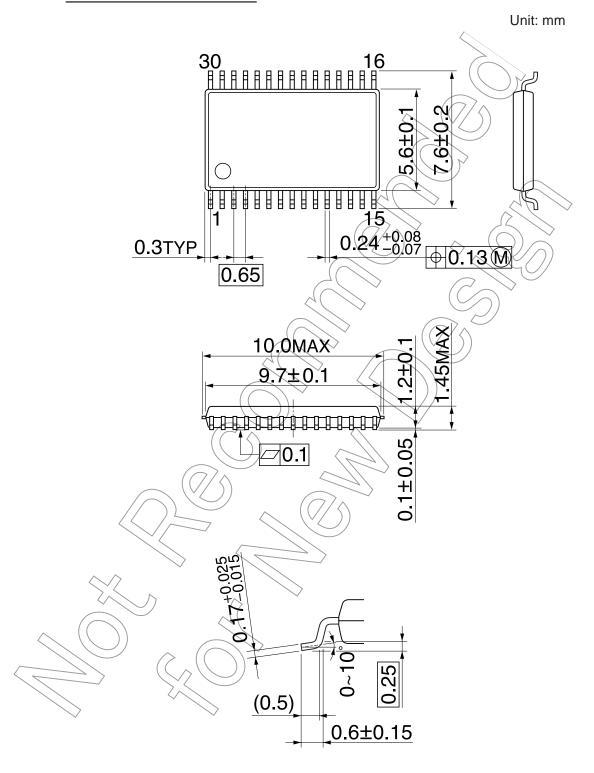



#### RESTRICTIONS ON PRODUCT USE

- Toshiba Corporation, and its subsidiaries and affiliates (collectively "TOSHIBA"), reserve the right to make changes to the information in this document, and related hardware, software and systems (collectively "Product") without notice.
- This document and any information herein may not be reproduced without prior written permission from TOSHIBA. Even with TOSHIBA's written permission, reproduction is permissible only if reproduction is without alteration/omission.
- Though TOSHIBA works continually to improve Product's quality and reliability, Product can malfunction or fail. Customers are responsible for complying with safety standards and for providing adequate designs and safeguards for their hardware, software and systems which minimize risk and avoid situations in which a malfunction or failure of Product could cause loss of human life, bodily injury or damage to property, including data loss or corruption. Before customers use the Product, create designs including the Product, or incorporate the Product into their own applications, customers must also refer to and comply with (a) the latest versions of all relevant TOSHIBA information, including without limitation, this document, the specifications, the data sheets and application notes for Product and the precautions and conditions set forth in the "TOSHIBA Semiconductor Reliability Handbook" and (b) the instructions for the application that Product will be used with or for. Customers are solely responsible for all aspects of their own product design or applications, including but not limited to (a) determining the appropriateness of the use of this Product in such design or applications; (b) evaluating and determining the applicability of any information contained in this document, or in charts, diagrams, programs, algorithms, sample application circuits, or any other referenced documents; and (c) validating all operating parameters for such designs and applications. TOSHIBA ASSUMES NO LIABILITY FOR CUSTOMERS' PRODUCT DESIGN OR APPLICATIONS.
- Product is intended for use in general electronics applications (e.g., computers, personal equipment, office equipment, measuring equipment, industrial robots and home electronics appliances) or for specific applications as expressly stated in this document. Product is neither intended nor warranted for use in equipment or systems that require extraordinarily high levels of quality and/or reliability and/or a malfunction or failure of which may cause loss of human life, bodily injury, serious property damage or serious public impact ("Unintended Use"). Unintended Use includes, without limitation, equipment used in nuclear facilities, equipment used in the aerospace industry, medical equipment, equipment used for automobiles, trains, ships and other transportation, traffic signaling equipment, equipment used to control combustions or explosions, safety devices, elevators and escalators, devices related to electric power, and equipment used in finance-related fields. Do not use Product for Unintended Use unless specifically permitted in this document.
- Do not disassemble, analyze, reverse-engineer, alter, modify, translate or copy Product, whether in whole or in part.
- Product shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any
  applicable laws or regulations.
- The information contained herein is presented only as guidance for Product use. No responsibility is assumed by TOSHIBA for any infringement of patents or any other intellectual property rights of third parties that may result from the use of Product. No license to any intellectual property right is granted by this document, whether express or implied; by estoppel or otherwise.
- ABSENT A WRITTEN SIGNED AGREEMENT, EXCEPT AS PROVIDED IN THE RELEVANT TERMS AND CONDITIONS OF SALE
  FOR PRODUCT, AND TO THE MAXIMUM EXTENT ALLOWABLE BY LAW, TOSHIBA (1) ASSUMES NO LIABILITY
  WHATSOEVER, INCLUDING WITHOUT LIMITATION, INDIRECT, CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OR
  LOSS, INCLUDING WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF OPPORTUNITIES, BUSINESS INTERRUPTION AND
  LOSS OF DATA, AND (2) DISCLAIMS ANY AND ALL EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS RELATED TO
  SALE, USE OF PRODUCT, OR INFORMATION, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY, FITNESS
  FOR A PARTICULAR PURPOSE, ACCURACY OF INFORMATION, OR NONINFRINGEMENT.
- Do not use or otherwise make available Product or related software or technology for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of nuclear, chemical, or biological weapons or missile technology products (mass destruction weapons). Product and related software and technology may be controlled under the Japanese Foreign Exchange and Foreign Trace Law and the U.S. Export Administration Regulations. Export and re-export of Product or related software or technology are strictly prohibited except in compliance with all applicable export laws and regulations.
- Please contact your TOSHIBA sales representative for details as to environmental matters such as the RoHS compatibility of Product.
   Please use Product in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. TOSHIBA assumes no liability for damages or losses occurring as a result of noncompliance with applicable laws and regulations.

