




#### **MECHANICAL DATA**

Dimensions in mm (inches)

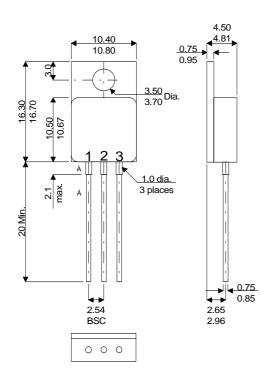

### TO257 Flexilead - Metal Package

Pin 1 - Gate

Pin 2 - Drain

Pin 3 - Source

# **N-CHANNEL POWER MOSFET** FOR HI-REL **APPLICATIONS**

V<sub>DS</sub> 100V I<sub>D(max)</sub> 18A R<sub>DS(on)</sub>  $.044\Omega$ 

#### **FEATURES**

- HERMETICALLY SEALED TO257 METAL **PACKAGE**
- SIMPLE DRIVE REQUIREMENTS
- LIGHTWEIGHT
- SCREENING OPTIONS AVAILABLE
- ALL LEADS ISOLATED FROM CASE

## **ABSOLUTE MAXIMUM RATINGS** (T<sub>case</sub> = 25°C unless otherwise stated)


$\overline{V_{GS}}$	Gate – Source Voltage	±20V			
I <sub>D</sub>	Continuous Drain Current (V <sub>GS</sub> = 0 , T <sub>case</sub> = 25°C)	18A			
I <sub>D</sub>	Continuous Drain Current (V <sub>GS</sub> = 0 , T <sub>case</sub> = 100°C)	18A			
$I_{DM}$	Pulsed Drain Current <sup>1</sup>	72A			
$P_{D}$	Power Dissipation @ T <sub>case</sub> = 25°C	100W			
	Linear Derating Factor	0.8W/°C			
T <sub>J</sub> , T <sub>stg</sub>	Operating and Storage Temperature Range	−55 to 150°C			
TL	Package Mounting Surface Temperature (for 5 sec)	300°C			
$R_{ heta JC}$	Thermal Resistance Junction to Case	1.25°C/W max.			

### **Notes**

1) Pulse Test: Pulse Width  $\leq$  300ms,  $\delta \leq$  2%

Semelab PIc reserves the right to change test conditions, parameter limits and package dimensions without notice. Information furnished by Semelab is believed to be both accurate and reliable at the time of going to press. However Semelab assumes no responsibility for any errors or omissions discovered in its use. Semelab encourages customers to verify that datasheets are current before placing orders.

Website: http://www.semelab.co.uk

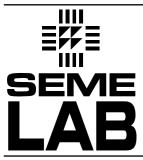

## **SML1310IGF**

# **ELECTRICAL CHARACTERISTICS** (T<sub>amb</sub> = 25°C unless otherwise stated)

#### STATIC ELECTRICAL RATINGS

	Parameter	Test Conditions		Min.	Тур.	Max.	Unit		
BV <sub>DSS</sub>	Drain – Source Breakdown Voltage	$V_{GS} = 0$	$I_D = 250 \mu A$	100			V		
V <sub>GS(th)</sub>	Gate Threshold Voltage	$V_{DS} = V_{GS}$	I <sub>D</sub> = 250μA	2.0		4.0			
I <sub>GSS</sub>	Gate-Body Leakage Forward	$V_{GS} \le 20V$				100	nA		
I <sub>GSS</sub>	Gate-Body Leakage Reverse	V <sub>GS</sub> = -20V				-100			
	Zero Gate Voltage Drain Current	$V_{DS} = 100V, V_{GS} = 0V$				25			
I <sub>DSS</sub>		$V_{DS} = 80V, V_{GS} = 0$			250	μΑ			
			T <sub>C</sub> = 125°C			250			
R <sub>DS(on)</sub>	Static Drain - Source On-State	10)/	I <sub>D</sub> = 18A			0.44			
	Resistance1	$V_{GS} = 10V$				0.44	4 Ω		
	DYNAMIC CHARACTERISTICS								
G <sub>fs</sub>	Forward Transductance <sup>1</sup>	V <sub>DS</sub> = 25V	I <sub>D</sub> = 18A	14			S		
C <sub>iss</sub>	Input Capacitance	V <sub>GS</sub> = 0V			1872				
C <sub>oss</sub>	Output Capacitance	V <sub>DS</sub> = 25V	4	463		pF			
C <sub>rss</sub>	Reverse Transfer Capacitance	F = 1MHz			234				
t <sub>d(on)</sub>	Turn-On Delay Time				19				
t <sub>r</sub>	Rise Time	V <sub>DD</sub> = 50V	I <sub>D</sub> = 18A		85		- ns		
t <sub>d(off)</sub>	Turn-Off Delay Time	$RG = 3.6\Omega$	V <sub>GS</sub> =10V		65				
t <sub>f</sub>	Fall Time				54				
	SOURCE - DRAIN DIODE CHARACT	TERISTICS							
I <sub>S</sub>	Continuous Source Current	Modified MOSPOWER				18			
	(Body Diode)	smbol showing				10			
I <sub>SM</sub>	Source Current1 (Body Diode)	the integral P-N			72		A		
		Junction rectifier	s			12			
V <sub>SD</sub>	Diode Forward Voltage	$I_S = 18A , V_{GS} = 0V$	T <sub>C</sub> = 25°C			1.3	V		
t <sub>rr</sub>	Reverse Recovery Time	$T_J = 25^{\circ}C$	I <sub>F</sub> =18A			270	ns		
Qrr	Reverse Recovery Charge	di / dt = 100A/μs				1.8	μс		

#### **Notes**

1) Pulse Test: Pulse Width  $\leq$  300ms,  $\delta \leq$  2%

Semelab PIc reserves the right to change test conditions, parameter limits and package dimensions without notice. Information furnished by Semelab is believed to be both accurate and reliable at the time of going to press. However Semelab assumes no responsibility for any errors or omissions discovered in its use. Semelab encourages customers to verify that datasheets are current before placing orders.

**Semelab plc.** Telephone +44(0)1455 556565. Fax +44(0)1455 552612.

E-mail: sales@semelab.co.uk

Website: http://www.semelab.co.uk

Document Number 6027

Issue 1