Xtra Long Life 10 million cycles

USB/Ethernet RF Switch Matrix RC-2SP6T-A12

50 Ω DC to 12 GHz

The Big Deal

Applications

Automated Test equipment
Controlling RF signal paths

• R&D

- Dual mechanical SP6T switch box
- •High reliability, 10 million switch cycles
- •20W power rating (cold switching)
- •High isolation, 90 dB typ



Case Style: PF2018

Model No.	Description	Qty.
RC-2SP6T-A12	USB/Ethernet RF Switch	1
Included Access	ories	
AC/DC-24-3W1	AC/DC 24V Adapter	1
CBL-3W1-XX	AC Power Cord (see Ordering Information)	1
USB-CBL-AB-3+	2.7 ft USB cable	1

RoHS Compliant

See our web site for RoHS Compliance methodologies and qualifications

Product Overview

Mini-Circuits' RC-2SP6T-A12 is a general purpose RF switch matrix controlled via either USB or Ethernet-TCP/IP (supports HTTP and Telnet protocols). The model contains two electromechanical SP6T, absorptive fail-safe RF switches constructed in break-before-make configuration and powered by +24VDC, with switching time of 25 ms typical. The RF switches operate over a wide frequency band from DC to 12 GHz, have low insertion loss (0.2 dB typical) and high isolation (90 dB typical), making the switch matrix perfectly suitable for a wide variety of RF applications.

The RC-2SP6T-A12 is constructed in a compact, rugged metal case (5.5" x 6.0" x 2.75") with 14 SMA (F) connectors (COM, and ports 1 to 6 for each switch), USB type B port, standard RJ45 network socket and DC power input. Full software support is provided and can be downloaded from our website any time at https://www.minicircuits.com/softwaredownload/rfswitchcontroller.html. The package includes our user-friendly GUI application for Windows and a full API with programming instructions for Windows and Linux environments (both 32-bit and 64-bit systems). Also included is a 2.7 ft USB cable and AC/DC power adapter. Longer USB cables, Ethernet cables and a mounting bracket are available as optional accessories.

Key Features

Feature	Advantages
Ethernet-TCP/IP- HTTP and Telnet Protocols (Supports DHCP and Static IP)	The RC-2SP6T-A12 switch matrix can be controlled from any Windows [®] , Mac [®] , or Linux [®] computer, or even a mobile device with a network connection and Ethernet-TCP/IP (HTTP or Telnet protocols) support. Using a VPN would allow remote control from anywhere in the world.
USB HID (Human Interface Device)	User may also control the switch matrix via USB connection. Plug-and-Play, no driver required. Compatible with Windows [®] or Linux [®] operating systems using 32 and 64 bit architecture.
RF SP6T absorptive electromechanical switches	Wideband (DC to 12 GHz) with low insertion loss (0.2 dB typ.), very high isolation (90 dB typ.), and high power rating (20W cold switching).
Switch Cycle Counters	Allows user to monitor the exact usage and plan test requirements accordingly.
Break-before-make configuration	Prevents the momentary connection of the old and new signal paths and reduces transient phenomena.

<u>Trademarks:</u> Windows is a registered trademark of Microsoft Corporation in the United States and other countries. Linux is a registered trademark of Linus Torvalds. Pentium is a registered trademark of Intel Corporation. Mac is a registered trademark of Apple Corporation in the United States and other countries. Neither Mini-Circuits nor the Mini-Circuits RC-2SP6T-A18 are affiliated with or endorsed by the owners of the above referenced trademarks Mini-Circuits and the Mini-Circuits logo are registered trademarks of Scientific Components Corporation.

Patents: protected by US Patents 5,272,458; 6,414,577; 6,650,210; 7,633,361 and 7,843,289



Rev. C M166296 RC-2SP6T-A12 RAV 180214 Page 1 of 7

www.minicircuits.com P.O. Box 35166, Brooklyn, NY 11235-0003 (718) 934-4500 sales@minicircuits.com

USB/Ethernet RF Switch Matrix

RC-2SP6T-A12

Electrical Specifications

Parameter	Port	Conditions	Min.	Тур.	Max.	Units
Frequency	All RF Ports	_	DC		12	GHz
Power On Sequence: Connect	the 24V power, follo	wed by the USB control and/or Ether	net cable befor	e turning on the	e Switch Matri	x.
		DC to 1 GHz	-	0.10	0.15	
RF Insertion Loss (per switch)		1 GHz to 6 GHz	-	0.15	0.25	dB
RF Insenion Loss (per switch)		6 GHz to 8 GHz	-	0.20	0.30	uв
		8 GHz to 12 GHz	-	0.25	0.35	
		DC to 1 GHz	-	1.05	1.10	
RF VSWR ¹		1 GHz to 6 GHz	-	1.10	1.25	:1
RF VSVVR		6 GHz to 8 GHz	-	1.20	1.35	.1
		8 GHz to 12 GHz	-	1.20	1.35	
		DC to 1 GHz	85	100	-	
RF Isolation (per switch)		1 GHz to 6 GHz	80	95	-	dB
RF Isolation (per switch)		6 GHz to 8 GHz	80	90	-	
		8 GHz to 12 GHz	80	90	-	
Switching Time		-	-	25	-	ms
RF Power (cold switching) ^{2,3}			-	-	20	W
Data d Malta an	24V _{DC} IN	provided via external power adapter	23	24	25	v
Rated Voltage	USB Port	_	-	5	-	v
	0.41/ IN	COM -> 1,2,3,4,5 or 6 state	_	160	230	
Data d Oumant	$24V_{DC}$ IN	RF Switch @ Disconnect state	-	60	90	
Rated Current		COM -> 1,2,3,4,5 or 6 state	-	10	20	— mA
	USB Port	RF Switch @ Disconnect state	-	10	20	
Life (ner ewitch)		@ 100 mW (hot switching) ⁴	10	_	_	million switching
Life (per switch)		@ 1 W (hot switching) ⁴	-	1	-	cycles

¹ For COM port only when connected to port 1,2,3, 4, 5 or 6. For ports 1,2,3, 4, 5 or 6 only when connected to COM port.
 ² Power handling is specified with RF applied to the COM port and external load connected to 1,2,3, 4, 5 or 6 ports.
 ³ Cold switching describes switch operation where there is no significant user signal present at the moment the switch contacts open or close.

^{4.} Exceeding these limits will result in reduced life

Absolute Maximum Ratings⁵

Operating Temperature	0°C to 40°C
Storage Temperature	-15°C to 85°C
DC Voltage max.	26V
RF power (through path)	20W
RF power (into internal termination)	1W

⁵ Permanent damage may occur if any of these limits are exceeded.


Connections

24V _{DC} IN	(2.1 mm center positive DC Socket)
RF Switch A (All ports)	(SMA female)
RF Switch B (All ports)	(SMA female)
USB	(USB type B receptacle)
Network (Ethernet/LAN)	(RJ45 socket)



USB/Ethernet RF Switch Matrix

Outline Drawing (PF2018)

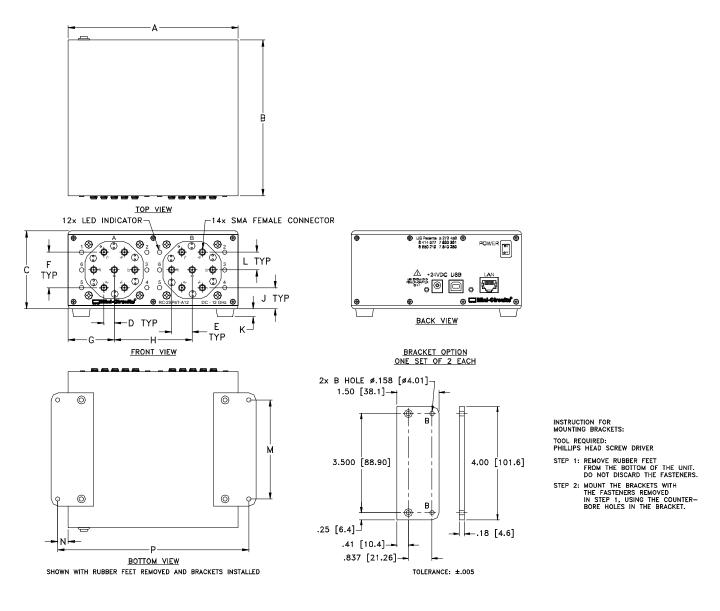


Outline Dimensions (inch)


А	В	С	D	Е	F	G	н	J	к	L	М	Ν	Р	wt
6.00	5.50	2.75	0.36	0.73	1.26	1.63	2.75	0.75	0.28	0.63	3.50	0.375	6.72	grams
152.40	139.70	69.85	9.14	18.54	32.00	41.40	69.85	19.05	7.11	16.00	88.90	9.53	170.69	1350

RC-2SP6T-A12

Main Software Control Screen: Independent control of two SP6T switches

- Power handling is specified with RF applied to the COM port and output load connected to 1,2,3,4,5 or 6 of the respective switch.
- When connecting a coaxial semi flex cable, tighten connectors alternately using an 8in/lb torque wrench to insure proper contact at each end.

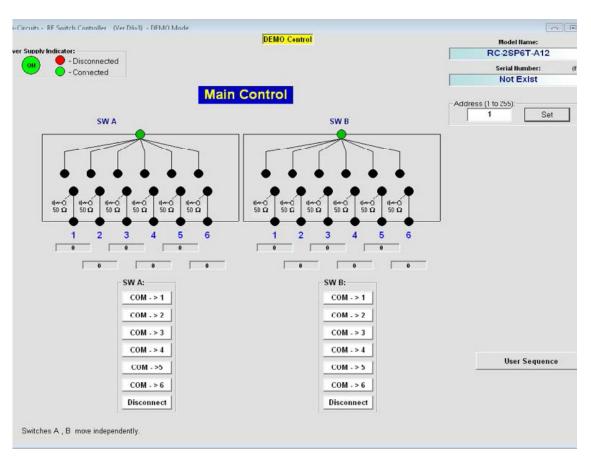

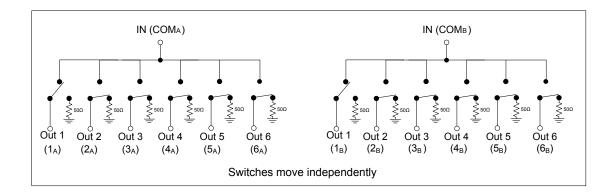




User Switching Sequence - for setting an automated switch routine

- Power handling is specified with RF applied to the COM port and output load connected to 1,2,3,4,5 or 6 of the respective switch.
- When connecting a coaxial semi flex cable, tighten connectors alternately using an 8in/lb torque wrench to insure proper contact at each end.

		er (Ver D7) - DEMO Mode				
		DEMO Control				
	Power Supply Indicator:		USER SWITCH	ING SEO	UENCE	
8		Disconnected M	odel llame:	10 020	Serial Number:	
Help		Jisconnected	2SP6T-A12		Not Exist	_
			LOI OT ALL		NOT EXIST	
Set Name	e:					
Step	SMA	SAVE	chrva	sli (inSec) 8	Exec Program	
Step 1	COM->1	COM->3		70		
Step 2	COM+>2	COM->4		25		
Step 3	DISCONNECT	DISCONNECT		50D		
<u>오</u> ლ 4	COM->3	CON->5		30		
Step 5	COM->4	COM->6		50		
Step 6	DISCONNECT	DISCONNECT		42		
	444	nant Pomano				
Run Secre		nsert Remove	/iew Switches			
Run Seque	ense:		/iew Switches			
Run Seque	enses init. Co	unter:	/iew Switches			
	enses Init: Co		/iew Switches			
Count Li	enses Init: Co		/iew Switches			
Count Li	ense: Init: Ca Inits(min): Ela	unter: 9 ipsed (min): 0,13 B	ack to Main			
Count Li	ense: Init: Ca Inite(Inin): Eka	unter: 9 ipsed (min): 0,13 B			Check this	bo
Count Li	ense: Init: Ca Inits(min): Ela	unter: 9 ipsed (min): 0,13 B	ack to Main		Check this	
Count Li	ense: Init: Ca Inits(min): Ela	unter: 9 ipsed (min): 0,13 B	ack to Main		Check this presentatio	
Count Li	ense: Init: Ca Inits(min): Ela	unter: 9 ipsed (min): 0,13 B	ack to Main			on

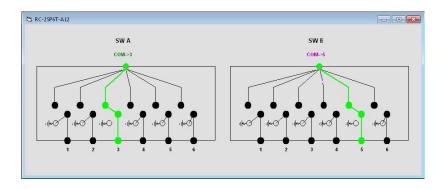



Software & Documentation Download:

• Mini-Circuits' full software and support package including user guide, Windows GUI, DLL files, programming manual and examples can be downloaded free of charge from:

https://www.minicircuits.com/softwaredownload/rfswitchcontroller.html

Please contact <u>testsolutions@minicircuits.com</u> for support.

Minimum System Requirements

Parameter	Requirements				
Interface	USB HID or HTTP Get/Post or Telnet protocols				
	GUI:	Windows 32 & 64 bit systems from Windows 98 up to Windows 10			
	API DLL (USB)	Windows 32 & 64 bit systems with ActiveX or .Net support from Windows 98 up to Windows 10			
System requirements	USB interrupt API	Linux, Windows systems from Windows 98 up to Windows 10			
	Telnet & HTTP	Any Windows, Mac, or Linux computer with a network port and Ethernet-TCP/IP (HTTP or Telnet protocols) support			
Hardware	Pentium [®] II or higher				

Graphical User Interface (GUI) for Windows Key Features:

- Set each switch manually
- · Set timed sequence of switching states
- · Configure switch address and upgrade Firmware

Mini-Circuits - RF Switch Controller (Ver E0)	- 🗆 X
Run Program - USB Control:	Run Program - Ethernet Control:	Run Program in Demo Mode
USB	Device Ethernet Prameters: IP Address: Password:	Select Model: RC-2SP6T-A18
	Use HTTP Use Telnet (port 23)	Start Demo Cancel

Steps to start RC-2SP6T-A18 GUI via USB

- Click on USB button.
- If more than one unit is connected select S/N from list and click OK.
- Start working.

Application Programming Interface (API) Windows Support:

- API DLL files exposing the full switch matrix functionality.
 - · ActiveX COM DLL file for creation of 32-bit programs
 - .Net library DLL file for creation of 32 / 64-bit programs
- HTTP Get/Post and Telnet protocols use SCPI commands to provide full control.
- Supported by most common programming environments (refer to application note <u>AN-49-001</u> for summary of tested environments)


Linux Support:

• Full switch matrix control in a Linux environment is achieved by way of USB interrupt commands. See programming manual at https://www.minicircuits.com/softwaredownload/Prog_Manual-2-Switch.pdf for details

Steps to start RC-2SP6T-A18 GUI via Ethernet

- Click on search icon.
- Select unit from list of IP addresses and click select
- The selected IP will appear in the IP Address field.
- Select communication protocol (Telnet or HTTP)
- Click on Start and begin working.

USB/Ethernet RF Switch Matrix

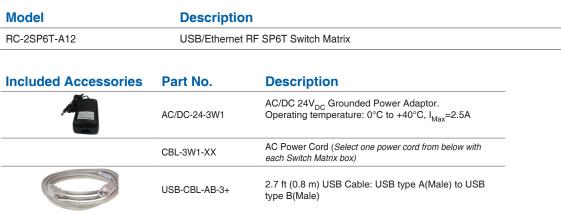

Ordering, Pricing & Availability Information see our web site

AC Power Cords ⁶	Part No.	Description
	CBL-3W1-US	Power Cord for United States
	CBL-3W1-EU	Power Cord for Europe
4	CBL-3W1-UK	Power Cord for United Kingdom
	CBL-3W1-AU	Power Cord for Australia and China
-	CBL-3W1-IL	Power Cord for Israel

6. Power cords for other countries are also available, if you need a power cord for a country not listed in the table please contact testsolutions@minicircuits.com.

Optional Accessories	Description
USB-CBL-3+ (spare)	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-7+	6.8 ft (2.1 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-11+	11 ft (3.4 m) USB Cable: USB type A(Male) to USB type B(Male)
CBL-RJ45-MM-5+	5 ft (1.5 m) Ethernet cable: RJ45(Male) to RJ45(Male) Cat 5E cable
BKT-272-08+	Bracket (One set of 2 each)

Additional Notes

- A. Performance and quality attributes and conditions not expressly stated in this specification document are intended to be excluded and do not form a part of this specification document.
- B. Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance criteria and measurement instructions.
- C. The parts covered by this specification document are subject to Mini-Circuits standard limited warranty and terms and conditions (collectively, "Standard Terms"); Purchasers of this part are entitled to the rights and benefits contained therein. For a full statement of the Standard Terms and the exclusive rights and remedies thereunder, please visit Mini-Circuits' website at <u>www.minicircuits.com/MCLStore/terms.jsp</u>

Mini-Circuits®

